



# Lenovo Yoga 910-13IKB Fingerprint Reader Replacement

This guide describes how to replace the fingerprint reader for the Lenovo Yoga 910-131KB.

Written By: Nikki Sorfleet




## INTRODUCTION

Follow this guide to replace the fingerprint reader in your Lenovo Yoga 910-13IKB. If you have ensured that the finger you are trying to sign in with has been properly registered and the reader is clean of any grease or debris, but the reader still fails to correctly recognize your finger, it may need to be replaced. While this replacement is one of the longer ones in terms of time for this device, it is still quick and easy to do, requiring only a JIS #00 screwdriver.

### TOOLS:

- [JIS #00 Screwdriver](#) (1)


## Step 1 — Battery

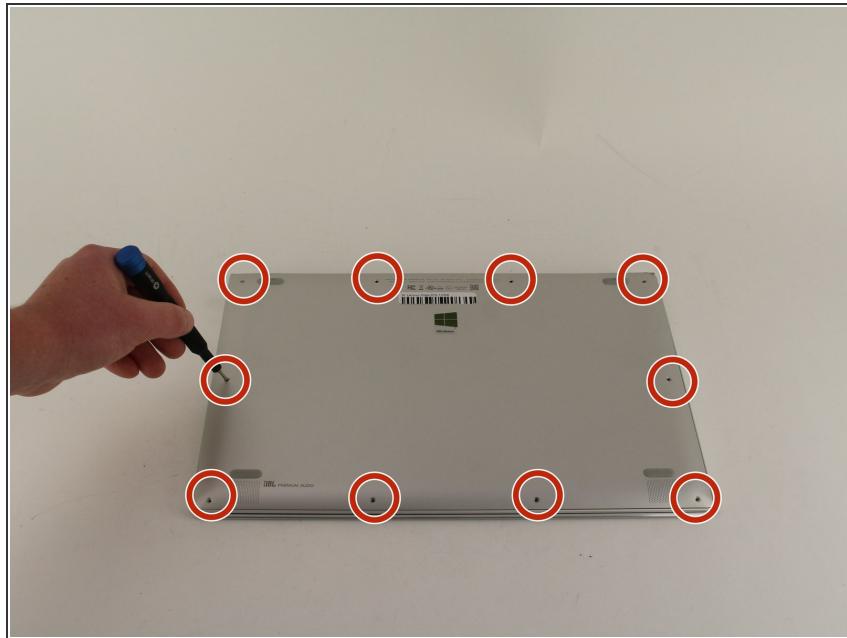

**⚠** Completely power off the laptop and disconnect it from any power sources before beginning.

- Turn the laptop over and remove the ten 3mm JIS #00 screws along the perimeter of the bottom panel.
- Remove the panel.

## Step 2

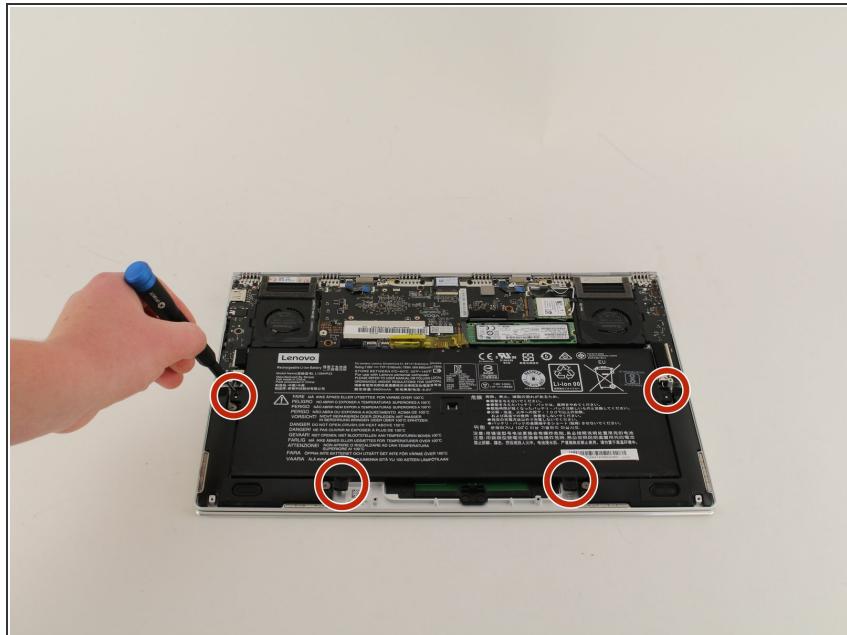


- Remove the four 3mm JIS #00 screws holding the battery in place.

## Step 3




- Disconnect the bundled cable connector that allows the battery to power the device.
- ⚠ Pull evenly on the width of the cable so that no individual wire is overly strained.
- Lift the battery out.

## Step 4 — Fingerprint Reader

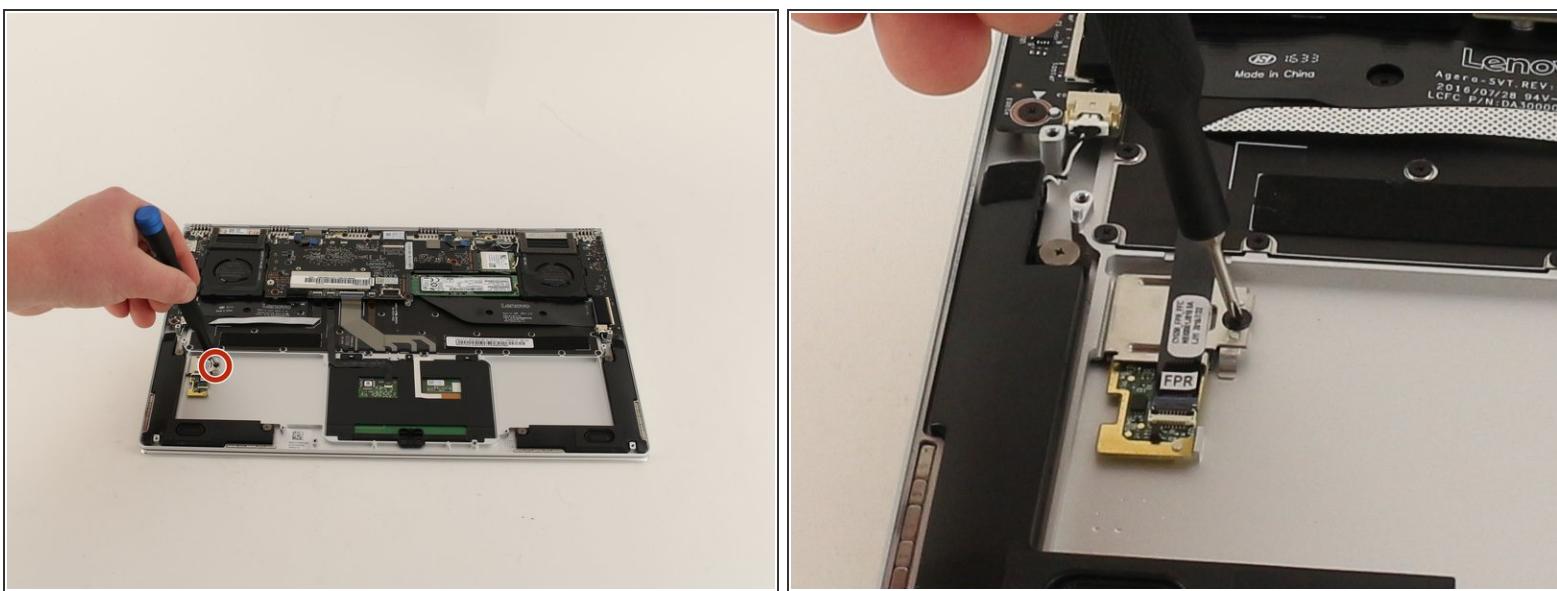


- Remove the one 3mm JIS #00 screw on the right side of the silver component.

## Step 5

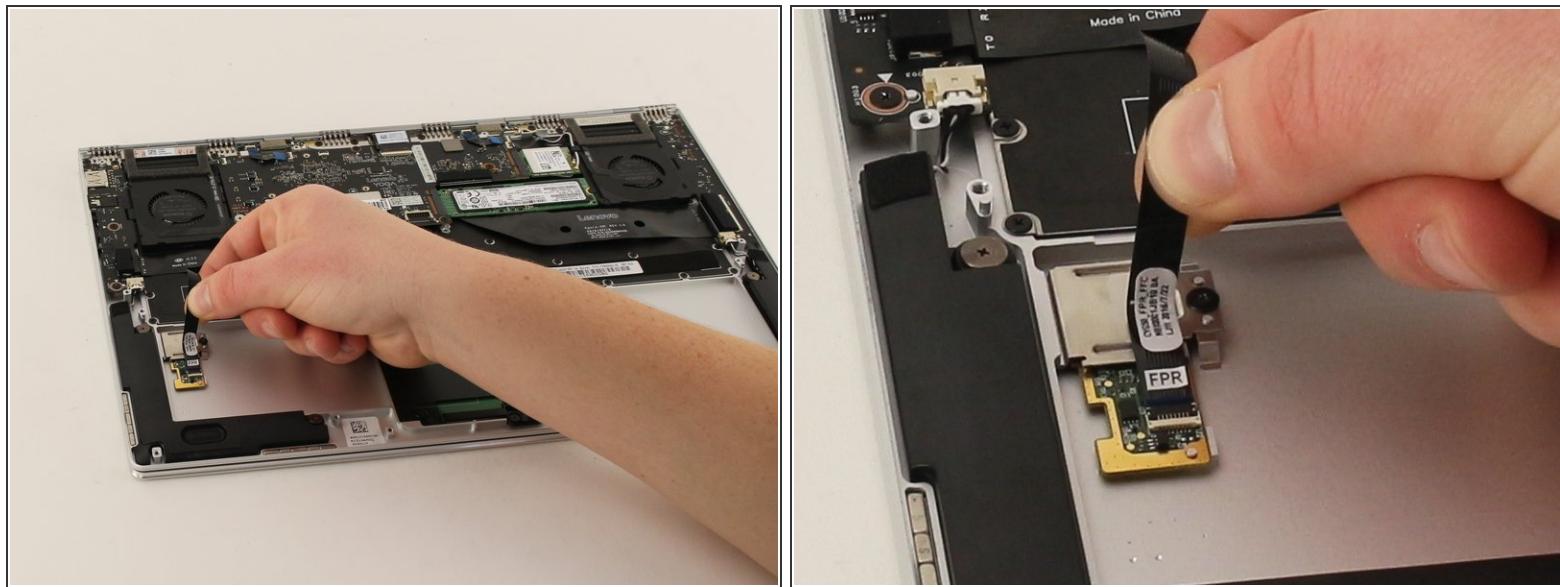

- Gently pull up on the ribbon cable to detach it from the metal housing.

## Step 6

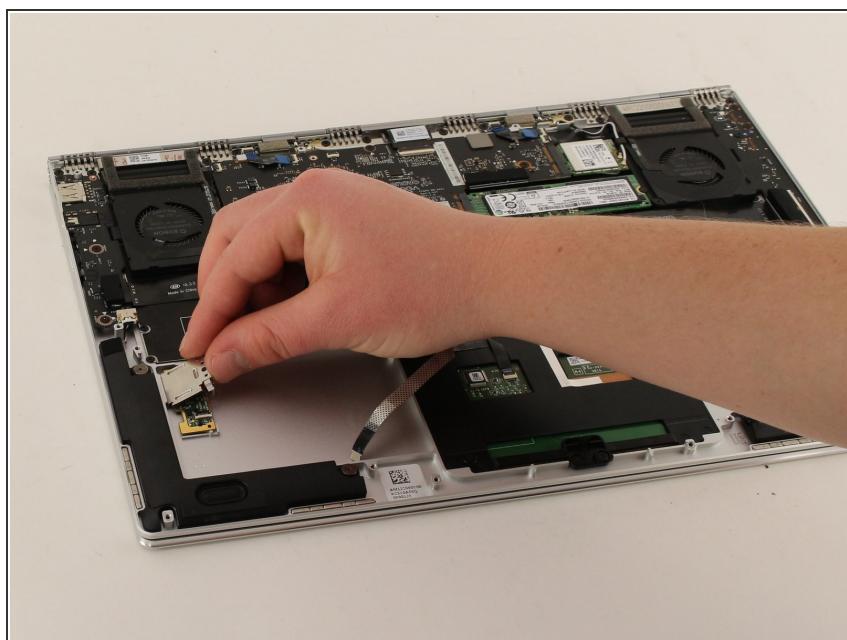

- Lift the metal housing out and set it aside. This component holds the reader in place.

**i** The left side of the component is tucked under the lip of the computer, so lift from the right side of the component.

## Step 7



- Remove the fingerprint reader from its place.

To reassemble your device, follow these instructions in reverse order.