




Lenovo Yoga 920-13IKB USB 3.0 Port Replacement

How to replace the USB 3.0 port on the Lenovo Yoga 920-13IKB.

Written By: Alyssa McCulloch

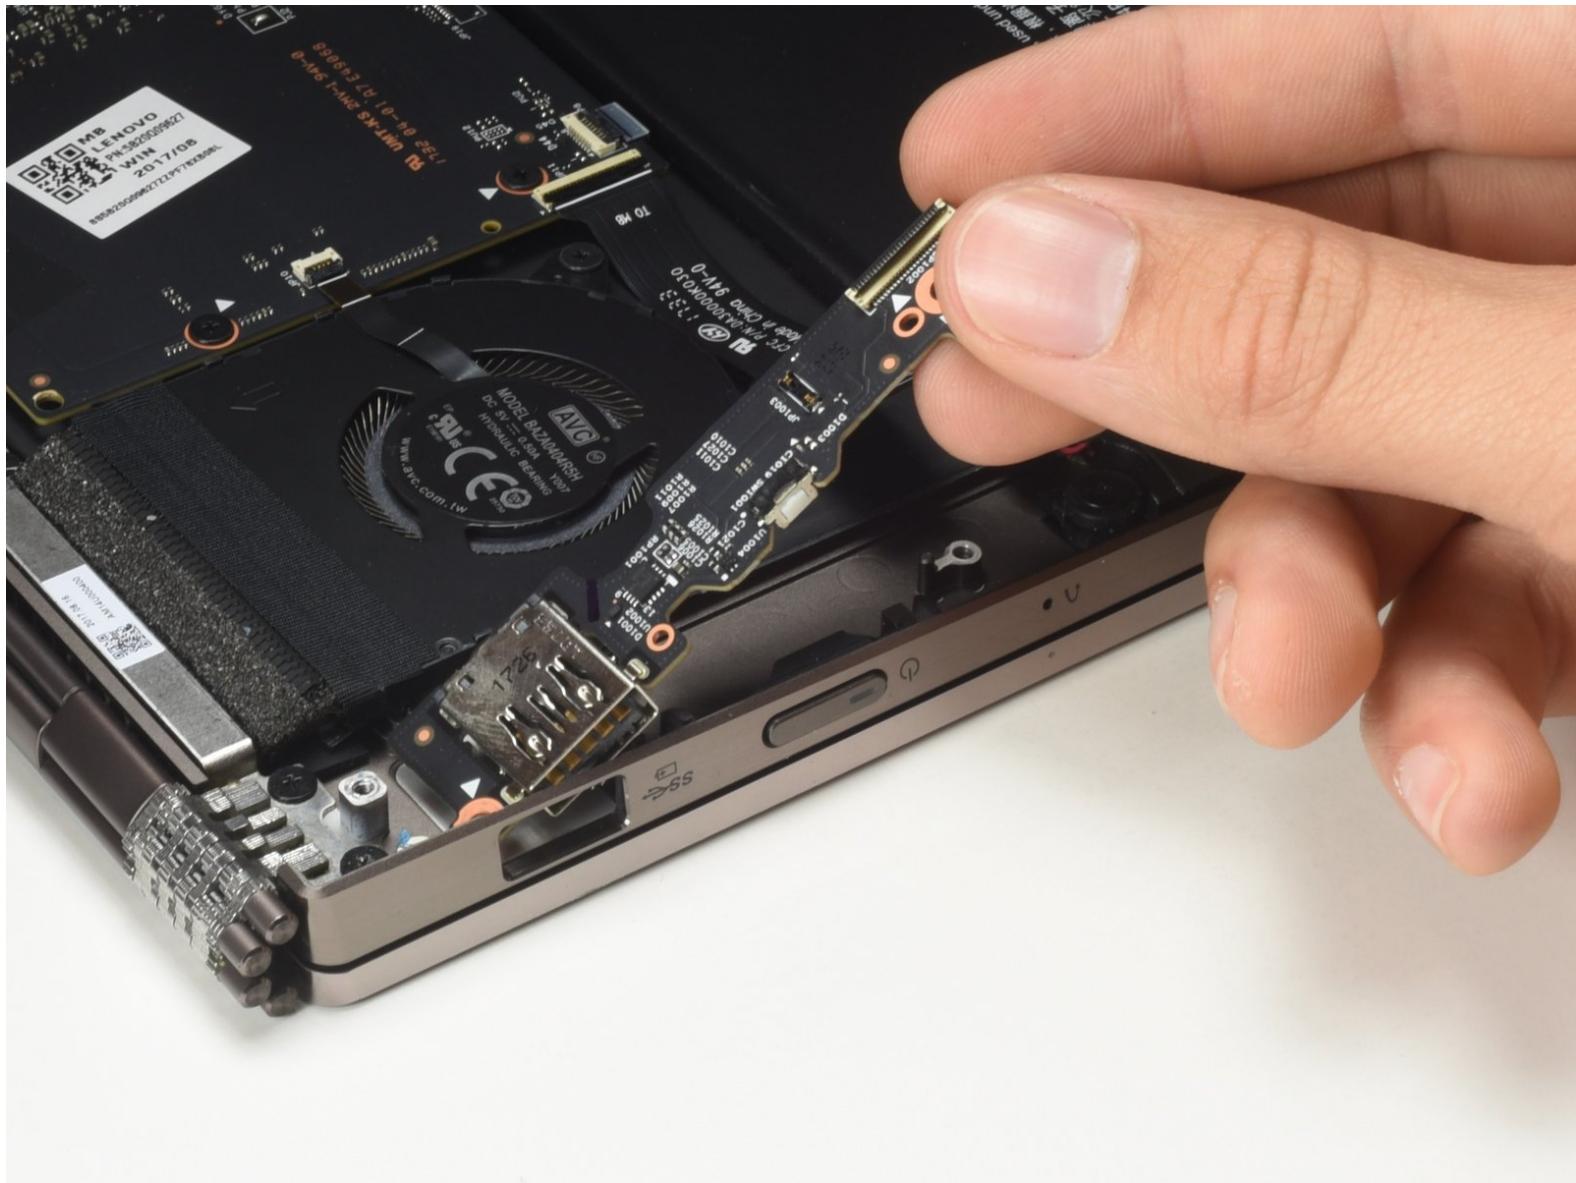

INTRODUCTION

This guide shows how to replace the USB 3.0 port on the Lenovo Yoga 920-13IKB.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

PARTS:

- [Lenovo Yoga 920-13 USB-C Board](#) (1)

Step 1 — Back Cover



ⓘ Flip the device over to access the screws on the back cover.


- Remove the ten 5mm Torx T5 screws on the back cover to loosen the back cover.

Step 2




- Slide the iFixit Opening Tool under the back cover to lift it up.
- Pull up on the cover with your hand to release the tab holding the center of the cover in place.

Step 3 — USB 3.0 Port

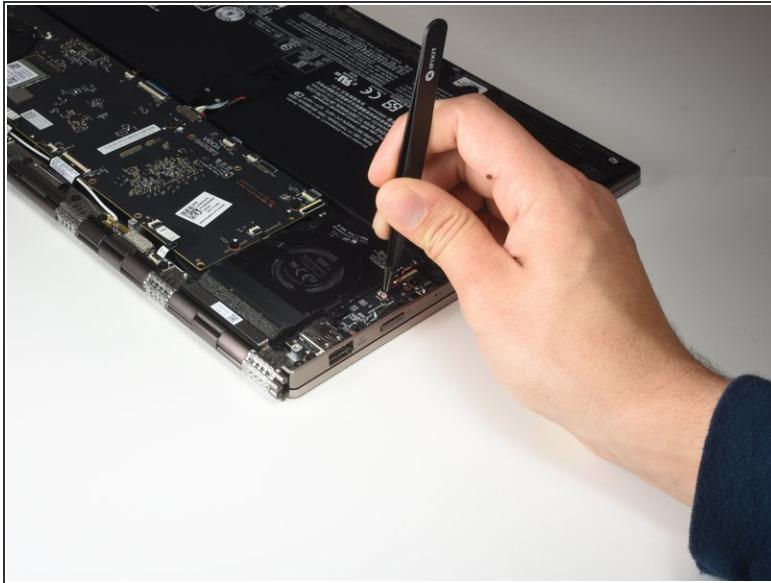

- Disconnect the red and black wire connected to the speaker using the iFixit Tweezers.

Step 4

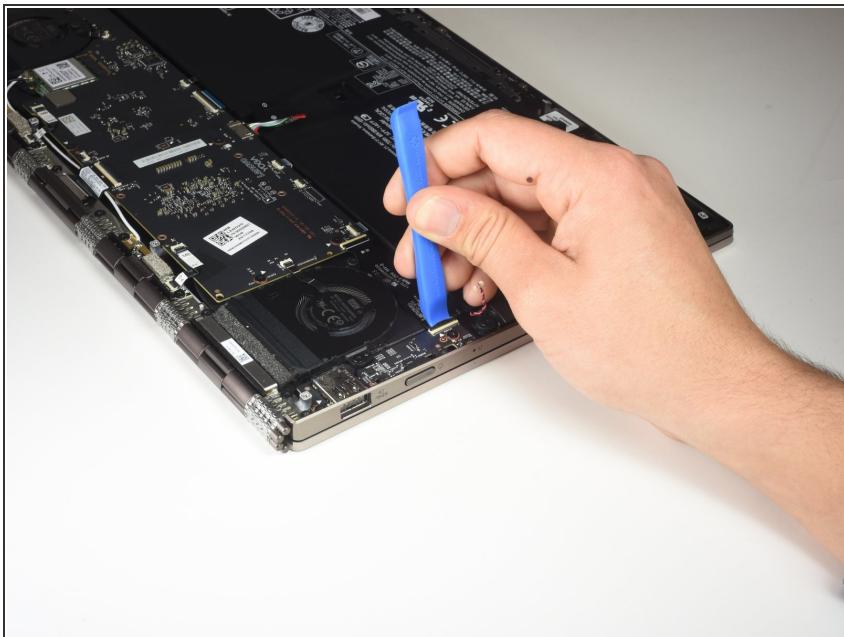


- Lift up the black tab on the flat cable connector with the iFixit Opening Tool.

Step 5




- Flip up the tab using the iFixit Tweezers to release the flat cable.

Step 6

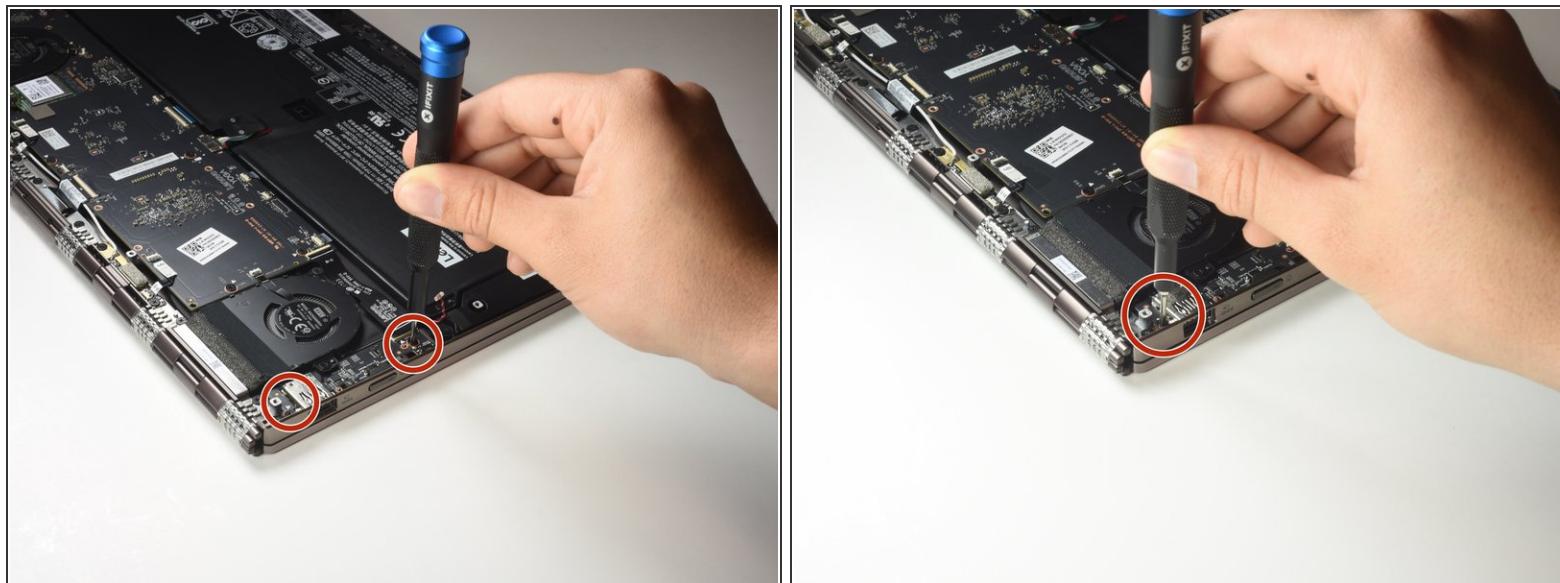

- Undo the two 3mm Phillips #00 screws to loosen the USB 3.0 board.

Step 7

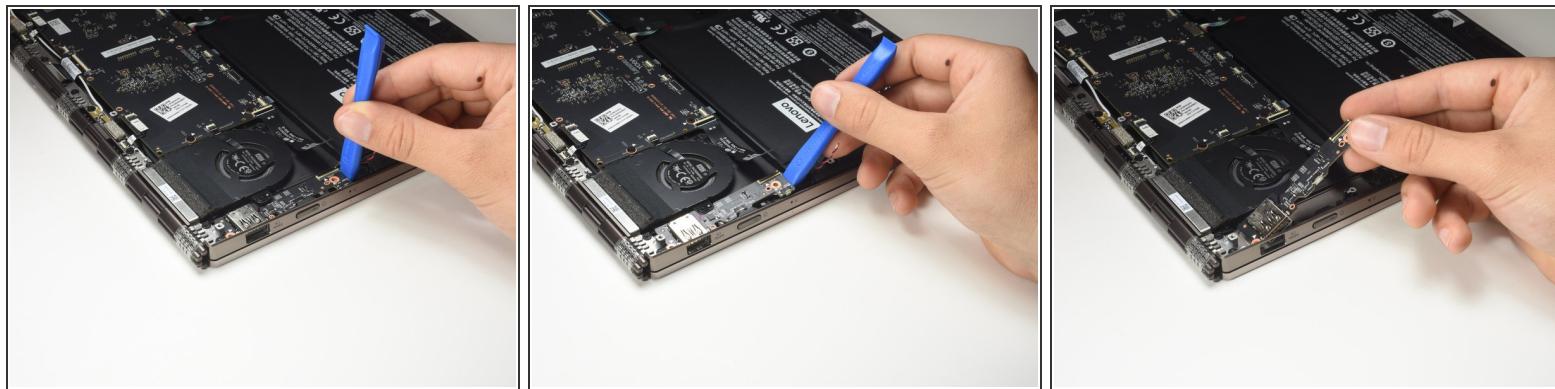

- Remove the USB 3.0 Board from the device using the iFixit Opening Tool.

To reassemble your device, follow these instructions in reverse order.