



Lenovo Yoga Tab 3 10 Back Cover Replacement

Remove the back cover to the Lenovo Tab 3.

Written By: Nathan Huang



INTRODUCTION

Before you can replace or repair anything within your Lenovo Tab 3 you need to follow this guide first.

TOOLS:

- [Tweezers \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Back Cover



- Open the built-in kickstand.

Step 2



- Remove the sticker located directly under the the built-in kickstand to reveal two 0.75 mm screws.
- Remove the microSD card slot cover. Remove any microSD card (if inserted).
- Using a Phillips head screwdriver, remove the three 0.75 mm screws.

Step 3



- Orient the device so the screen is facing you.
- Carefully insert the spudger along the seam between the screen and back cover and gently separate the back cover from the device frame.
- Continue to detach the backplate from the frame by moving the spudger around the perimeter.

(i) Some force will be required to detach the small plastic braces securing the backplate to the device.

To reassemble your device, follow these instructions in reverse order.