


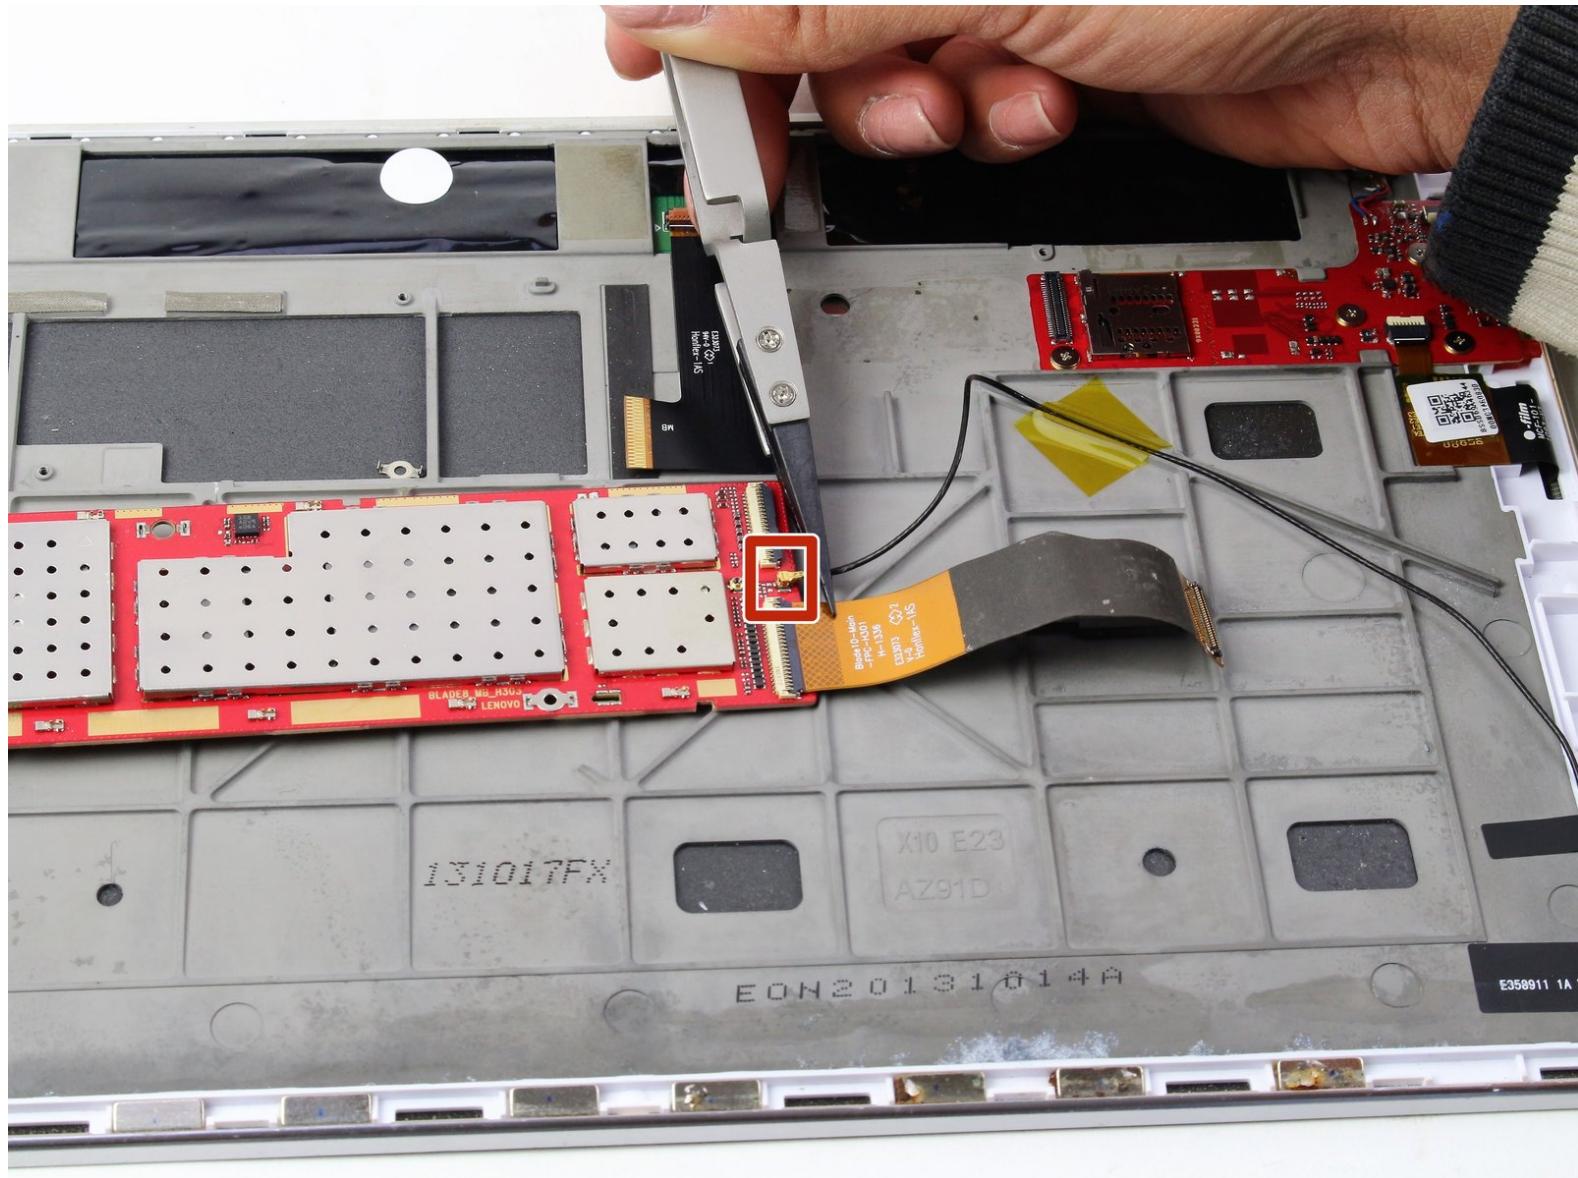

Lenovo Yoga Tablet 10 Wi-Fi Module Replacement

This guide will show you how to replace the Wi-Fi module on your Lenovo Yoga Tablet 10.

Written By: Rachel Potratz



 **TOOLS:**


- [Phillips #000 Screwdriver \(1\)](#)
- [Precision Tweezers Set \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Back Cover




- Remove the two Phillips #000 screws.
 - These screws are located behind the stand for the device.
 - Our device did not include these screws.

Step 2

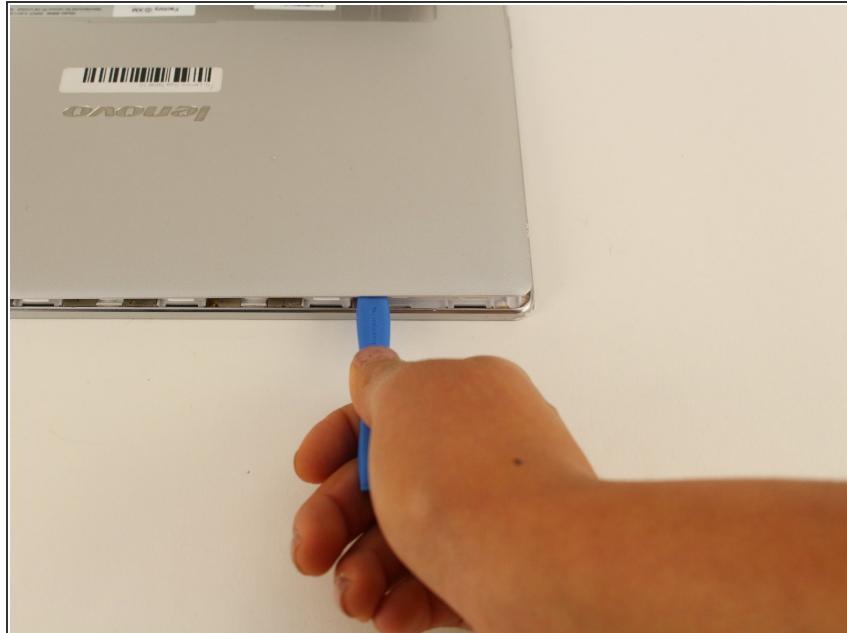



- Use a plastic iFixit opening tool to pry the edges of the back case loose by placing it in between the edge of the cover and the screen.
- ⚠ Do not immediately attempt to remove the back of the case without attempting Step three, or you risk snapping the back cover.

Step 3

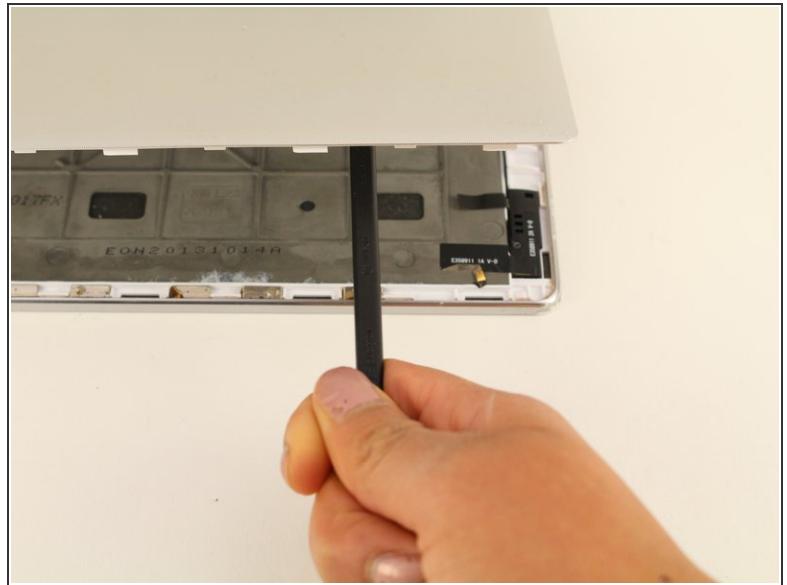




- Use the spudger to reach into the center of the device and pry off the back case by giving it a light force upwards.

Step 4 — Back Camera

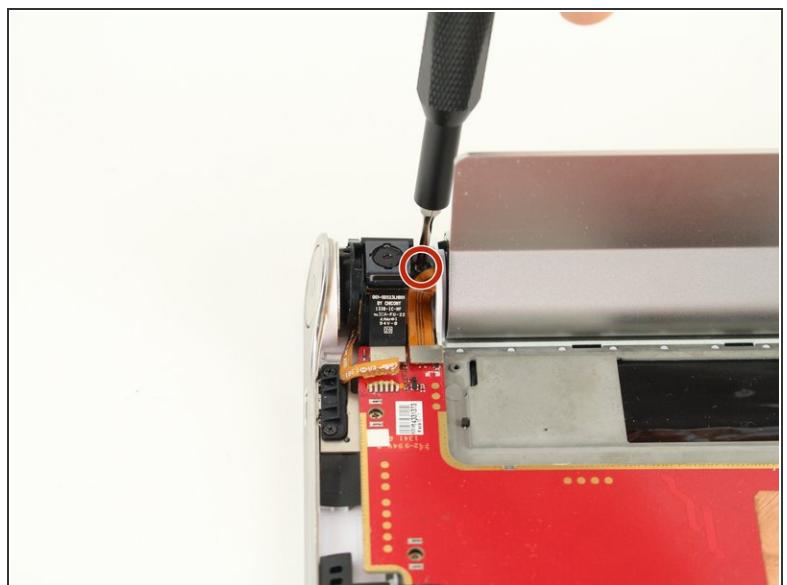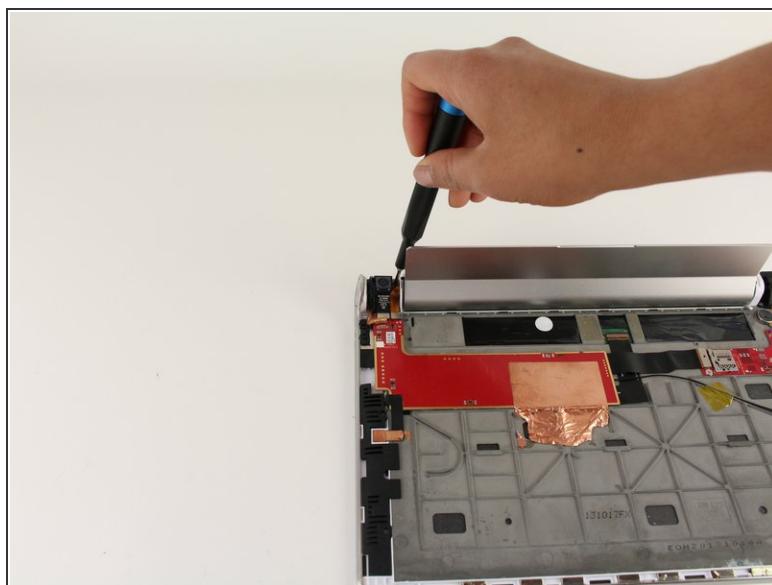


- Remove one 5mm screw using the Phillips #00 Screwdriver.

Step 5

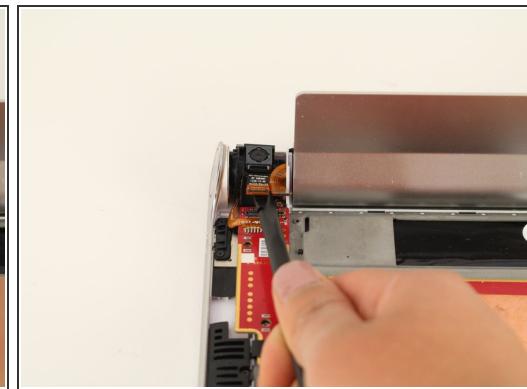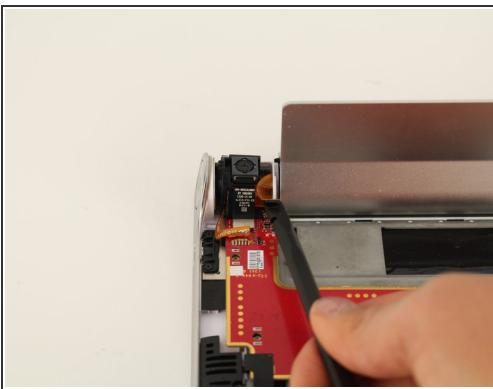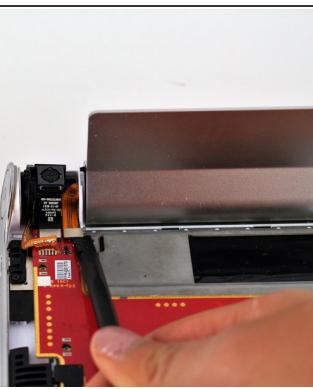


- Use the spudger to disconnect the camera and battery from the printed circuit board by putting the spudger in between the connections and the printed circuit board and pushing the spudger up.

Step 6

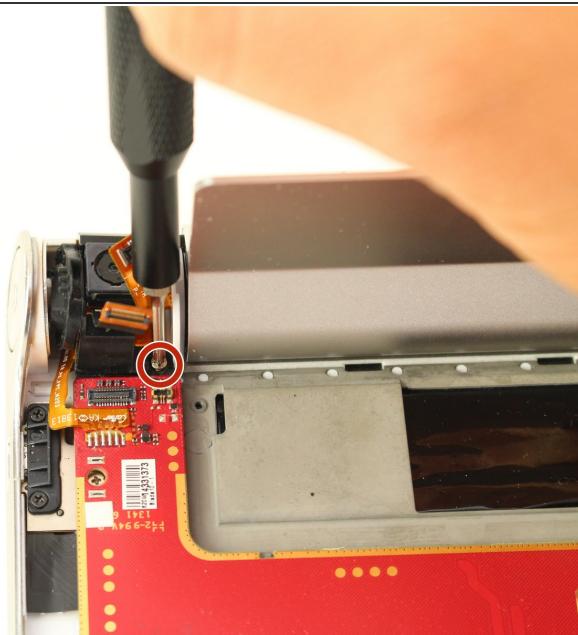


- Remove one 5mm screw with the Phillips #00 screwdriver.

Step 7

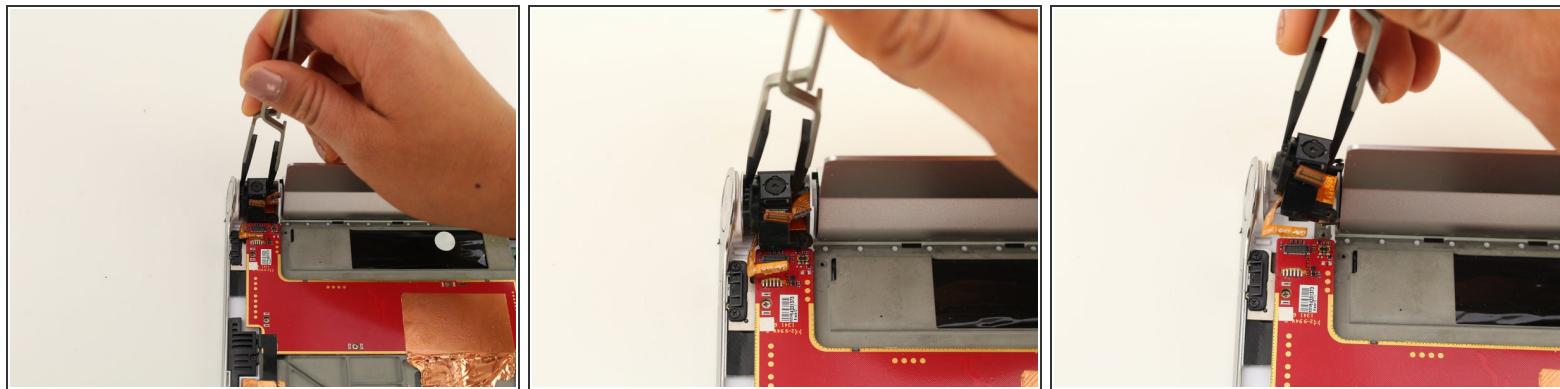



- Use the nylon tip tweezers to push the camera out from between the power button and the kickstand.

Step 8 — Camera PCB

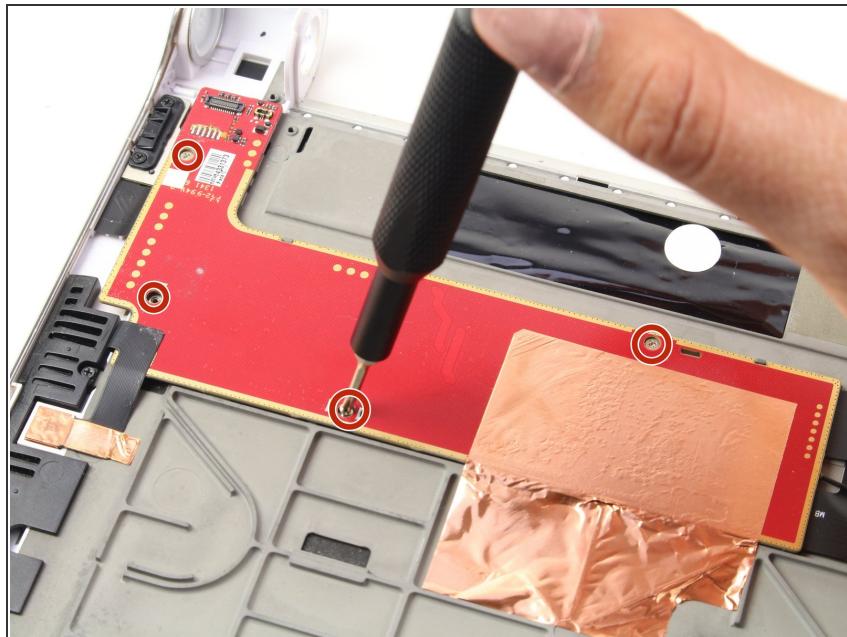



- Remove the four 1 mm screws with a Phillips #00 Screwdriver.

Step 9

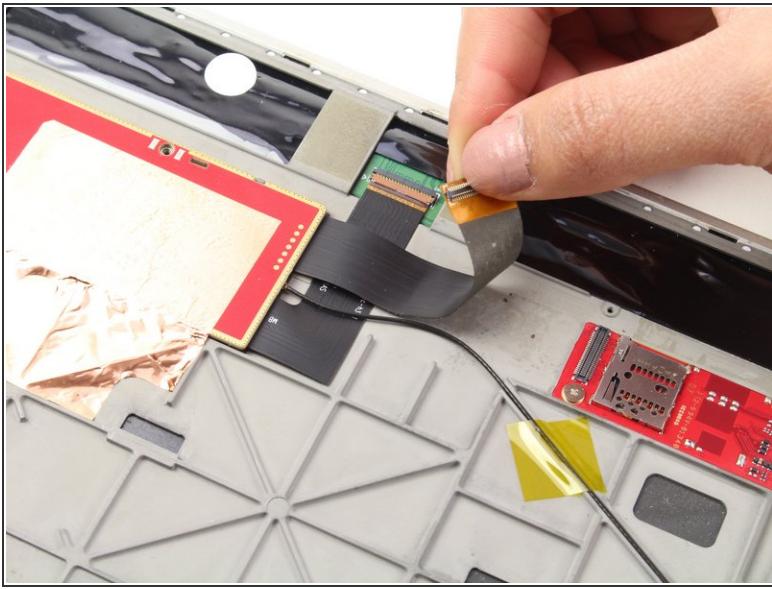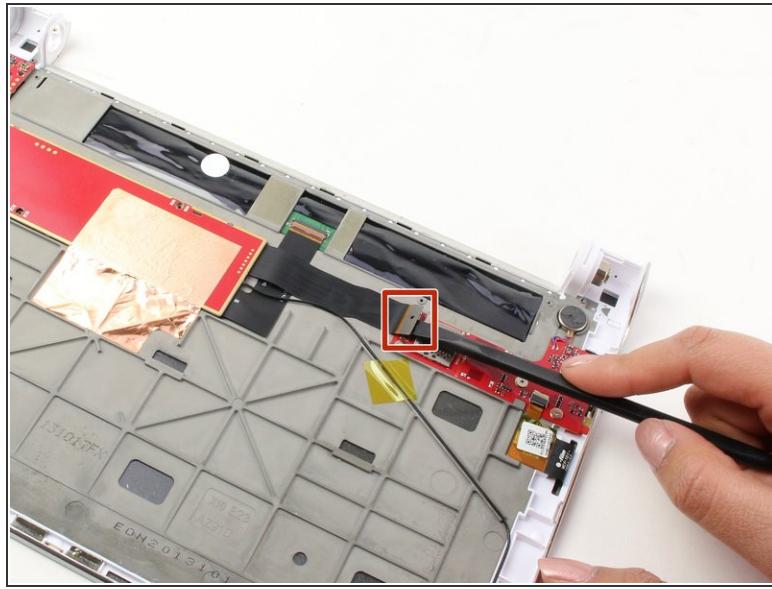

- Use a spudger to disconnect the ribbon wire by applying a force upwards.


Step 10

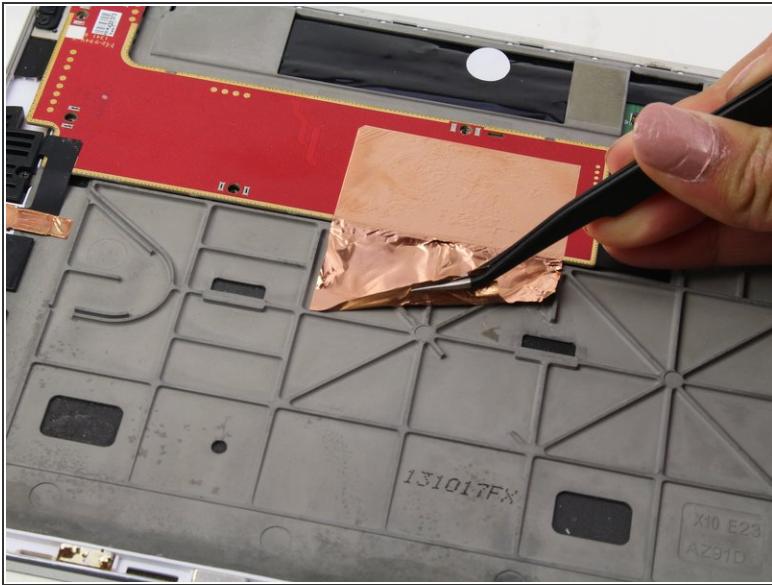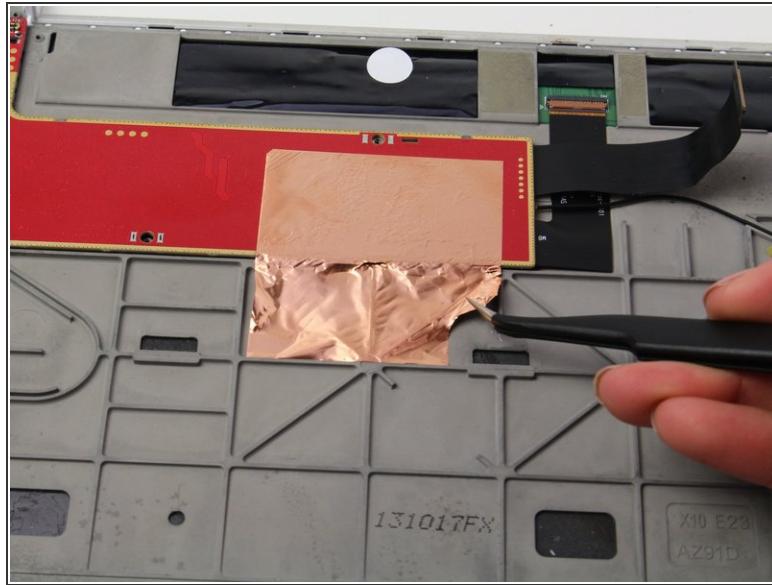

- Use tweezers to lift up the foil.




 The foil may tear.

Step 11

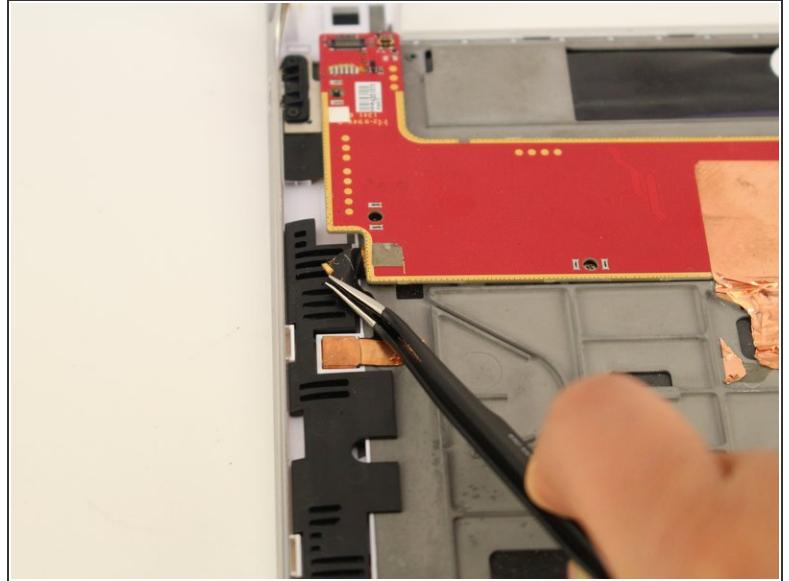



- Use the tweezers to lift the black tape from the corner of the printed circuit board.

Step 12

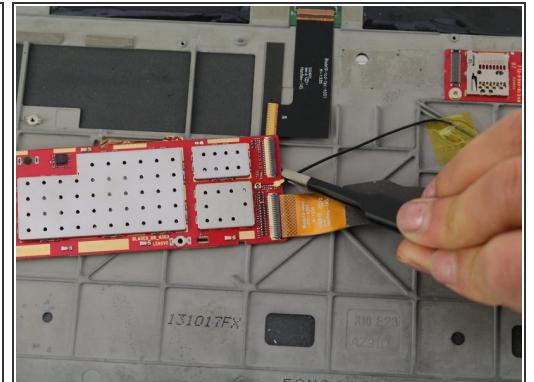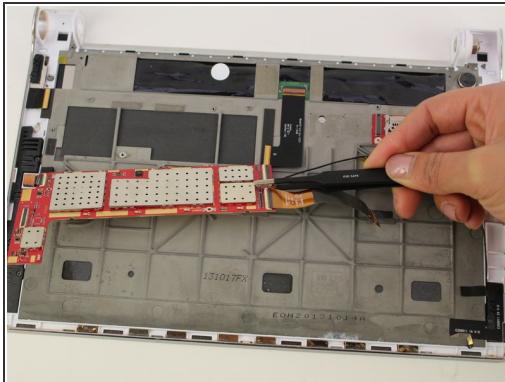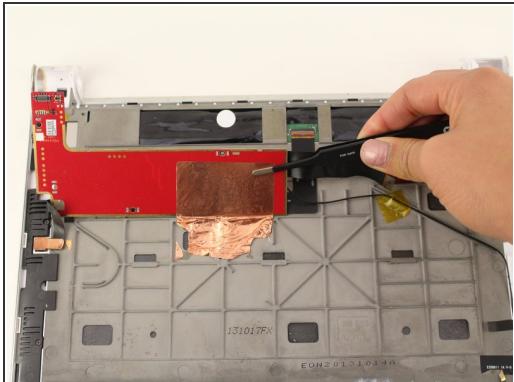




- Flip the board 180 degrees towards you using the tweezers.

Step 13 — Wi-Fi Module

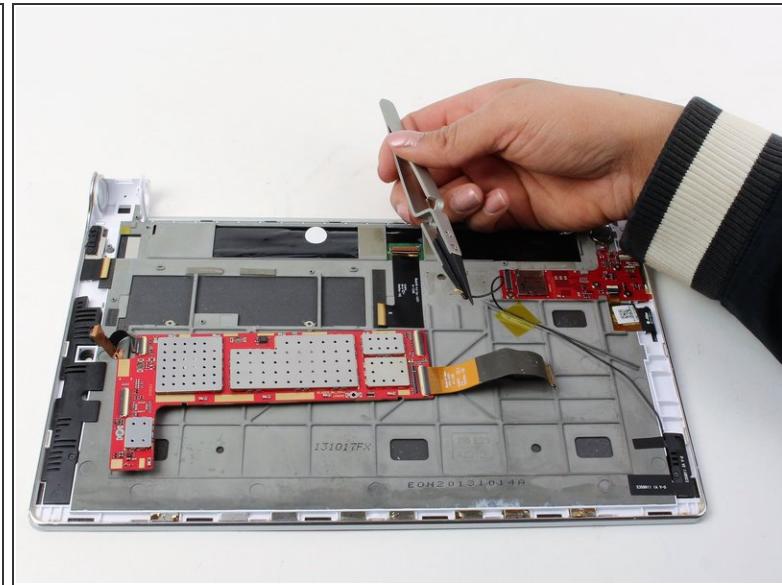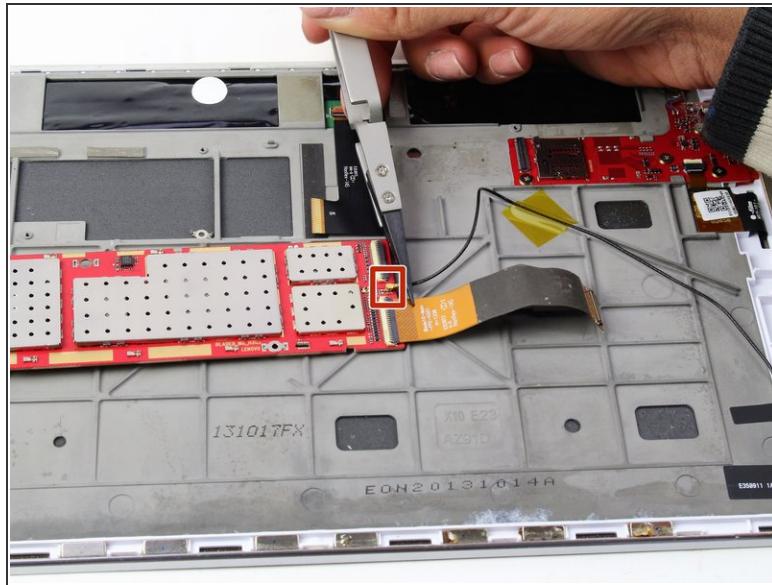


- Remove the wire from the PCB by pulling it towards the edge of the headphone jack using tweezers.

Step 14

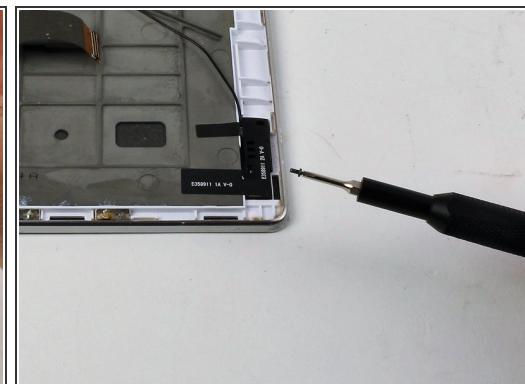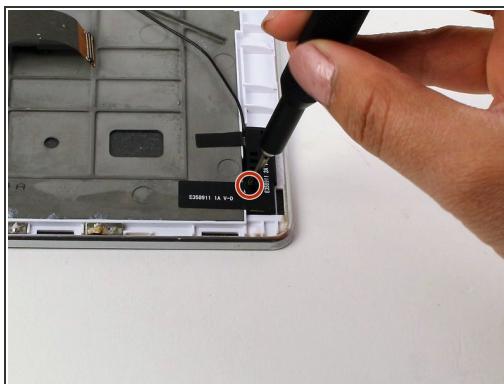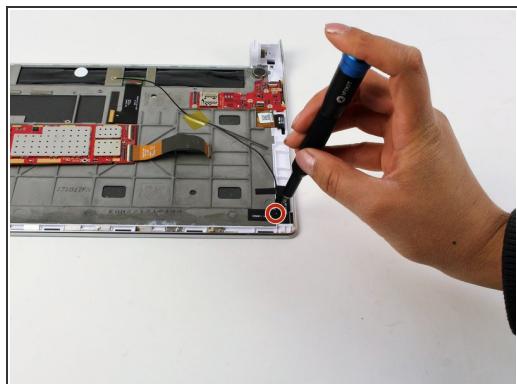


- Remove the one 5mm screw using a Phillips #00 Screwdriver.

Step 15

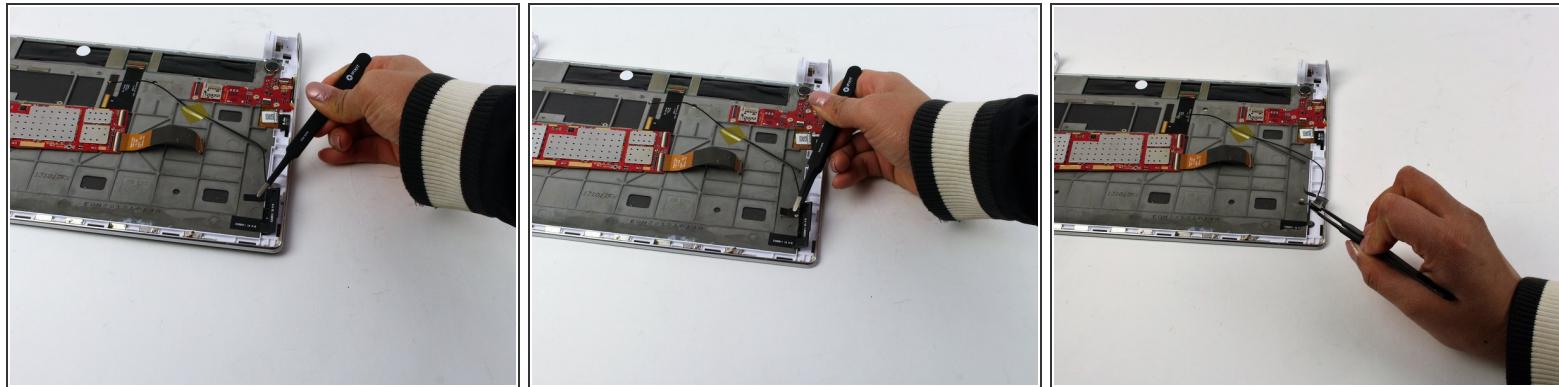

- Using tweezers remove the tape to disconnect the module by pulling it upward.

Step 16

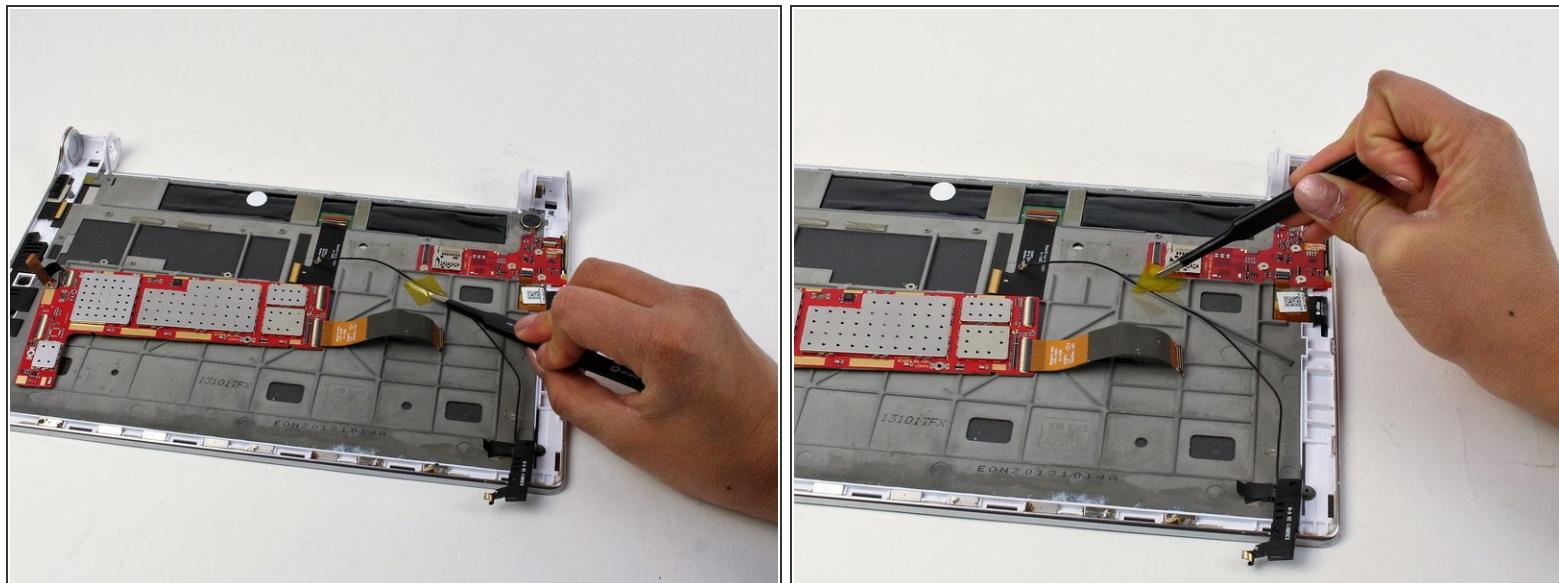

- Remove the yellow piece of tape by pulling it upward using tweezers.

To reassemble your device, follow these instructions in reverse order.