



LifePrint 3x4.5 Top Cover Replacement

How to replace a LifePrint 3x4.5 top cover.

Written By: Jacqueline Broderick



INTRODUCTION

The LifePrint 3x4.5 comes with a top cover with a part that pushes the photos down to be able to slide out of the printer. If the top cover is missing then the paper would not be able to be pushed out. For this reason, the top cover may need to be replaced.

Step 1 — Top Cover



- Place one hand on the top cover and one hand on the bottom portion of the LifePrint.
- While having the LP logo on the printer facing away from you, push the top cover away from you until it can't be slid away any further.
- Pull the cover with the LP logo up to separate it from the rest of the printer.

To reassemble your device, follow these instructions in reverse order.