



Linksys WRT54G Antennas Replacement

If you need to replace the antennas, this guide will help you through it.

Written By: Aaron Brown



INTRODUCTION

Antennas transmit the wireless internet. Sometimes they break and need to be replaced.

If, after reading through this guide, you are still in need of assistance, please refer back to the [device page](#) or the [troubleshooting page](#).



PARTS:

- [Linksys Replacement Antennas \(1\)](#)

Step 1 — Antennas



- Unfold the antennas straight away from the device.

Step 2



- Remove the black caps from the antennas by pulling them away from the device.

Step 3



- Unscrew each of the antennas from the wireless device.

Step 4 — Antennas



- Once the old antennas are removed, replace them with them with the new ones by screwing them on the device.

To reassemble your device, follow these instructions in reverse order.