




# Lite FX Rotating Big Ball of Lite Model 1929

## Back Panel Removal

How to remove the back panel of the Lite FX Rotating Big Ball of Lite Model 1929.

Written By: Nick Kaprielian

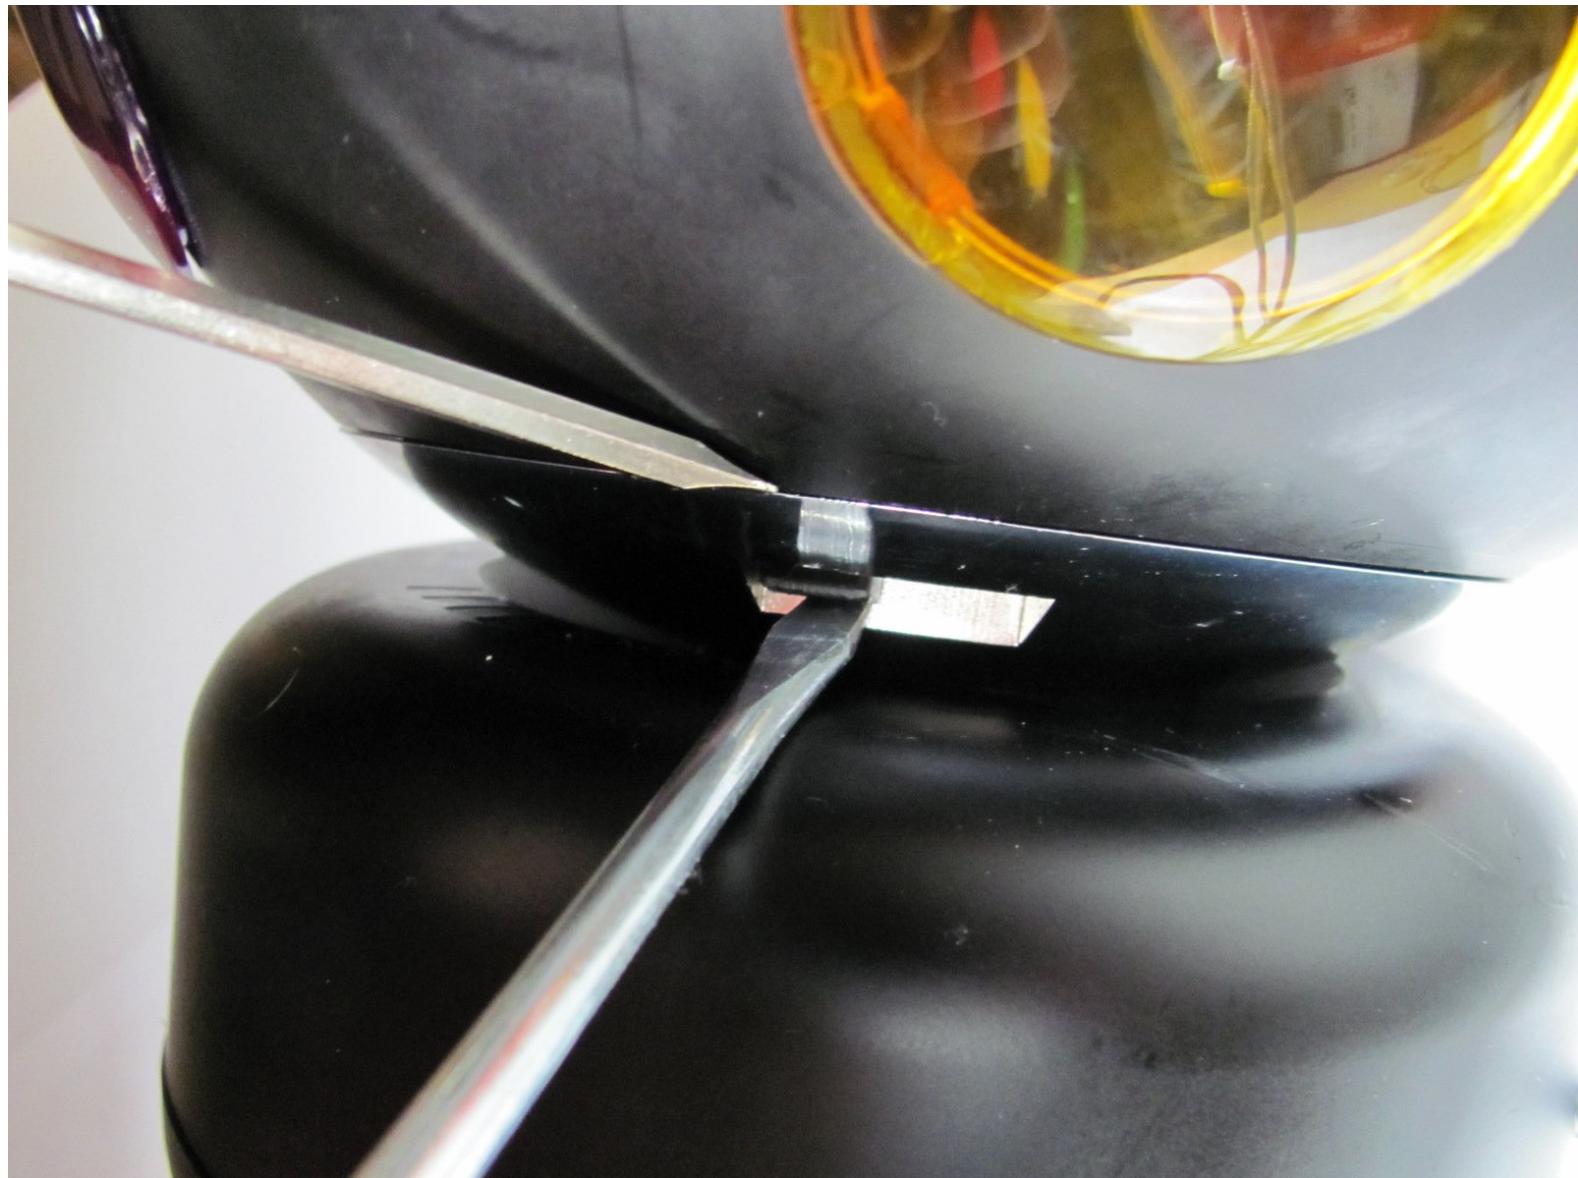

## INTRODUCTION

If you just can't find out what is wrong with your disco ball, you will probably need to open it to troubleshoot it. This guide will walk you through the steps to do that.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Lite FX Rotating Big Ball of Lite Model 1929 Back Panel Removal



- Turn the device over so that the base is on top.

## Step 2



- Peel off the piece of metal that is glued to hold the two halves of the base together.
- ➡ You may need rubber cement to reapply the piece of metal when reassembling the device.

## Step 3



- Unscrew the four 10mm Phillips head screws on the bottom of the device.
- ⓘ Once the base is removed, the device should look as shown on the picture.

To reassemble your device, follow these instructions in reverse order.