



Lite FX Rotating Big Ball of Lite Model 1929

Ball Disassembly

This guide will help you disassemble the ball from the bottom of the device in a Lite FX Rotating Big Ball of Lite Model 1929.

Written By: Courtney Elliott



This document was generated on 2019-09-22 12:32:46 PM (MST).

INTRODUCTION

Is something wrong with your disco ball and you need to remove the ball to get to the other parts of your device? This guide will show you how, so you can return to the party!

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Lite FX Rotating Big Ball of Lite Model 1929 Ball Disassembly



 Unplug the device to avoid injury.

- Turn the device over, so that the base is on top.

Step 2



- Compress the tab by pushing towards the center of the device with a spudger.
- While compressing the tab, peel the base away from the rotating head.

Step 3



- If the metal brackets come off of the sphere, put them back on the plastic piece as shown in the photo.

To reassemble your device, follow these instructions in reverse order.