



# Lite FX Rotating Big Ball of Lite Model 1929

## Color Panel Replacement

This guide will help you replace the colored panels in the Lite FX Rotating Big Ball of Lite Model 1929.

Written By: Nick Kaprielian



This document was generated on 2019-09-22 12:31:59 PM (MST).

## INTRODUCTION

Is your disco ball not giving off the right groovy colors that it once did? This guide will teach you how to replace the colored panels so you can get back to partying!

### TOOLS:

- Spudger (1)

## Step 1 — Lite FX Rotating Big Ball of Lite Model 1929 Ball Disassembly



 Unplug the device to avoid injury.

- Turn the device over, so that the base is on top.

## Step 2



- Compress the tab by pushing towards the center of the device with a spudger.
- While compressing the tab, peel the base away from the rotating head.

## Step 3



- If the metal brackets come off of the sphere, put them back on the plastic piece as shown in the photo.

## Step 4 — Color Panel



- Push the color panel by applying pressure from the inside while twisting to line up the tabs with the notches.
- Insert a new color panel by pushing it into place while lining up the tabs with the notches.

To reassemble your device, follow these instructions in reverse order.