



# Lite FX Rotating Big Ball of Lite Model 1929

## Switch Replacement

This guide will help you replace the switch on the cord of a Lite FX Rotating Big Ball of Lite Model 1929.

Written By: Courtney Elliott



This document was generated on 2019-09-22 12:32:31 PM (MST).

## INTRODUCTION

Will your groovy disco ball not turn on? This guide will teach you to remove and replace the switch so you can get back to your partying.



### **TOOLS:**

- [Phillips #1 Screwdriver \(1\)](#)

### **PARTS:**

- [Zing Ear KS-30 Switch \(1\)](#)

## Step 1 — Switch

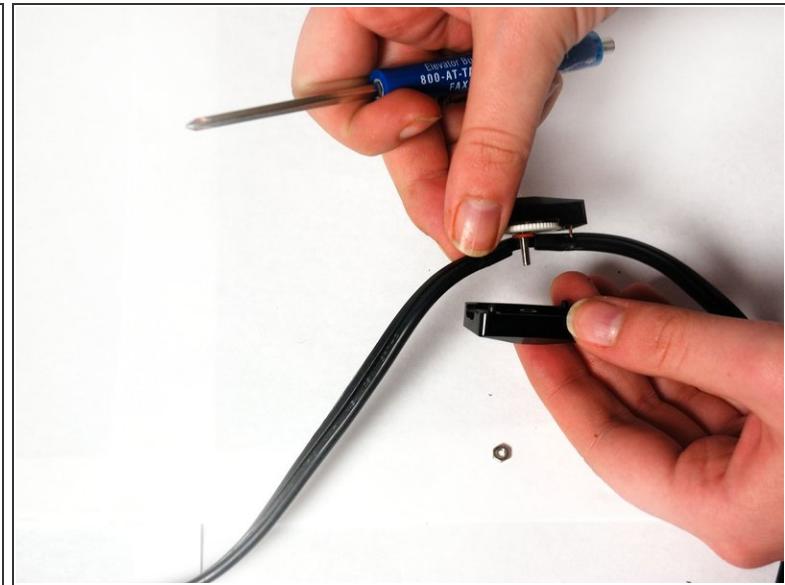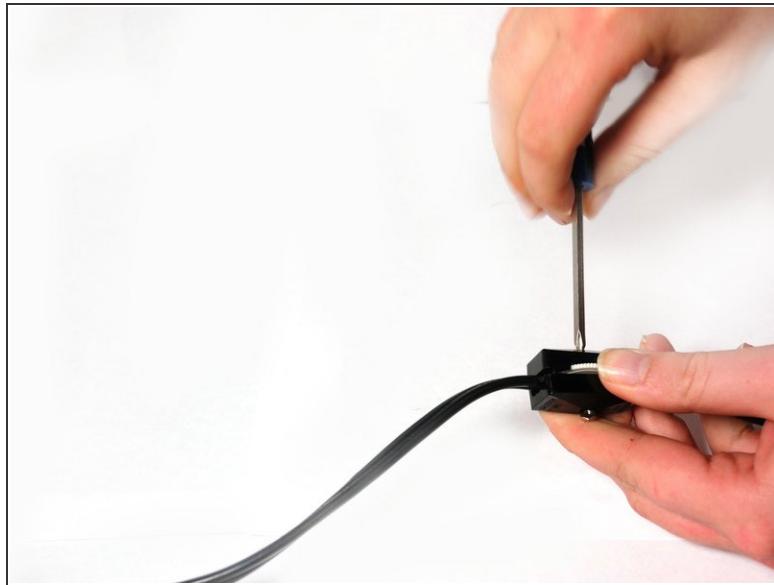

 Unplug the device to avoid injury.


- Use a Phillips head screwdriver to unscrew the single screw.
- Hold on to the nut from the other side so you do not lose it.
- Remove the panel that conceals the switch.

## Step 2



- Hold on to the red disc with needle nosed pliers, and use the Phillips head screwdriver to remove the disc by pushing down.

## Step 3

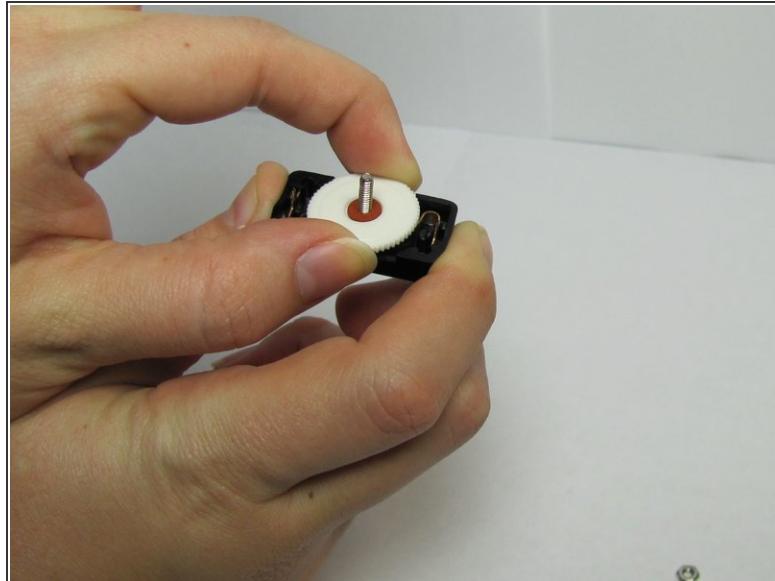

- Remove and replace the white switch.
- *(i)* Do not be afraid to pull as this takes a bit of force to remove.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-22 12:32:31 PM (MST).

