




Logitech Dexxa Joystick Cord Assembly Replacement

Here is how to replace the cord assembly on your Logitech Dexxa Joystick

Written By: Addison

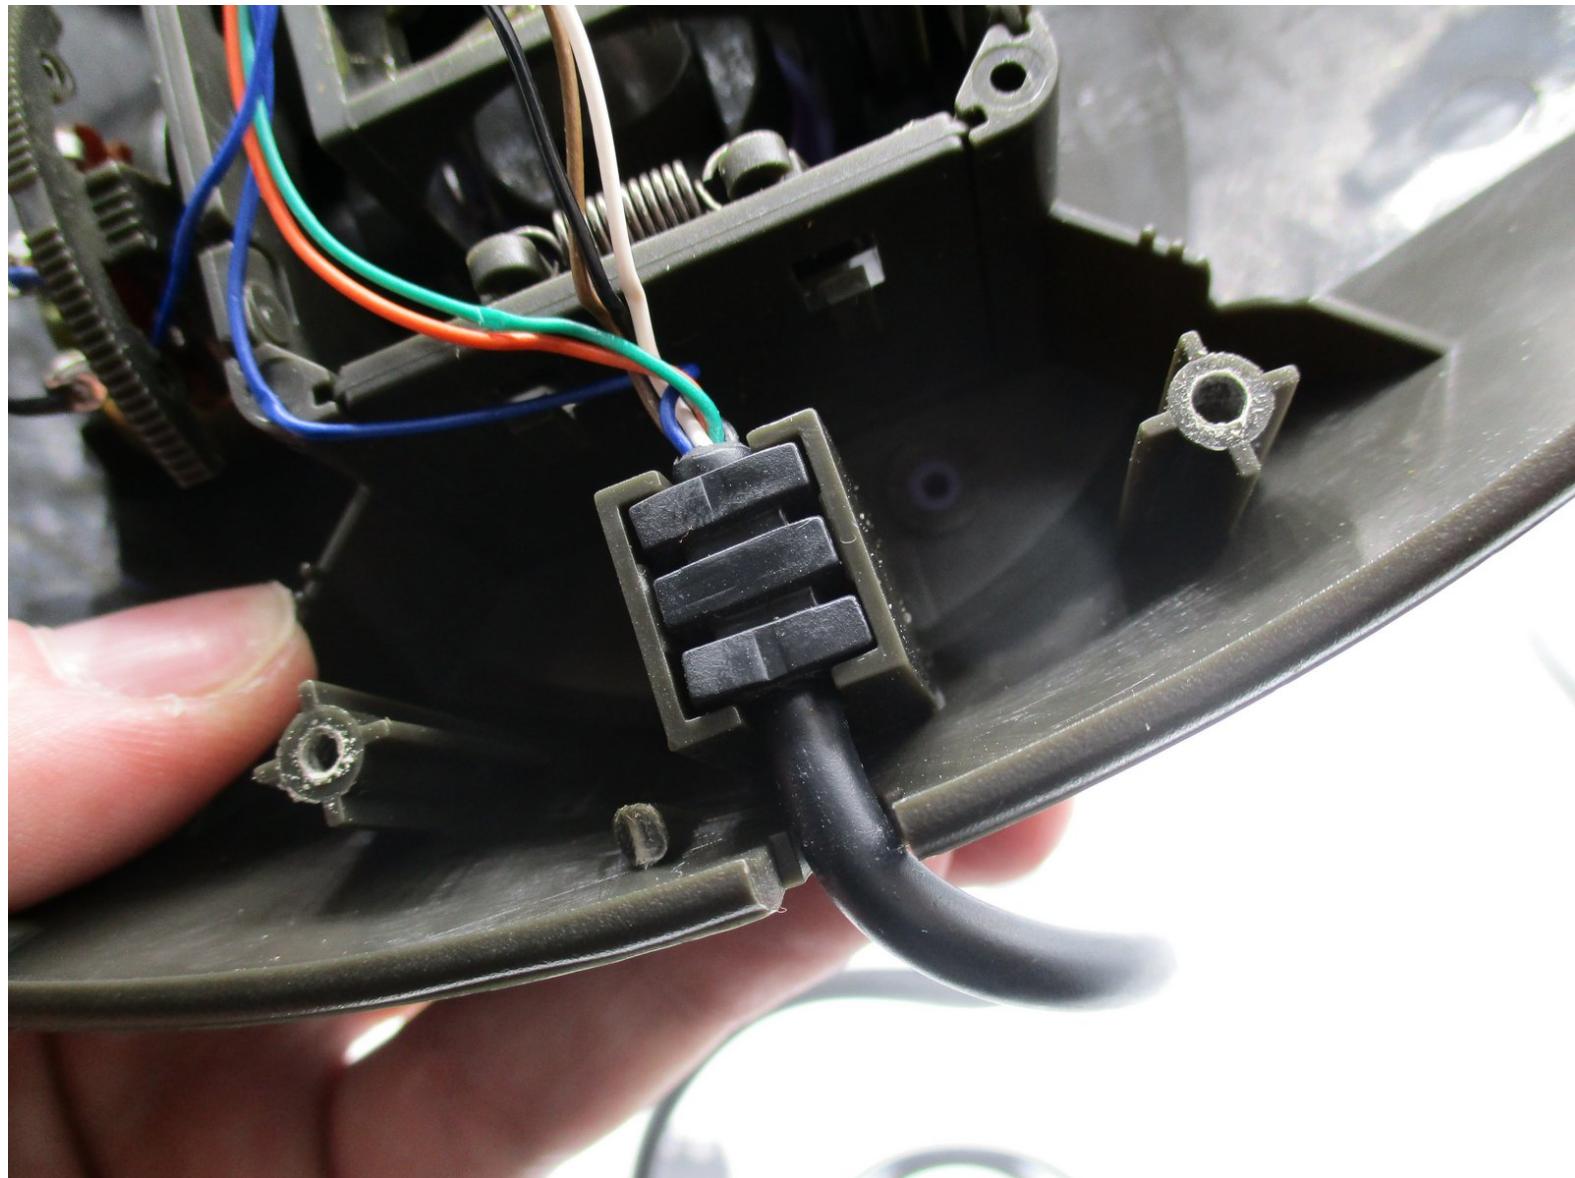

INTRODUCTION

The cord assembly is an important part of your controller. Your cord may become bent or damaged over time and need to be replaced.

Make sure to remove your device from power before starting.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Soldering Iron](#) (1)
- [Wire stripper/crimping tool](#) (1)
- [Suction Handle](#) (1)

PARTS:

- [DB15 cord assembly](#) (1)

Step 1 — Cord Assembly



- Unscrew the six 2 mm screws at the base.
- Pull the base cover off with the suction handle
- Unsolder the cords from the circuit board

To reassemble your device, follow these instructions in reverse order.