



# Logitech Dexxa Joystick Secondary Button Cap Replacement

How to replace your secondary button on your Logitech Dexxa joystick.

Written By: Addison



## INTRODUCTION

The secondary button is an important part of your controller. Your secondary button may become sticky, stuck or damaged over time. This part can be easily replaced and cleaned.

### **TOOLS:**

- Phillips #0 Screwdriver (1)

### **PARTS:**

- Trigger cap for Logitech Dexxa Joystick (1)
- Secondary Button cap for Logitech Dexxa Joystick (1)

## Step 1 — Trigger Cap





 Unplug your Joystick before use.

- Remove the three 2 mm screws on the right panel.
- Remove the right cover panel
- Open the joystick




 Open gently to prevent the joystick from falling apart

## Step 2

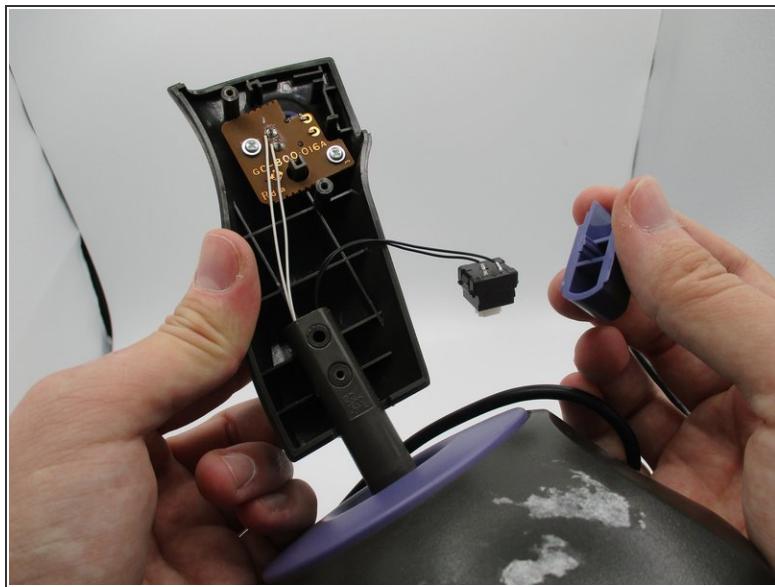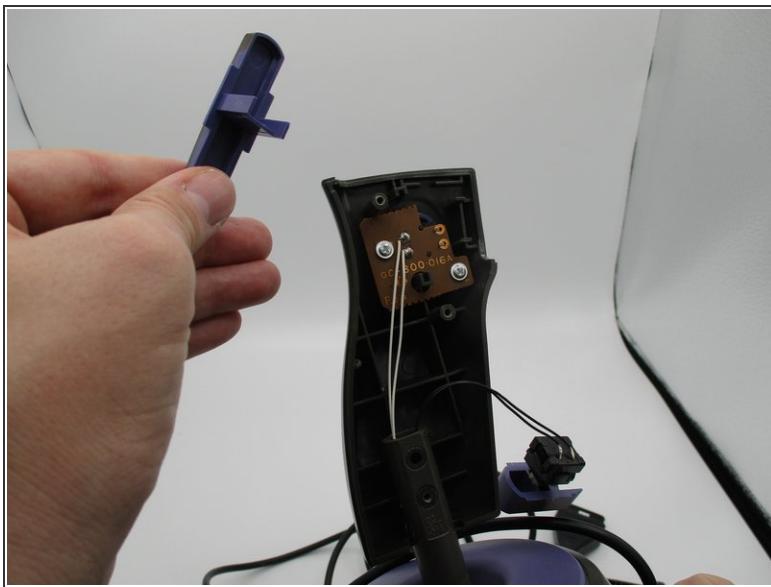

- Remove the top panel
- Remove the button cap

## Step 3 — Secondary Button Cap

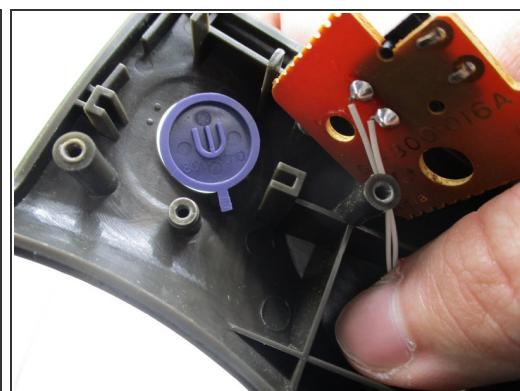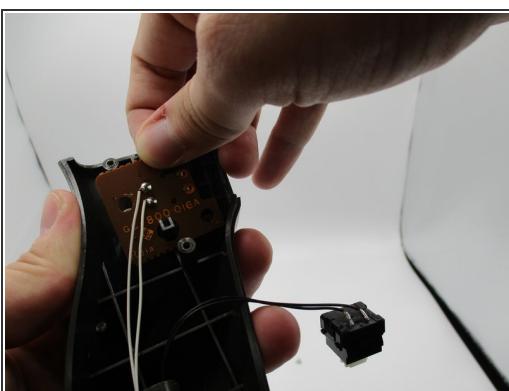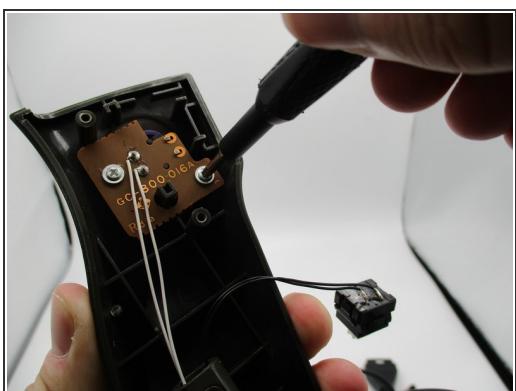

- Unscrew the two silver 1 mm screws
- Remove the circuit board
- Push the purple secondary button cap out from its slot

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-04-06 08:27:17 AM (MST).

