



# Logitech Dexxa Joystick Suction Cup Feet Replacement

How to replace your Logitech Dexxa Joystick suction cup feet

Written By: Addison



## INTRODUCTION

Suction cup feet keep your controller grounded. If they are damaged or unclean, they can cause the base to slide around. You can replace the suction cups without any tools.



### PARTS:

- [Suction cup](#) (1)

## Step 1 — Suction Cup Feet



- Pull the suction cup out and towards the cup's center until it pops out.
- *(i)* This may require a small amount of force

To reassemble your device, follow these instructions in reverse order.