



Logitech Dexxa Joystick Trigger Replacement

This is how to replace your Logitech Dexxa Joystick Trigger.

Written By: Addison



INTRODUCTION

Follow this replacement guide to remove and replace the trigger on your Logitech Dexxa Joystick.

Your trigger may become sticky, stuck or damaged over time. This part can be easily replaced and cleaned.

TOOLS:

- Phillips #0 Screwdriver (1)

PARTS:

- Trigger cap for Logitech Dexxa Joystick (1)

Step 1 — Trigger Cap





 Unplug your Joystick before use.

- Remove the three 2 mm screws on the right panel.
- Remove the right cover panel
- Open the joystick

 Open gently to prevent the joystick from falling apart

Step 2

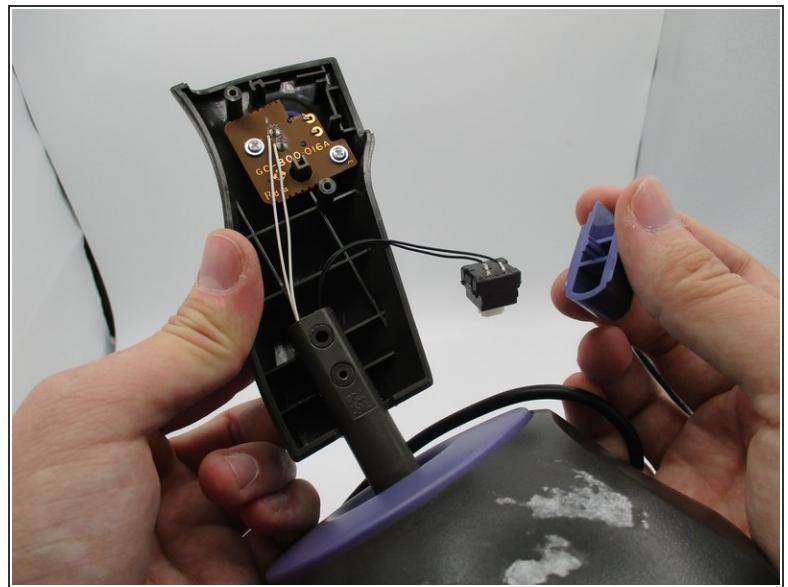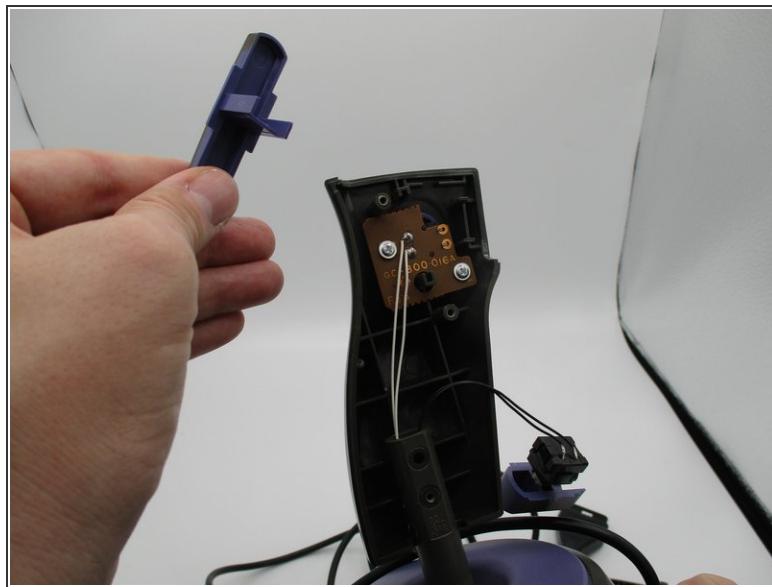

- Remove the top panel
- Remove the button cap

To reassemble your device, follow these instructions in reverse order.