



# Logitech Dual Action disassembly

Button cleaning.

Written By: Brian Neuman



## INTRODUCTION

If your buttons are sticking and they cannot be cleaned from the outside, here is how you can clean it from the inside.

### TOOLS:

- [iFixit Opening Tools \(1\)](#)

## Step 1 — Taking out the screws



- To get into the controller, you will need to unscrew the 7 screws on the back.

*(i)* You will have to remove the bottom oval sticker to reveal the screw circled in red.

## Step 2 — Opening the controller



- With the screws removed, turn the controller upside down and separate the front end from the back end.
- It is likely that the buttons will fall out of place, so as you open the controller, try to keep track of where the pieces go.
- There should be the 4 circular buttons labeled 1-4, 4 smaller circular buttons for the D-Pad, and 3 rounded rectangular buttons.

## Step 3 — Cleaning the buttons



- Turn over the front side of the controller to remove all the buttons.
- Wipe each individual button down with a piece of cloth and rubbing alcohol.