



# Logitech Extreme 3D Pro Joystick Trigger Replacement

This guide will assist you in replacing the trigger on a Logitech Extreme 3D Pro Joystick.

Written By: Emanuel Canela



## INTRODUCTION

After a long use the joystick trigger might experience a lack of strength within the trigger's internal spring.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Disassembly of the handle



- Remove these three Phillips #1 screws:
  - Two 10mm screws.
  - One 7mm screw.

## Step 2



- Using your fingers, lower the rubber boot to reveal two screws underneath the joystick.
- Remove the two 10mm Phillips #1 screws.

## Step 3



- Pull apart the joystick chassis by hand.
- Release this clip located underneath the hand rest

*(i)* The circuit board will be loose and may fall down.

## Step 4 — Joystick Trigger



- Remove the plastic trigger from the joystick.

To reassemble your device, follow these instructions in reverse order.