



Logitech G700s Side Button Array Replacement

Replace the four side buttons on a Logitech G700s gaming mouse.

Written By: Chase Tisinger



INTRODUCTION

By following this guide you will be able to remove and replace the quad side button array on your Logitech G700s gaming mouse.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

PARTS:

- [Quad Side Button Assembly](#) (1)

Step 1 — Top Case Replacement




- Remove the batteries from the mouse.
- Use a plastic opening tool to peel up the four mouse feet.

Step 2




- Remove the five 5.5mm Phillips #00 screws found underneath the mouse feet.

Step 3

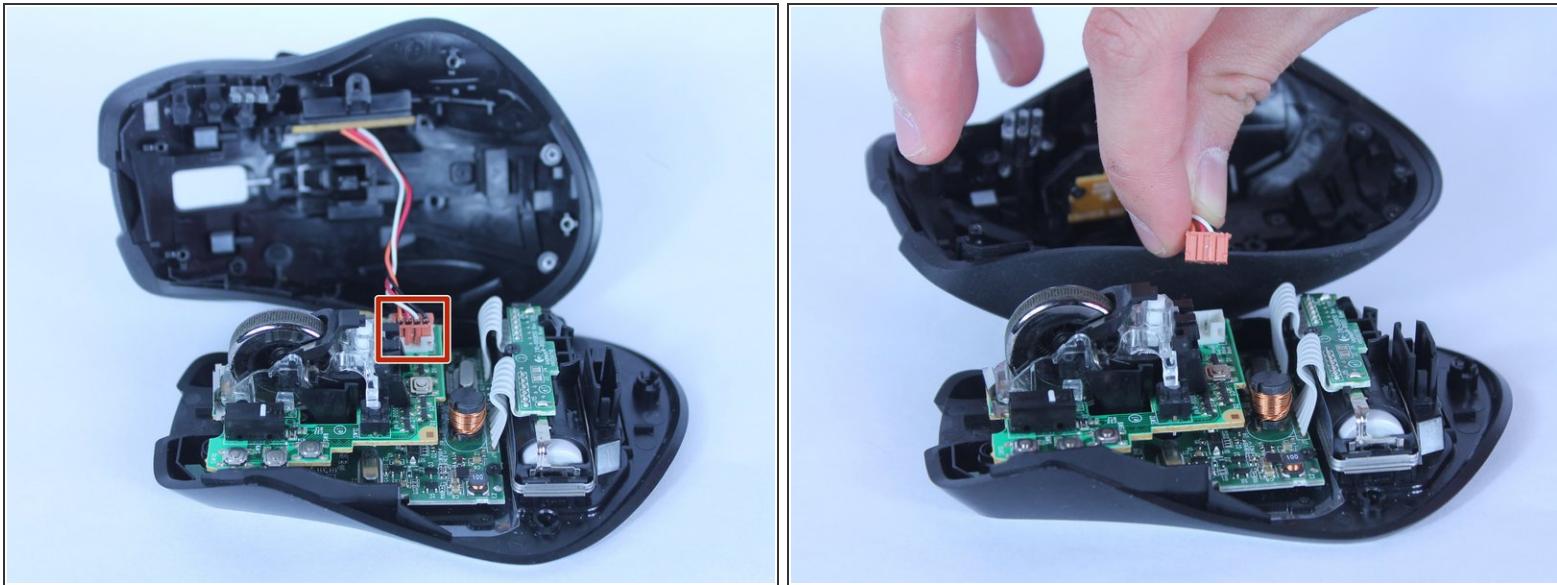

- Pull the top of the mouse off of the bottom half.
- *(i)* There's a wire connecting the two halves.
- Unplug the programmable buttons from the motherboard.

Step 4 — Programmable Side Buttons

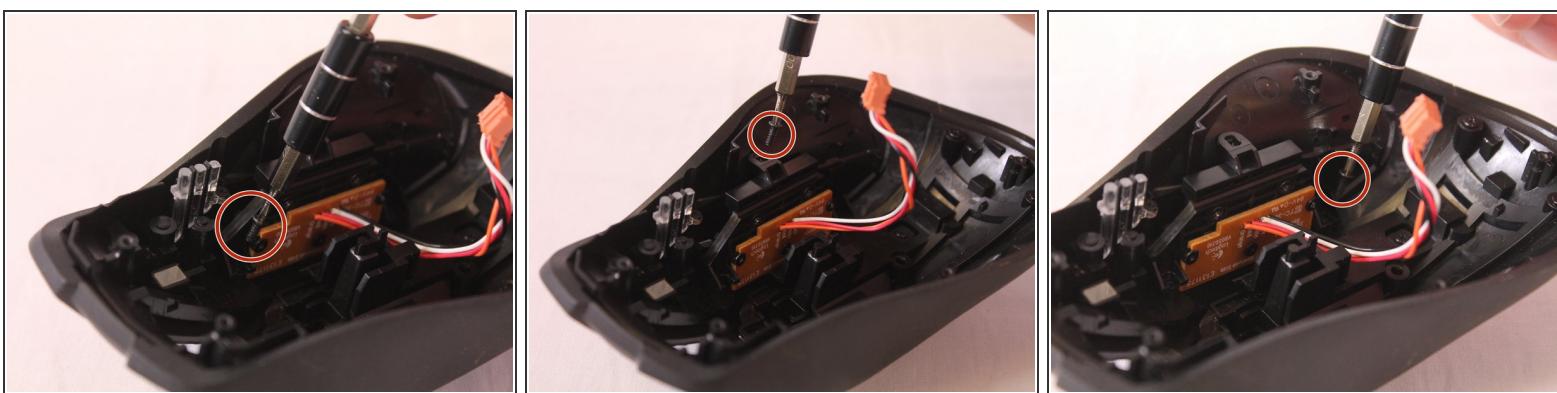

- Remove the three 5.5mm Phillips #00 screws holding the button assembly to the mouse.

⚠ Do not remove any of the screws on the circuit board, only the ones holding the plastic assembly in place

Step 5



- Disconnect the button board from the motherboard and remove the whole assembly.

To reassemble your device, follow these instructions in reverse order.