



# Logitech Harmony 300 Batteries Replacement

Like many other remote controllers, the remote controller is powered by two batteries that are AA batteries.

Written By: Andres Rodriguez



## Step 1 — Identifying the Battery Housing



- On the back bottom of the controller, a housing holds the batteries that are used to power the controller.

## Step 2 — Removing the Battery Cap



- Place a finger on the top of the cap on the indent. While holding the controller with the other hand, press firmly towards the bottom of the controller to loosen the cap.
- Once the cap is loosen, simply lift the cap out to reveal the batteries.

## Step 3 — The Batteries



- Carefully pull the black tap to remove the batteries from the battery housing. When inserting new batteries, be aware of the correct orientation.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-23 08:37:01 AM (MST).

