



Logitech Harmony Companion Harmony Hub Motherboard Replacement

This guide will show you how to replace the motherboard in the Harmony Hub.

Written By: Cassidy Wardlow



INTRODUCTION

If you are having trouble with your Harmony Hub, the motherboard may need to be replaced. For this guide, all you need is a Phillips #0 screwdriver. There are many screws, so be sure to set them on a mat so none of them get lost.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [Metal Spudger \(1\)](#)

Step 1 — Harmony Hub Motherboard



- Remove the non-slip rubber pads on the bottom of the Harmony Hub.

Step 2



- Unscrew the four 6.0 mm Phillips #0 screws.

Step 3



- Insert the metal opening tool in the slit by the sensor.
- Carefully separate the Harmony Hub cover from the base.

 The metal opening tool could damage the device, so use with care.

Step 4



- Unscrew the 2.0 mm Phillips #0 at the bottom right of the motherboard.
- Unscrew the 4.0 mm Phillips #0 at the top left of the motherboard.

Step 5



- Face the Harmony Hub base so the sensor is facing out.
- Insert the plastic opening tool behind the motherboard on the gold section, which is to the right of the sensor.
- Lift until you hear a click.

To reassemble your device, follow these instructions in reverse order.