



Logitech Harmony Companion Remote Battery Replacement

This guide can be used to access and replace the battery in your Companion remote.


Written By: Cassidy Wardlow



INTRODUCTION

If you are still having problems with your Companion remote after changing the command settings, it may be time to change the remote battery. This guide will help you access and replace your Companion remote battery. There are no tools required for this guide, all you need to do is remove the battery cover and lift the battery.

Step 1 — Remote Battery

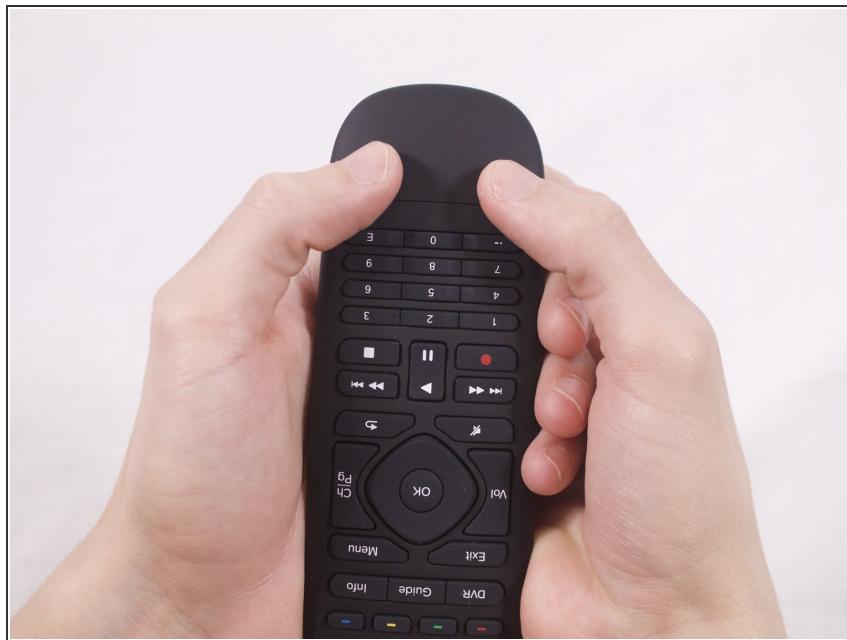

- Hold the remote with the Logitech label toward you.

Step 2



- Push the battery cover upward.

Step 3



- Use your finger to lift the battery out of the compartment.
- When the battery has lifted, push it up to remove it.

To reassemble your device, follow these instructions in reverse order.