




# Logitech Harmony Smart Control Remote Buttons Replacement

This guide will show an easy way to replace the buttons on your harmony remote.


Written By: Josh Hendricks

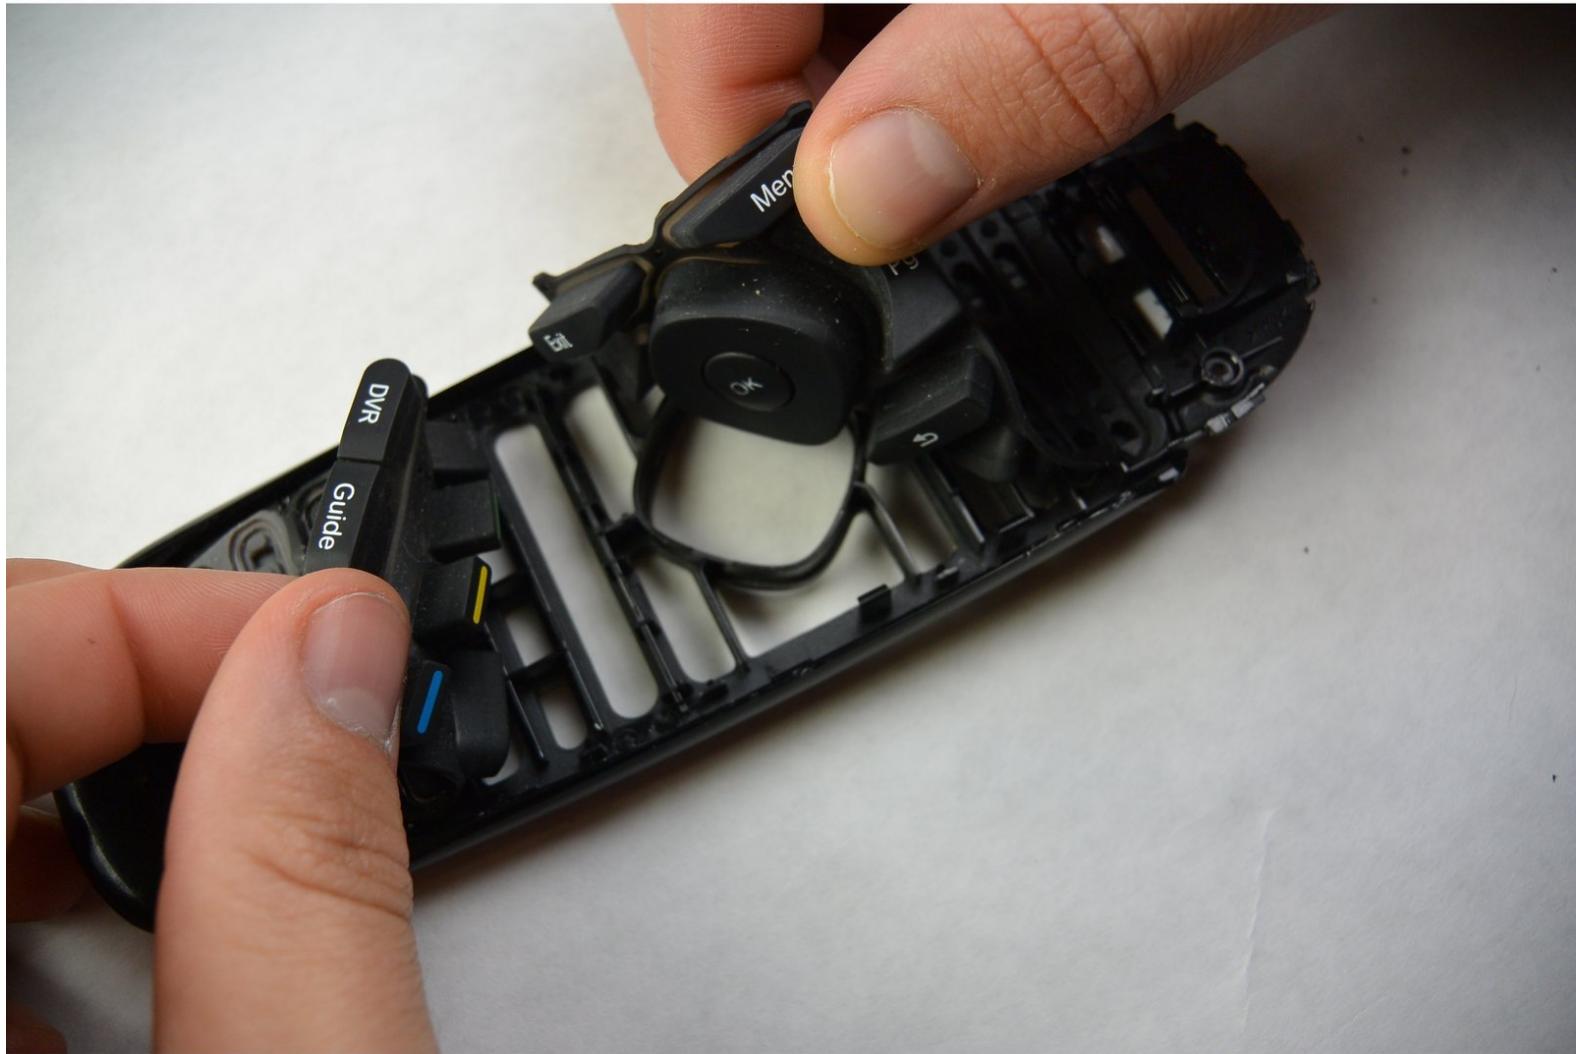

 **TOOLS:**

- [Metal Spudger \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

## Step 1 — Remote Buttons

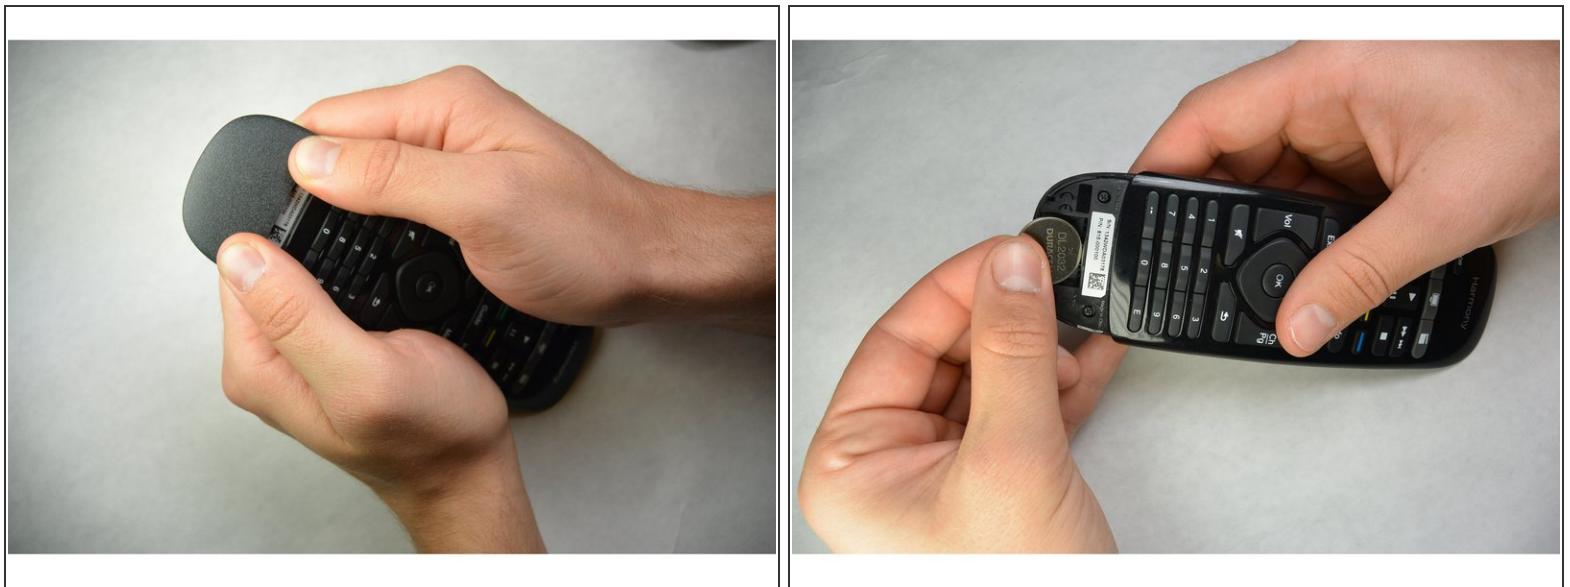

- With both thumbs, slide the grooved cover off the end of the remote.
- Remove the battery once cover is removed.

## Step 2





- With the PH00 bit, remove both of the 4mm Phillip screws on the remote.

## Step 3




- Using a metal spudger, pry the remote. Maneuver around to separate both sides.

## Step 4

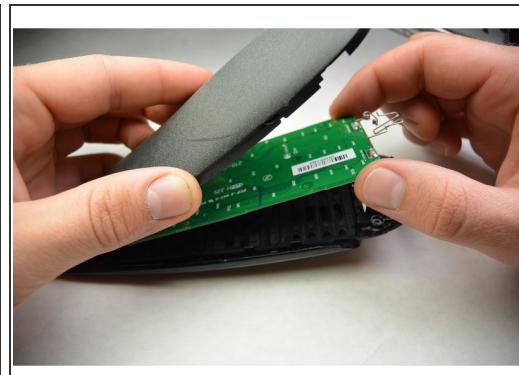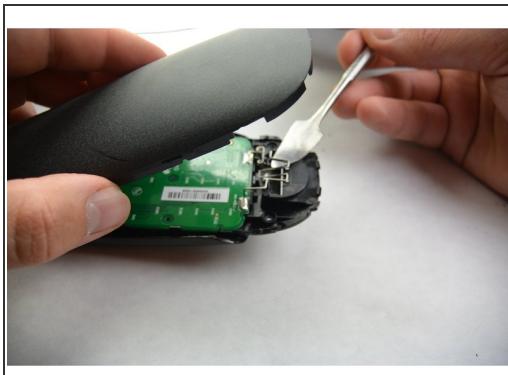

- Manually separate the two pieces of plastic.
- Using the metal piece from the housing, pry up the circuit board. Do not disconnect anything.
- When the circuit board is pried, slide the circuit board out of the housing.

## Step 5

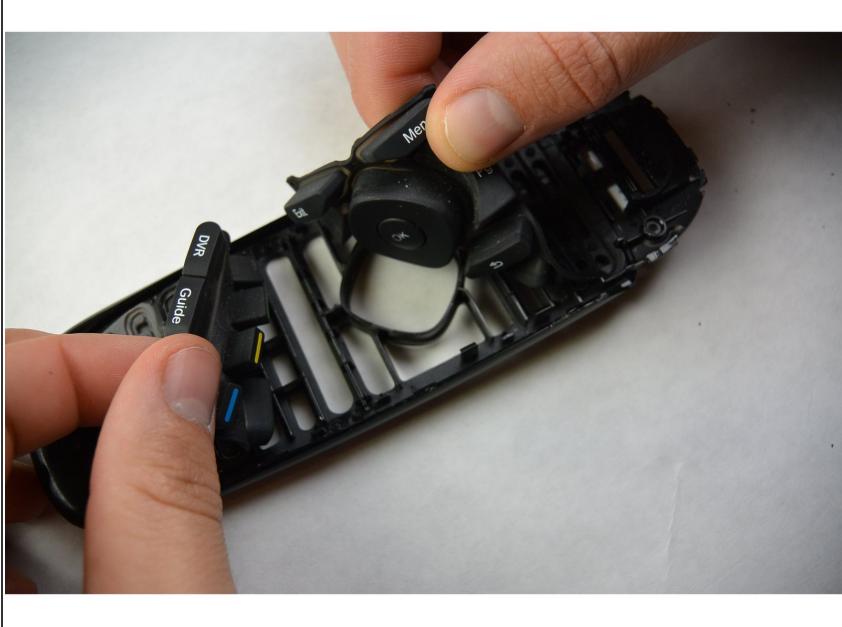

- From the front of the remote, remove the buttons. Clean or replace the necessary buttons.

To reassemble your device, follow these instructions in reverse order.