



Logitech Harmony Touch Buttons Replacement

This guide will aid in the replacement and cleaning of buttons on your device.

Written By: Nicholas Townsend



INTRODUCTION

Take the device apart to access the buttons and replace or clean them.

TOOLS:

- iFixit Opening Tools (1)
- Metal Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Buttons




- Open the latch that accesses the charging port
- Remove the black sticker and remove the screw with the indicated screwdriver
- Take the plastic opening tool and run it down the side of the remote to pop the case open

! While doing this step there are three wires that connect the two pieces, be sure not to rip them out

- Detach the white clamp to partially disconnect the case from the motherboard

Step 2

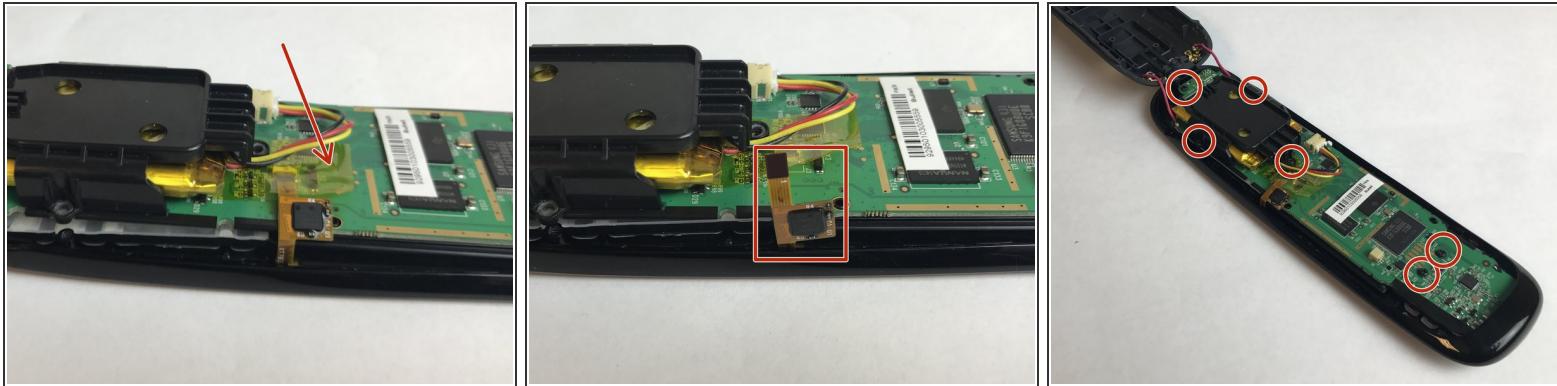

- Peel back thin yellow plastic film and detach the clip found underneath
- Remove the screws that connect the motherboard to the case with the suggested screwdriver

Step 3



- Next, carefully remove the motherboard from the top piece of the case
- *(i)* The motherboard is connected to the bottom part of the case
- You should now be able to access all of the buttons and remove them from the case

Step 4



- Remove the buttons from the case

To reassemble your device, follow these instructions in reverse order.