



# Logitech Harmony Touch Screen Replacement

This guide will aid in the replacement of the LCD screen on your device.

Written By: Nicholas Townsend



This document was generated on 2019-10-21 03:57:05 PM (MST).

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)

## Step 1 — Screen




- Open the latch that accesses the charging port
- Remove the black sticker and remove the screw with the indicated screw driver
- Take the plastic opening tool and run it down the side of the remote to pop the case open

! While doing this step there are three wires that connect the two pieces, be sure not to rip them out

- Detach the white clamp to partially disconnect the case from the motherboard

## Step 2

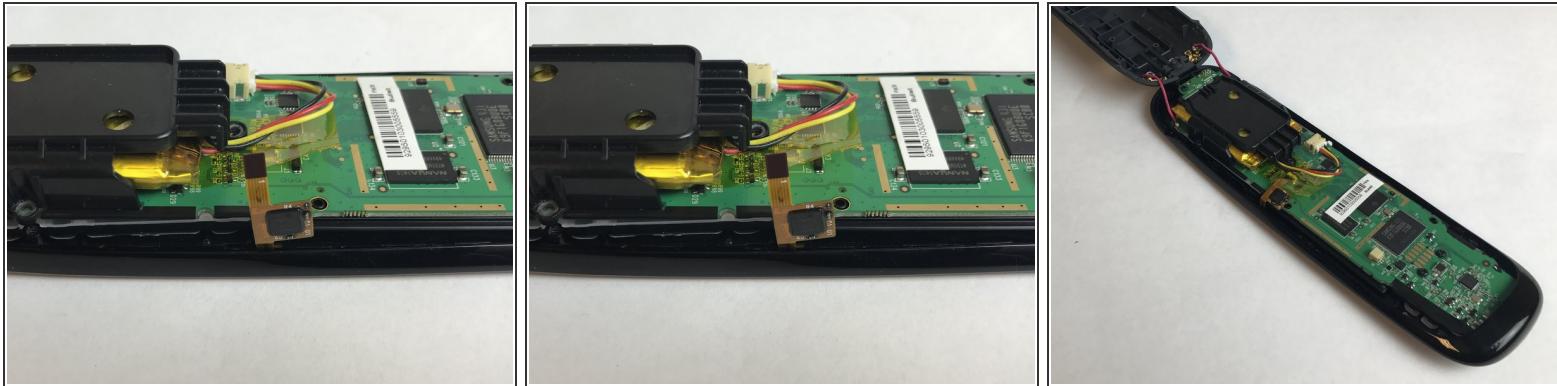


- Peel back thin yellow plastic film and detach the clip found underneath
- Remove the screws that connect the motherboard to the case with the suggested screwdriver

## Step 3



- Next, carefully remove the motherboard from the top piece of the case
- *(i)* The motherboard is connected to the bottom part of the case
- You should now be able to access the screen which is located on the back of the motherboard

## Step 4

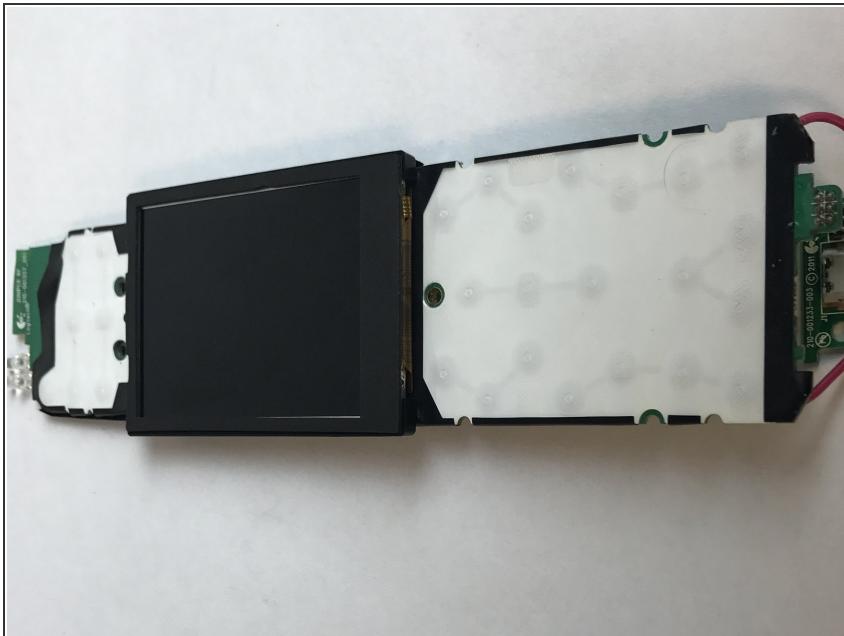

- Now that you have access to your screen, you can assess your problem ex: if your LCD is not working or if your screen is cracked

To reassemble your device, follow these instructions in reverse order.