



Logitech M317C Battery Replacement

For the replacement of the Logitech M317C Battery you will need a standard AA battery that you would find at any store. You will also need a set of hands.

Written By: TheYootz Media Group



Step 1 — Removing back cover



- Push down on the cover until it pops off. Do not push too hard on the cover to reduce the risk of snapping the clip off.

Step 2 — Battery Removal



- Push back on the battery in the slot until it pulls itself up enough to where you can pull the battery up out of the slot.

To reassemble your device, follow these instructions in reverse order.