



Logitech UE MegaBoom Battery Replacement

This guide offers step-by-step instructions on how to replace the battery in a Logitech UE MegaBoom device.

Written By: Oscar Ambriz



INTRODUCTION

A dead battery can be an inexpensive fix for devices that will not charge, or have a short battery life. This guide will show you how this part can be replaced.

TOOLS:

- [Jimmy](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

PARTS:

- [Logitech UE MegaBoom Replacement Battery](#) (1)

Step 1 — Outer Mesh



- Locate the ends of the speaker.
- Put a plastic opening tool in-between the rubber end and the mesh.
- Apply a upward force in order to pry open the end.
- Apply this procedure to the other side as well.

(i) Will take force.

 Using metal tools may permanently mar your device.

Step 2



- Take the Jimmy and pry up the rubber strip that has the volume buttons on it.
- You will hear clicks as it pries up, don't worry.
- Remove all the rubber you pried off.

Step 3



- Use tweezers to lift end of plastic retainer on edge of mesh out of its channel.
- Work the plastic retainer out of the channel all the way around the speaker.

⚠ Be gentle, it is easy to damage the fabric.

- Repeat for other side.

Step 4 — Battery



- Pull up on the top cover which contains the auxiliary and USB ports in order to remove it from the base.

Step 5



- Pull on white strip to remove battery.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-21 10:44:08 PM (MST).

