



Logitech UE MegaBoom Outer Mesh Replacement

This is a guide designed to assist you in removing and replacing the Logitech UE Megaboom outer mesh.

Written By: Oscar Ambriz



This document was generated on 2019-09-23 04:58:53 AM (MST).


INTRODUCTION

This is a guide designed to assist you in removing and replacing the Logitech UE Megaboom outer mesh.

TOOLS:

- [Jimmy](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Outer Mesh

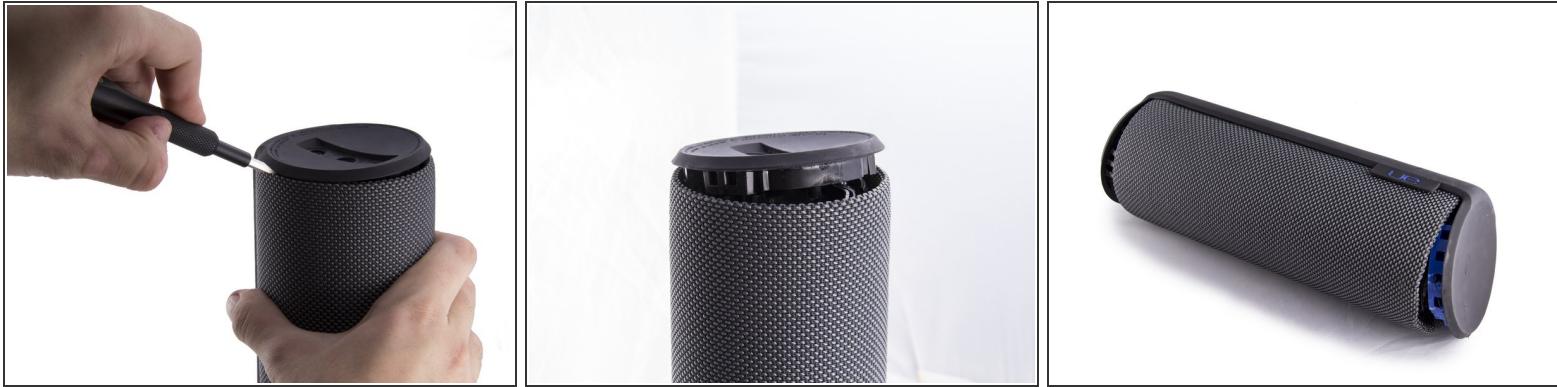

- Locate the ends of the speaker.
- Put a plastic opening tool in-between the rubber end and the mesh.
- Apply a upward force in order to pry open the end.
- Apply this procedure to the other side as well.

(i) Will take force.

 Using metal tools may permanently mar your device.

Step 2



- Take the Jimmy and pry up the rubber strip that has the volume buttons on it.
- You will hear clicks as it pries up, don't worry.
- Remove all the rubber you pried off.

Step 3



- Use tweezers to lift end of plastic retainer on edge of mesh out of its channel.
- Work the plastic retainer out of the channel all the way around the speaker.

⚠ Be gentle, it is easy to damage the fabric.

- Repeat for other side.

To reassemble your device, follow these instructions in reverse order.