



Logitech UE MegaBoom Power Button Replacement

A guide designed to assist in the removal and replacement of the Logitech UE Megaboom power button.

Written By: Oscar Ambriz



This document was generated on 2019-09-19 09:10:06 PM (MST).

INTRODUCTION

This is a guide designed to assist you in removing and replacing the Logitech UE Megaboom power button.

TOOLS:

- [Jimmy](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Outer Mesh



- Locate the ends of the speaker.
- Put a plastic opening tool in-between the rubber end and the mesh.
- Apply a upward force in order to pry open the end.
- Apply this procedure to the other side as well.

(i) Will take force.

 Using metal tools may permanently mar your device.

Step 2



- Take the Jimmy and pry up the rubber strip that has the volume buttons on it.
- (i)* You will hear clicks as it pries up, don't worry.
- Remove all the rubber you pried off.

Step 3



- Use tweezers to lift end of plastic retainer on edge of mesh out of its channel.
- Work the plastic retainer out of the channel all the way around the speaker.

⚠ Be gentle, it is easy to damage the fabric.

- Repeat for other side.

Step 4 — Power Button



- Locate the end of the speaker which contains the power button.
- The circuit board which contains the power button should be visible.
- Grasp the outer rim of this end cap and pull in an upward motion.

(i) This might require some force.

Step 5



- Insert a opening tool between the circuit board and one of the black clips which is holding the board in place.
- Using the opening tool pry up on the clip allowing the board to be freed. Pry up on the second clip to fully release the board.
- Using your fingers lift the board out of place.

To reassemble your device, follow these instructions in reverse order.