



Written By: Alex Kusmierz





TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



- Remove the battery cover on the back of the LCD monitor by unscrewing one 5mm Phillips #1 screw.
- Slide the battery out of the housing. Lightly tap the opposite end of the monitor if the battery does not come right out.


Step 2



- Remove the four 6mm Phillips #1 screws on the back of the LCD monitor.

Step 3



- Using a plastic opening tool, gently separate the back panel from the front panel, working the tool around the panel to disconnect it.
 - Carefully remove the back panel
-  The speaker wire is connected to the motherboard so DO NOT rip back panel away from the monitor.

To reassemble your device, follow these instructions in reverse order.