




Lorex LW2742 Lens Replacement

Replacing the lens on your Lorex LW2742 security camera.

Written By: Alex Kusmierz

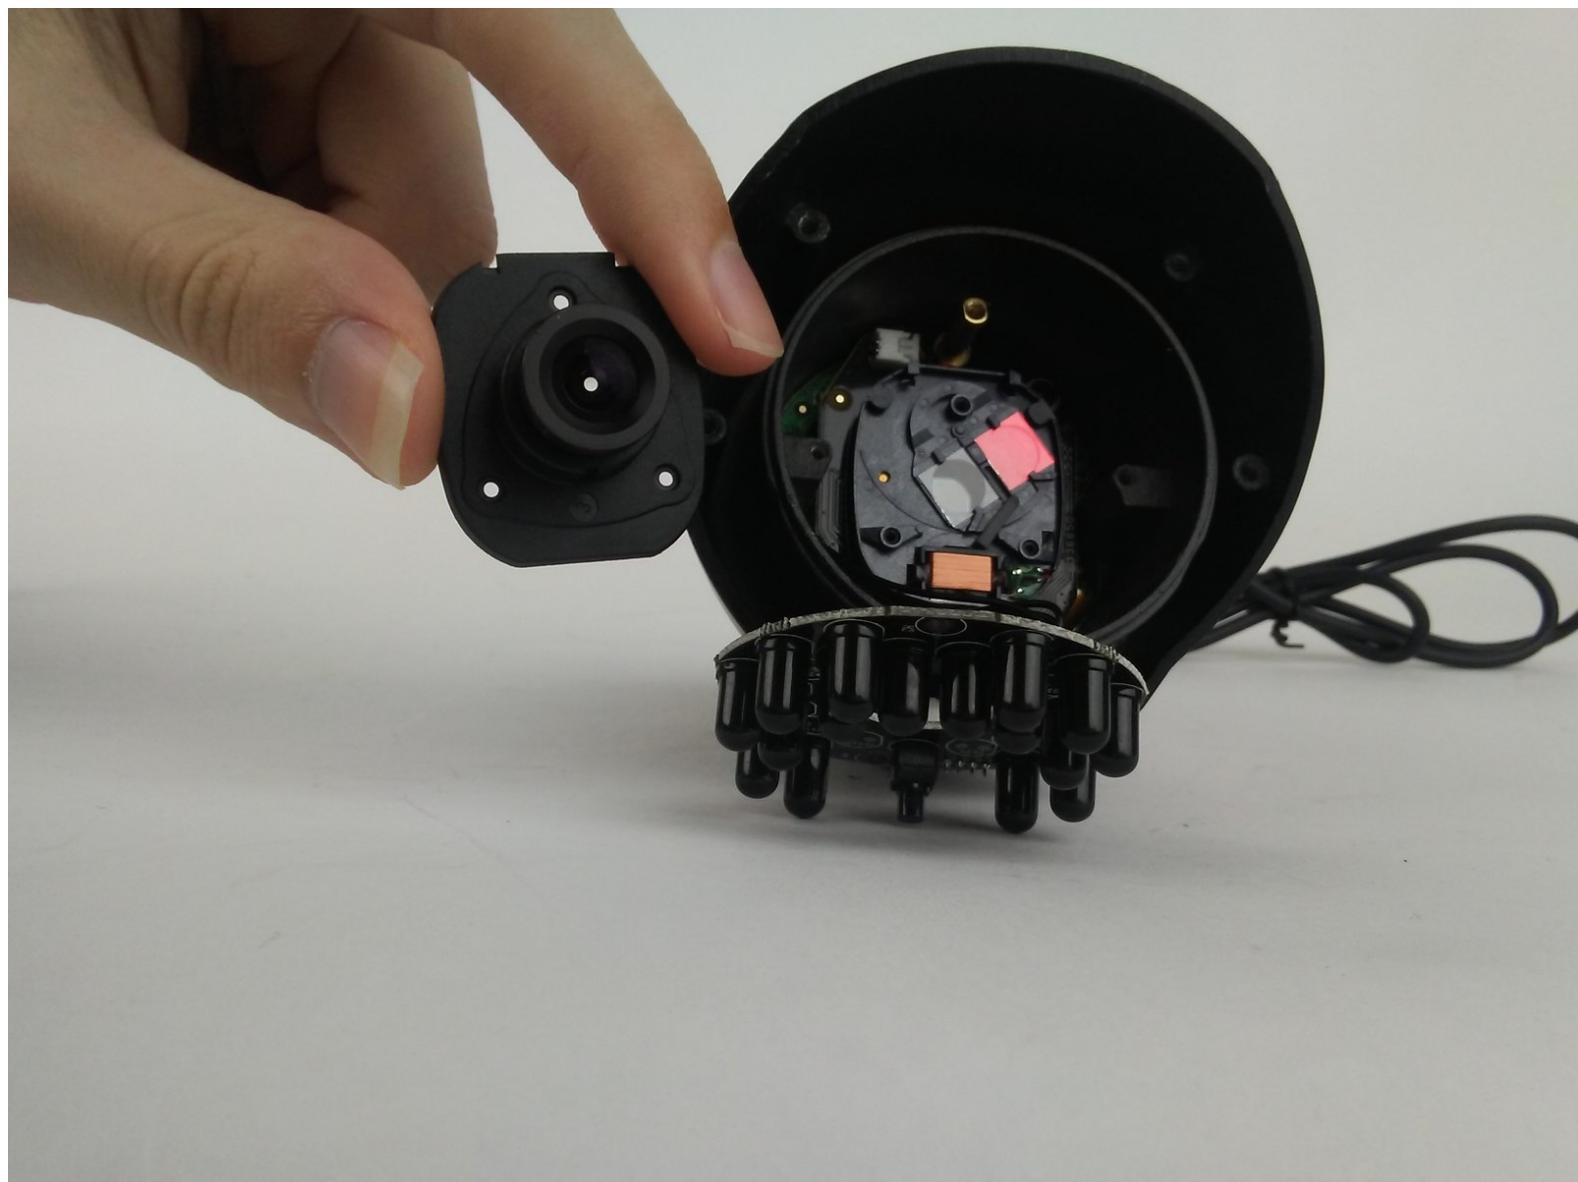

INTRODUCTION

Is there a scratch, chip, or crack in your lens causing your image to be blurry? Replacing the lens may solve this problem.

TOOLS:

- [Tweezers \(1\)](#)
- [T10 Torx Screwdriver \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Lens



- Remove the six 10mm Torx T10 screws on the camera face.

Step 2



- Remove the exterior lens cover.

Step 3



- Remove the foam ring around the lens with tweezers.

⚠ Be aware, the electronic components of the LED board may be compromised if you use your fingers instead of tweezers for this step.


Step 4



- Remove the two 5mm Phillips #1 screws.
- Remove the two 8mm Phillips #0 screws.

📌 When reassembling, tighten the top and bottom 5mm screws first, followed by the left and right 8mm screws.

Step 5

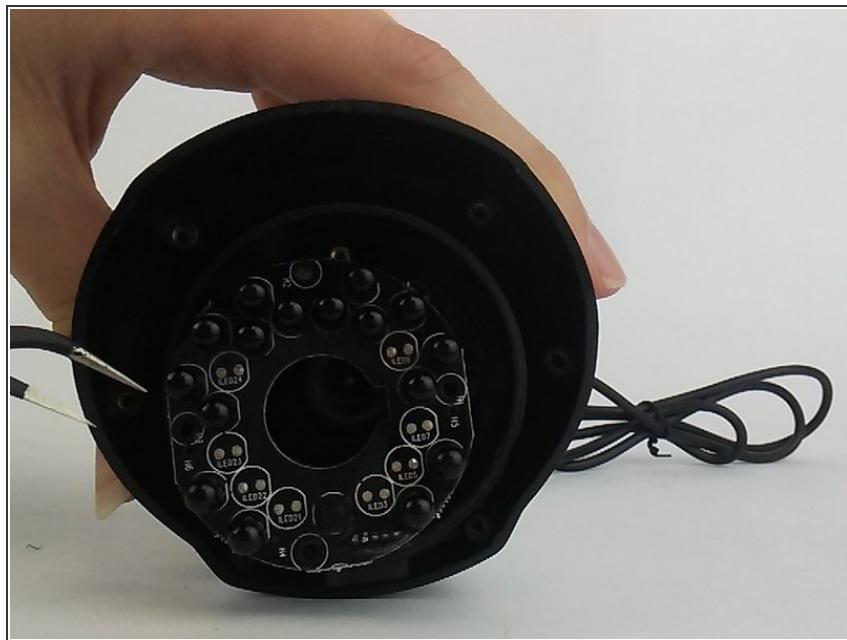

- Remove the LED board with tweezers.


(i) It is unnecessary to unplug the LED board from internal components for lens replacement.

Step 6



- Use the Phillips #000 to remove the three 3mm screws on the face of the camera lens

Step 7

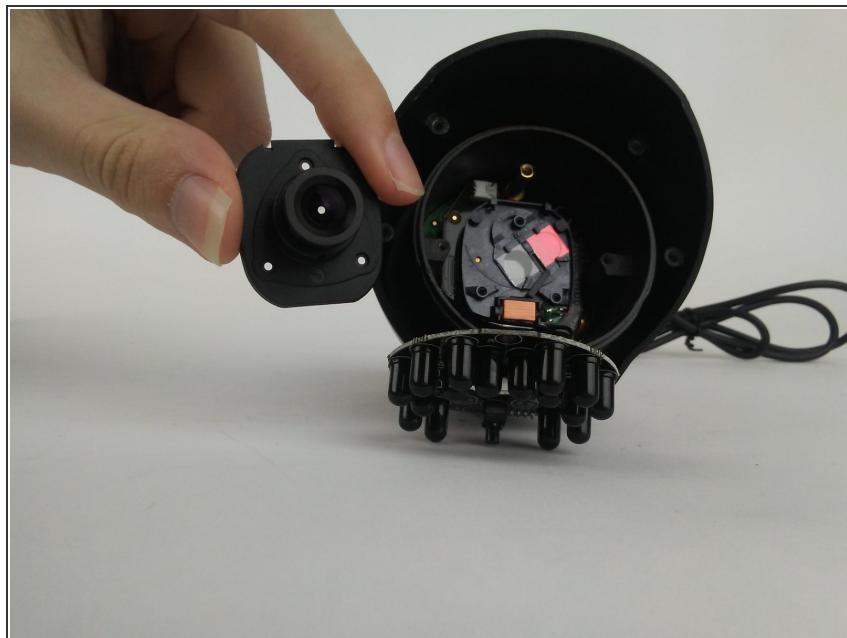

- Remove the camera lens.

(i) After replacing camera lens and before reassembly it is encouraged to clean new lens surface with a microfiber lens cleaning cloth

To reassemble your device, follow these instructions in reverse order.