



# Lorex LW2742 Microphone Replacement

Replacing the microphone on your Lorex LW2742 security camera.

Written By: Alex Kusmierz



## INTRODUCTION

Are your video recording's lacking audio or experiencing audio distortion? Try replacing the microphone to solve this problem.

### **TOOLS:**

- [64 Bit Driver Kit \(1\)](#)
- [Tweezers \(1\)](#)
- [Metal Spudger \(1\)](#)

## Step 1 — Microphone



- Remove the six 10mm Torx T10 screws on camera face.

## Step 2



- Remove the exterior lens cover.

## Step 3



- Remove the LED foam ring with tweezers.

**⚠** Be aware, the electronic components of the LED board may be compromised if you use your fingers instead of tweezers for this step.

## Step 4



- Remove the two 5mm Phillips #1 screws.
- Remove the two 8mm Phillips #0 screws.


**📌** When reassembling, tighten the left and right 8mm screws first. Followed by the top and bottom 5mm screws.

## Step 5



- Remove the two 5mm Phillips #1 screws.

## Step 6

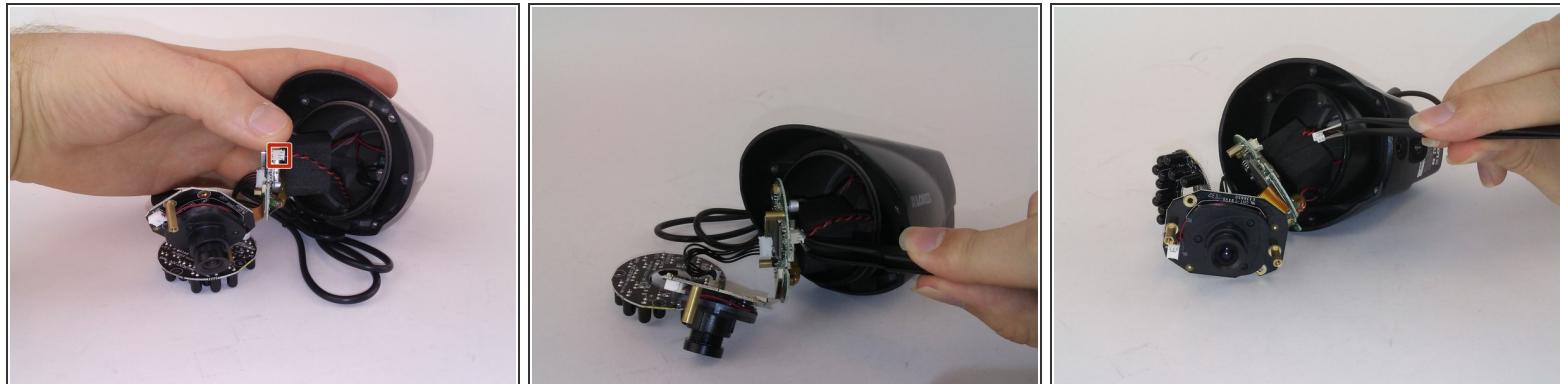

- Use tweezers to disconnect the microphone wires from the internal components of camera.

## Step 7



- Remove the 4mm Flathead #4 screw on the bottom of the camera.
- Remove the weatherproof gasket around the microphone with tweezers.

## Step 8



- Remove the microphone.

**i** Push the microphone from the inside out for easier removal.

To reassemble your device, follow these instructions in reverse order.