



# Lorex LW2742 Night Vision IR LEDs Replacement

Replacing the Night Vision IR LEDs in your Lorex LW2742 security camera.

Written By: craig crisci



## INTRODUCTION

Is your night vision too dark to view, or not working at all? Replacing your camera's Night Vision IR LEDs might solve these problems.

### TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Phillips #1 Screwdriver** (1)
- **Tweezers** (1)
- **T10 Torx Screwdriver** (1)

## Step 1 — Night Vision IR LEDs



- Remove the six 10mm Torx T10 screws on the camera face.

## Step 2



- Remove the exterior lens cover.


## Step 3



- Remove the LED foam ring with tweezers.

**⚠** Be aware, the electronic components of the LED board may be compromised if you use your fingers instead of tweezers for this step.

## Step 4

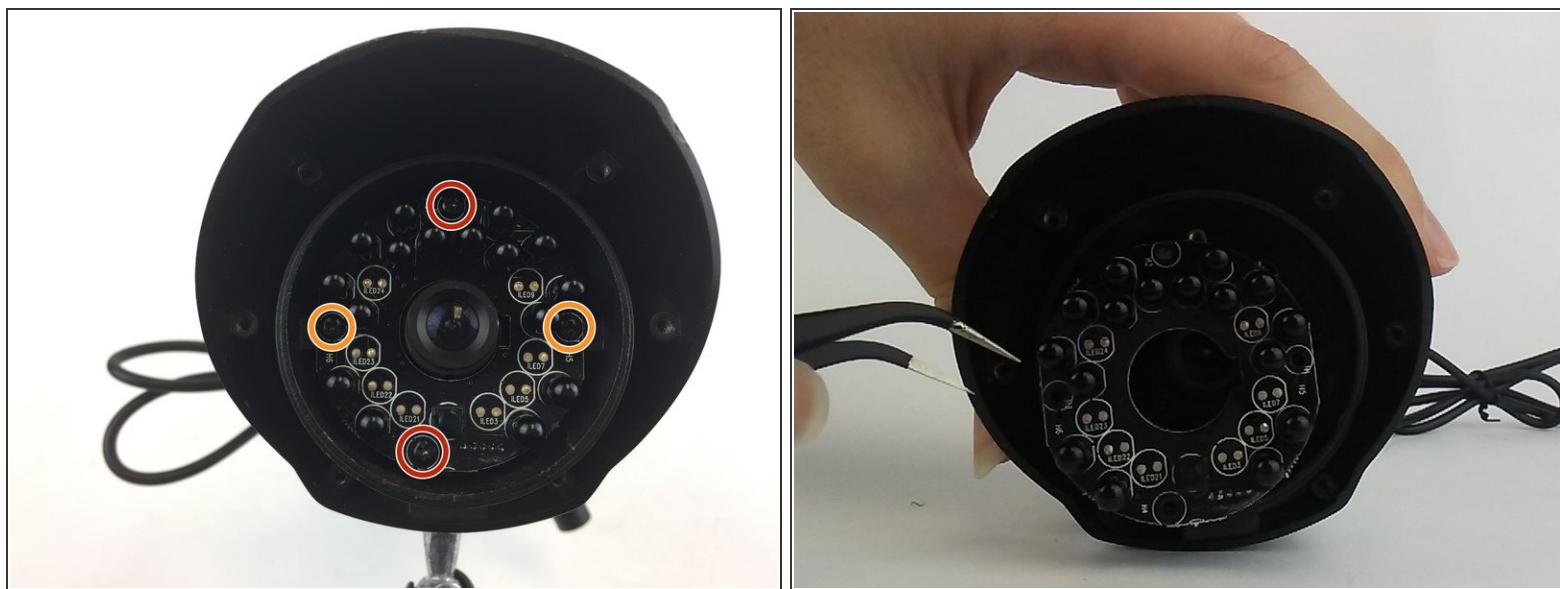


- Remove the two 5mm Phillips #1 screws.

- Remove the two 8mm Phillips #0 screws.

**★** When reassembling, tighten the top and bottom 5mm screws first, followed by the left and right 8mm screws.

## Step 5

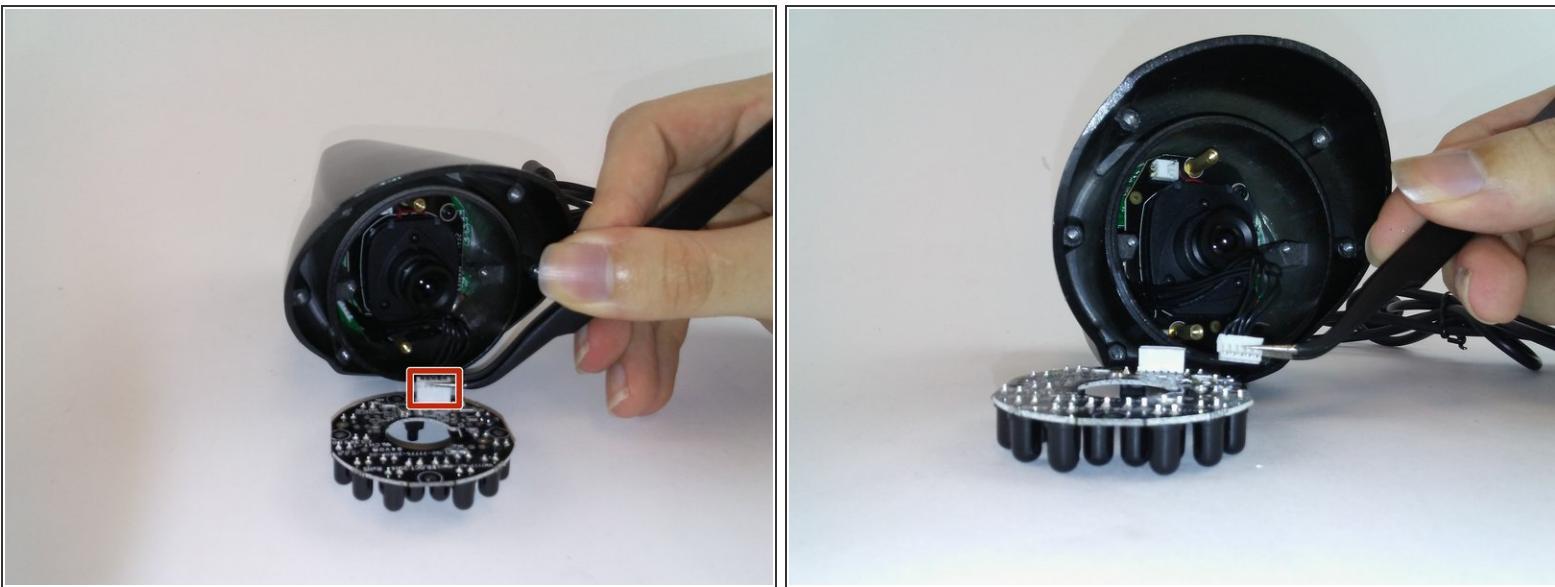

- Use tweezers to unclip the cables to the LED board

To reassemble your device, follow these instructions in reverse order.