





M3t Kiosk Bill Break Maintenance

In this guide you will hopefully learn how to edit the Bill Break on the M3t Kiosk

Written By: Timothy Morse

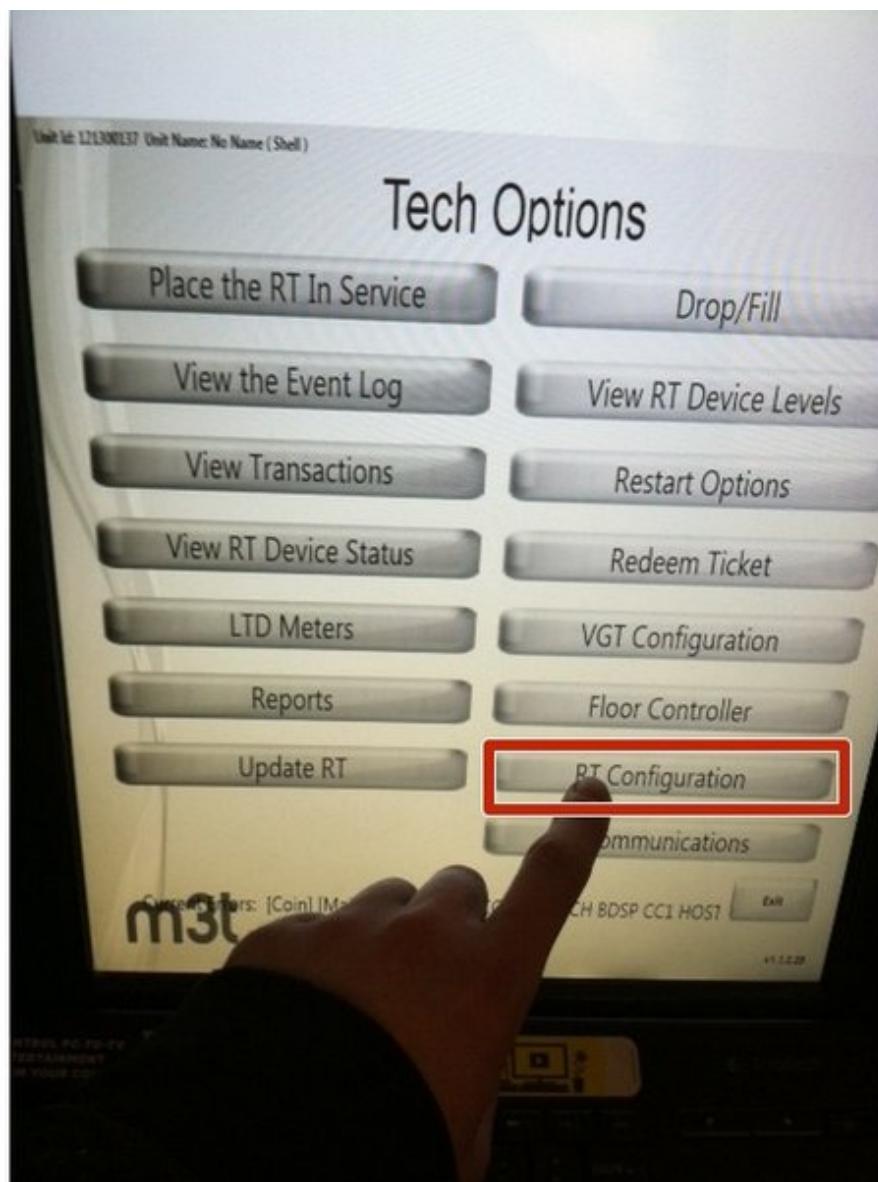


Step 1 — Finding the Bill Break Config

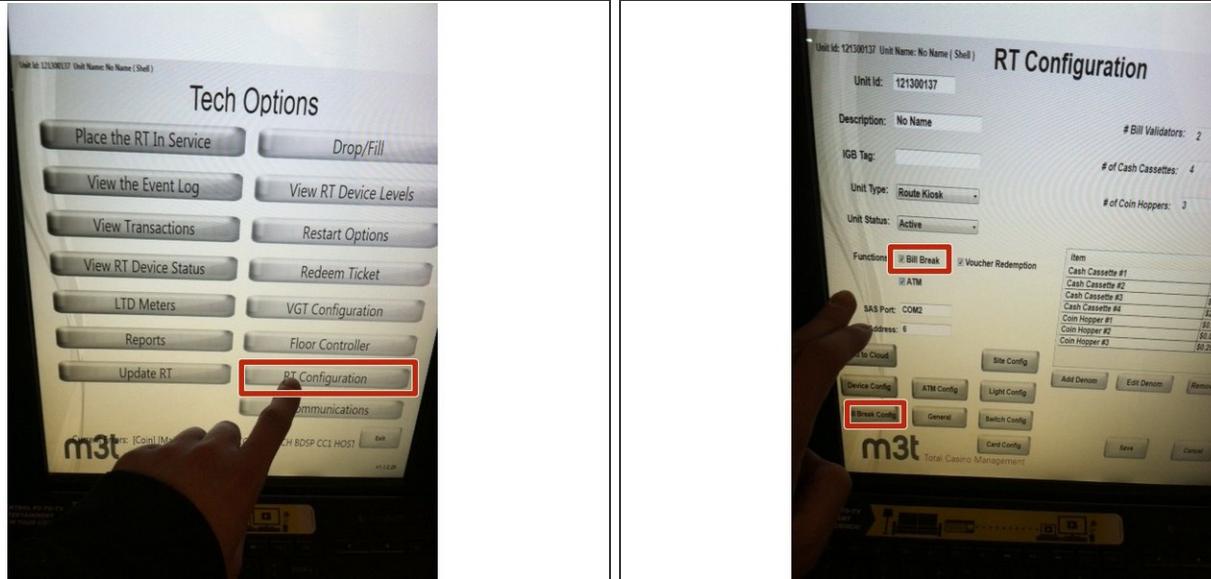

- To turn on the Bill Break function, go to RT config and check the box marked bill break.

Step 2 — Bill Break Config

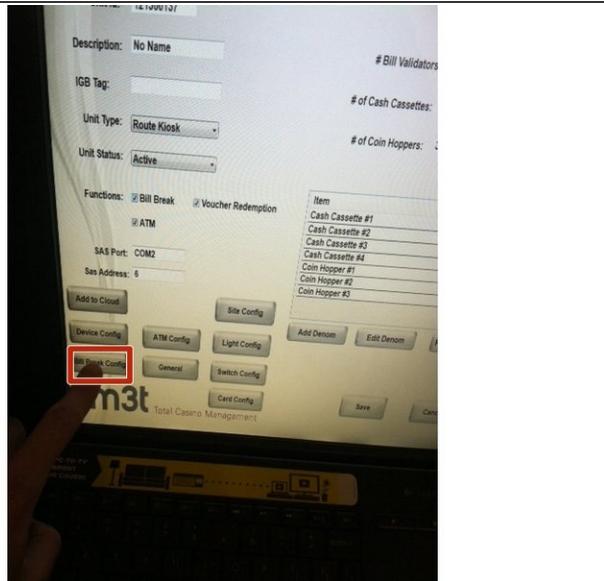

- To configure the Bill Break click on the Bill Break Config button.
- Once you're in there you'll have three options. Add, Edit, and Delete. If you select delete it will get rid of an acceptable denomination.
- Add will bring up a screen where you can select a new denomination that the machine will break and how it's given to you once it is broken.
- In order to select Edit you will have to select one of the already existing denominations. After you've done so and you click Edit it will allow you to change how the denomination is broken.
- If you select delete it will get rid of an acceptable denomination.

To reassemble your device, follow these instructions in reverse order.