




MSI GT62VR 6RD Dominator Battery Replacement

This guide will show you how to remove the battery inside the MSI GT62VR 6RD Dominator.

Written By: Rebekah Johnson

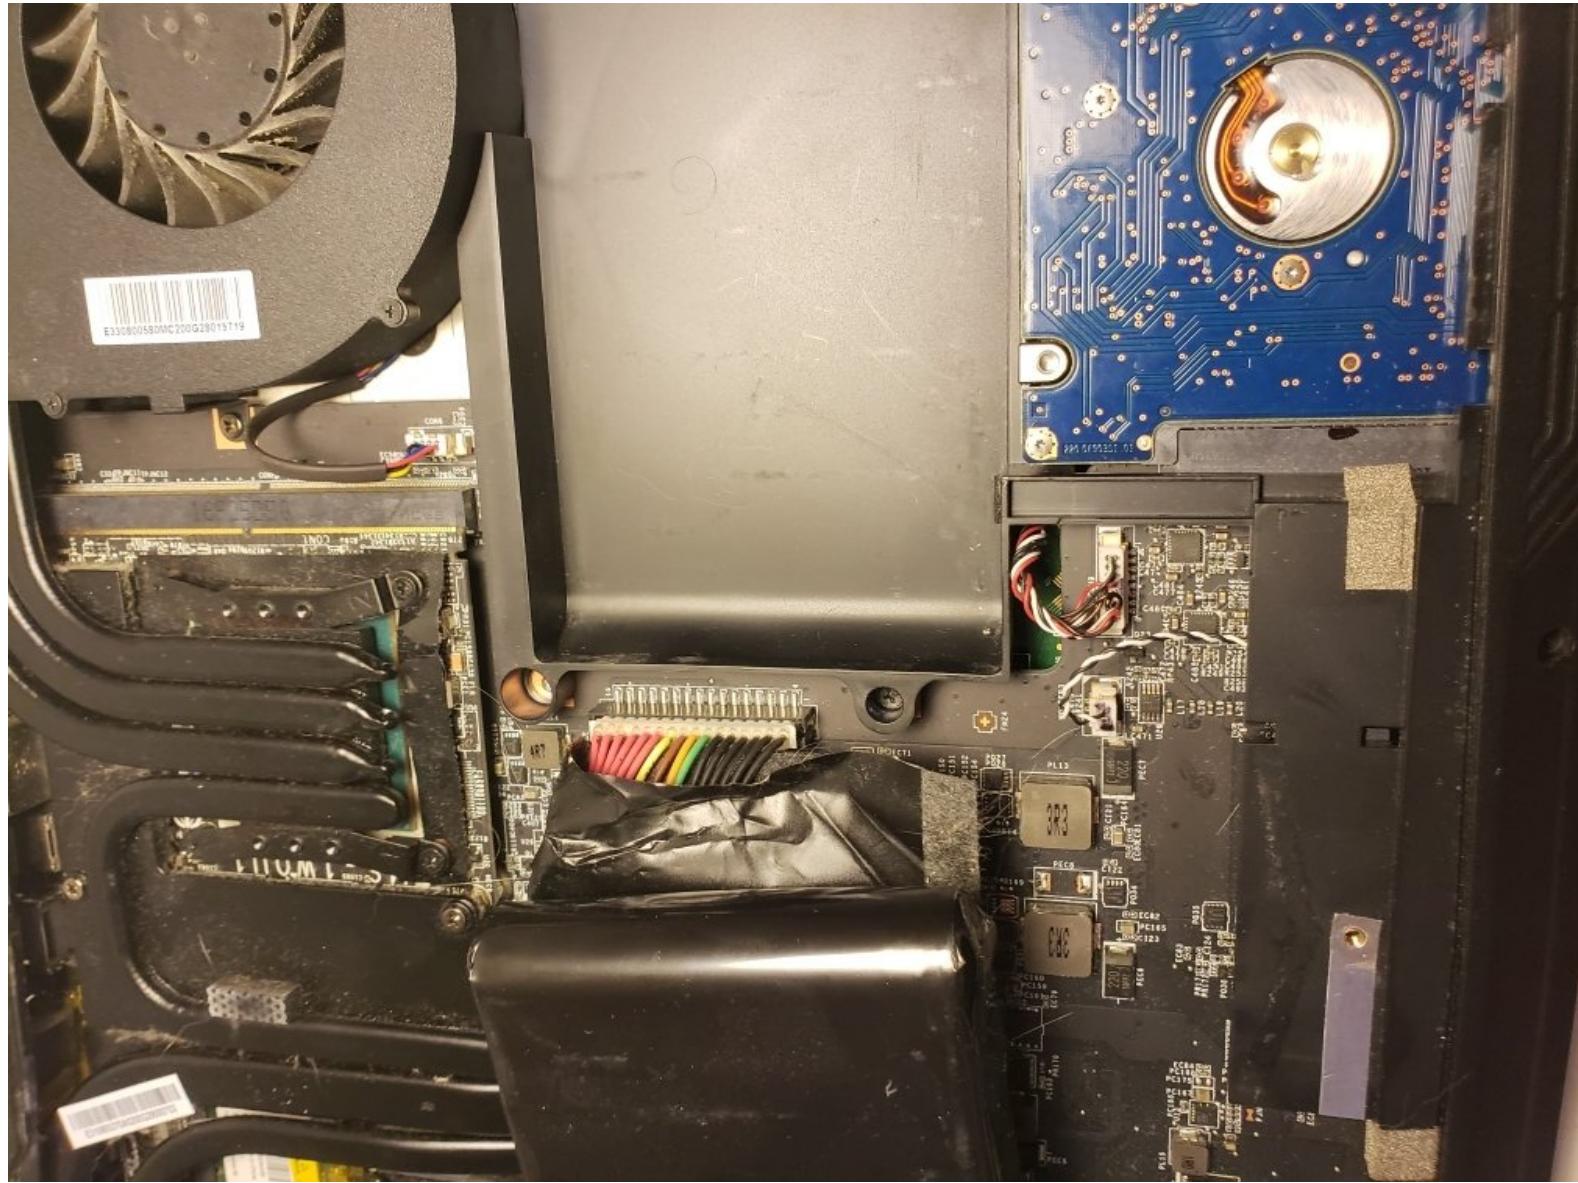

 **TOOLS:**



- [iFixit Opening Tools \(1\)](#)
- [JIS #0 Screwdriver \(1\)](#)

Step 1 — Battery



- Remove the 6 screws on the bottom plate of the laptop using a 1.2mm JIS #0 screwdriver.

Step 2

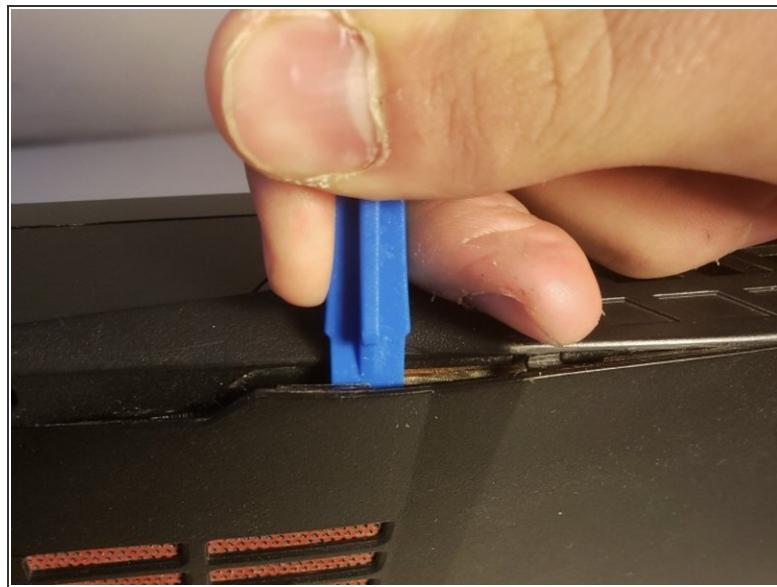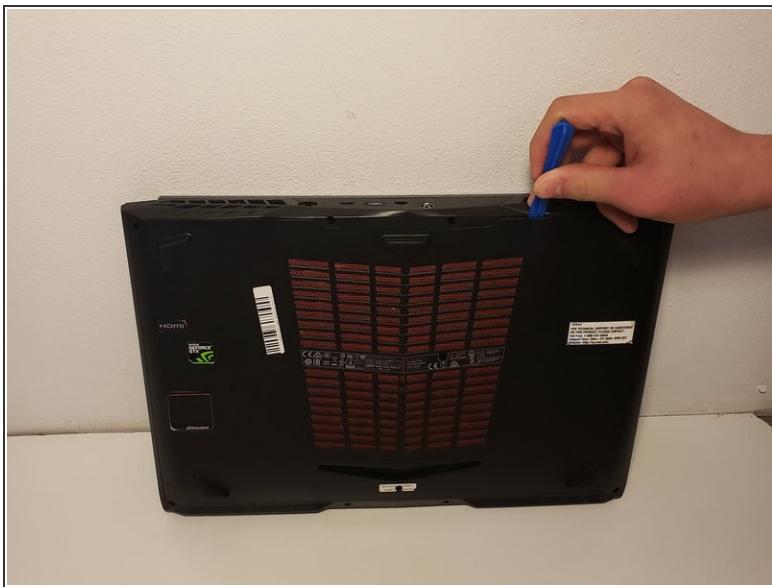

- Insert the plastic opening tool into the back plate of the laptop and lightly pry it up.
- ⚠ The laptop cover will break if it is being handled roughly.
- Slide the plastic opening tool around the laptop's edge gently, slowly popping off the clips securing it into the laptop.

Step 3



- Locate the battery.
- The wires are located at the back end of the battery.
- Place your hands at the corners of the wires.
- Pull upward from the back end of the battery where the wires are located.

To reassemble your device, follow these instructions in reverse order.