




# MSI GT70 MS-1763 Hard Drive Replacement

Step by step guide to replace your hard drive in your MSI GT70 MS-1763

Written By: Brad Dunlap

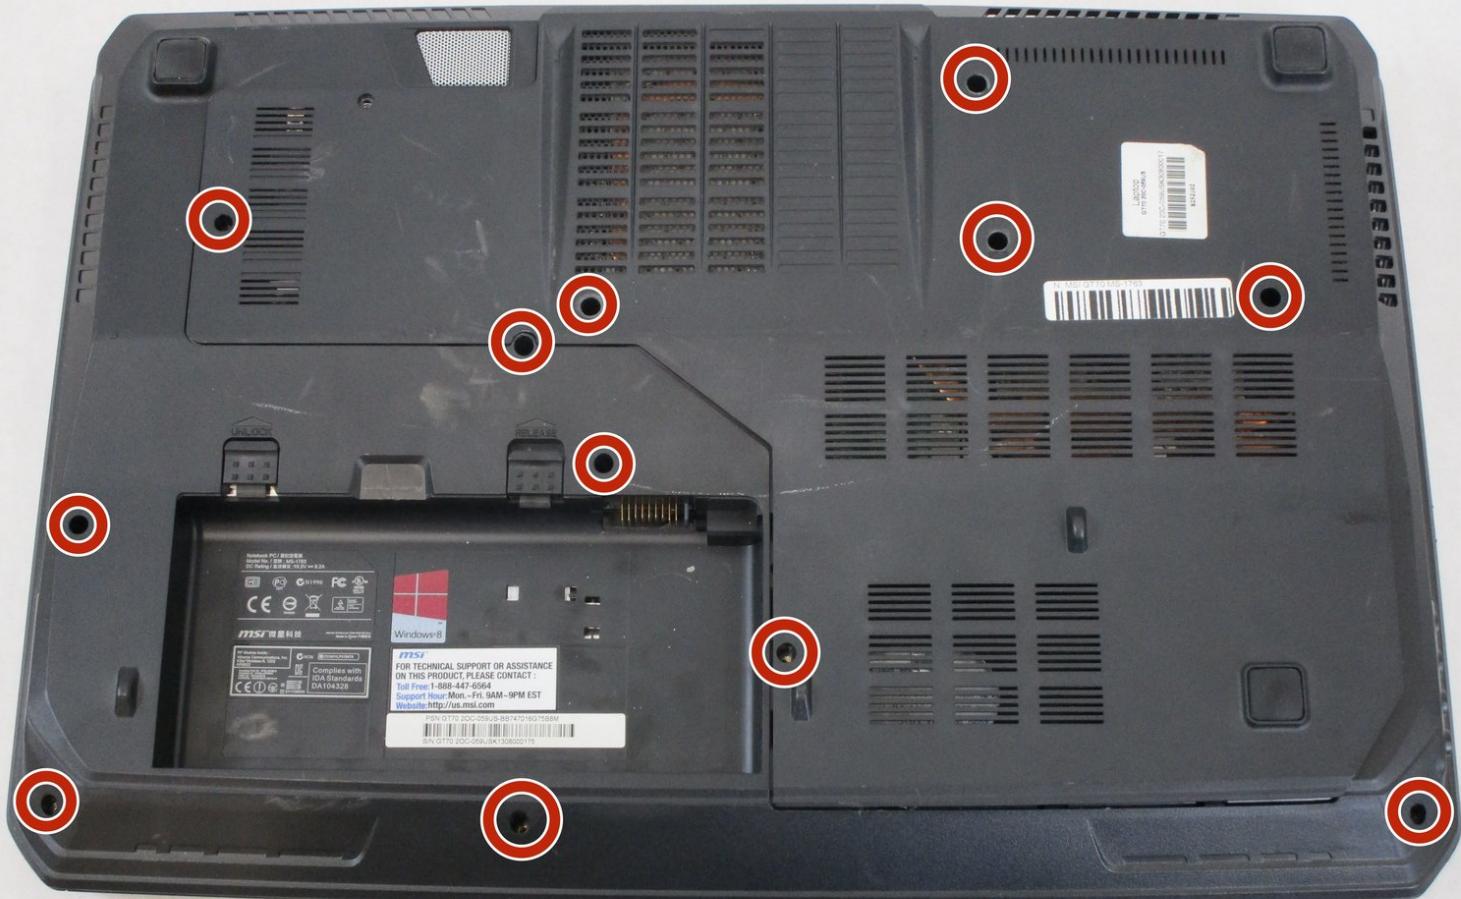

## INTRODUCTION

If your computer keeps crashing or having frequent error messages pop up it most likely your hard drive. Also if the hard drive in your laptop begins to make a loud clicking noise known as "the Click of Death", use this guide to remove and replace your hard drive.

### TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [Jimmy \(1\)](#)

## Step 1 — Battery



- Power off the laptop and turn it over.

## Step 2




- Release the safety latches that hold the battery in place. The left latch will stay moved up, while the right side is spring activated and will have to be held.

## Step 3




- While holding up the left latch, use a Jimmy and slide the old battery out of its compartment.

## Step 4 — Hard Drive

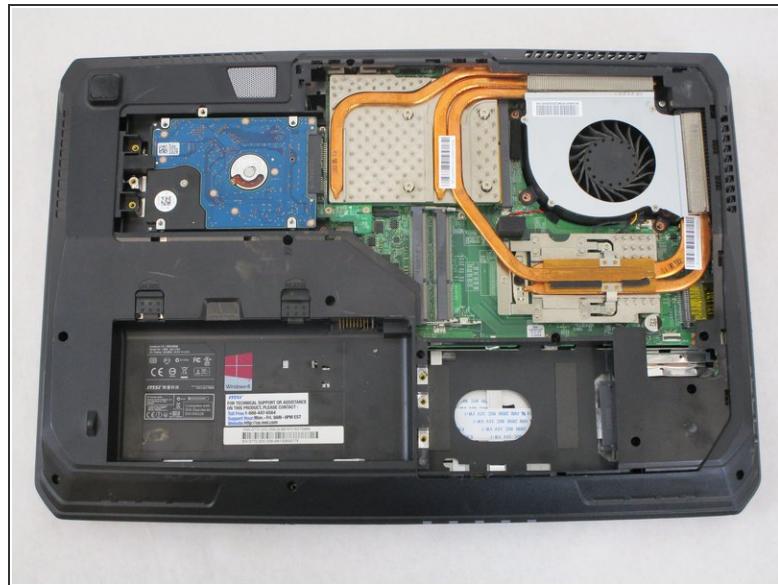


- Remove all twelve 4 mm Phillips #0 screws from the back of the laptop.
- Remove the back cover.

## Step 5

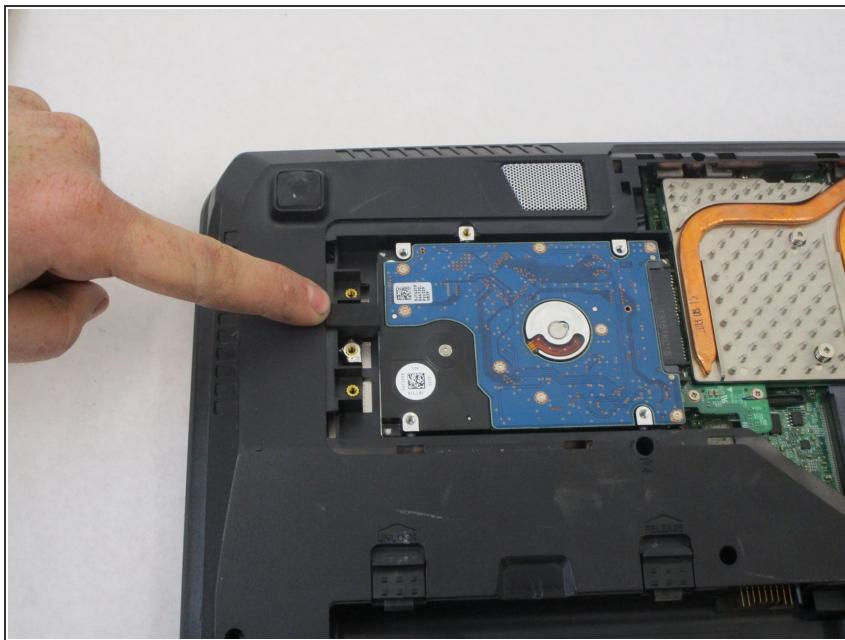

- Remove the rubber spacer holding the hard drive secure.

## Step 6

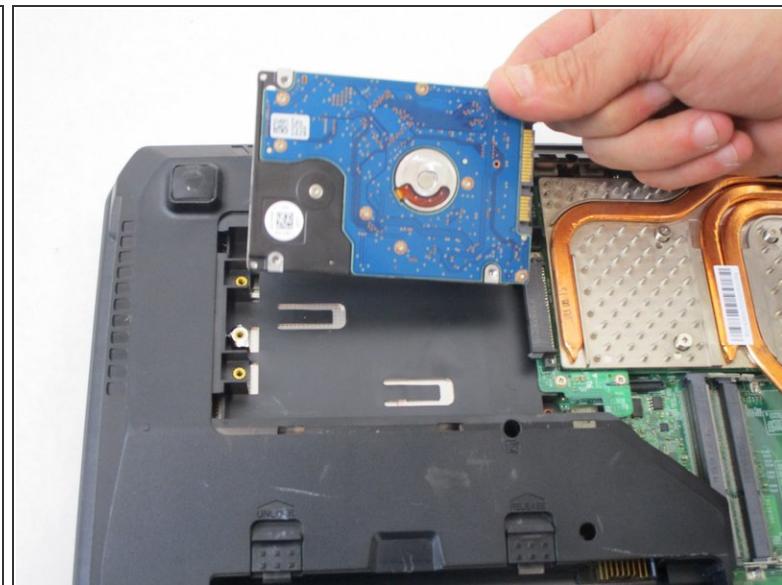

- Slide the hard drive to the left, removing it from its bay.

To reassemble your device, follow these instructions in reverse order.