



MacBook Air 11" Early 2014 Fan Replacement

Replace the Fan in your MacBook Air 11" Early 2014.

Written By: Sam Goldheart



INTRODUCTION

Use this guide to replace a broken or noisy fan.

TOOLS:

- [P5 Pentalobe Screwdriver Retina MacBook Pro and Air \(1\)](#)
- [Spudger \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

PARTS:

- [MacBook Air 11" \(Mid 2011 to Early 2014\) Fan \(1\)](#)

Step 1 — Lower Case



i Shut down and close your computer. Lay it on a soft surface top-side down.

- Remove the following ten screws:
 - Two 8 mm 5-point Pentalobe screws
 - Eight 2.5 mm 5-point Pentalobe screws


i The special screwdriver needed to remove the 5-point Pentalobe screws can be found [here](#).

Step 2



- Wedge your fingers between the display and the lower case and pull upward to pop the lower case off the Air.


Step 3 — Battery Connector

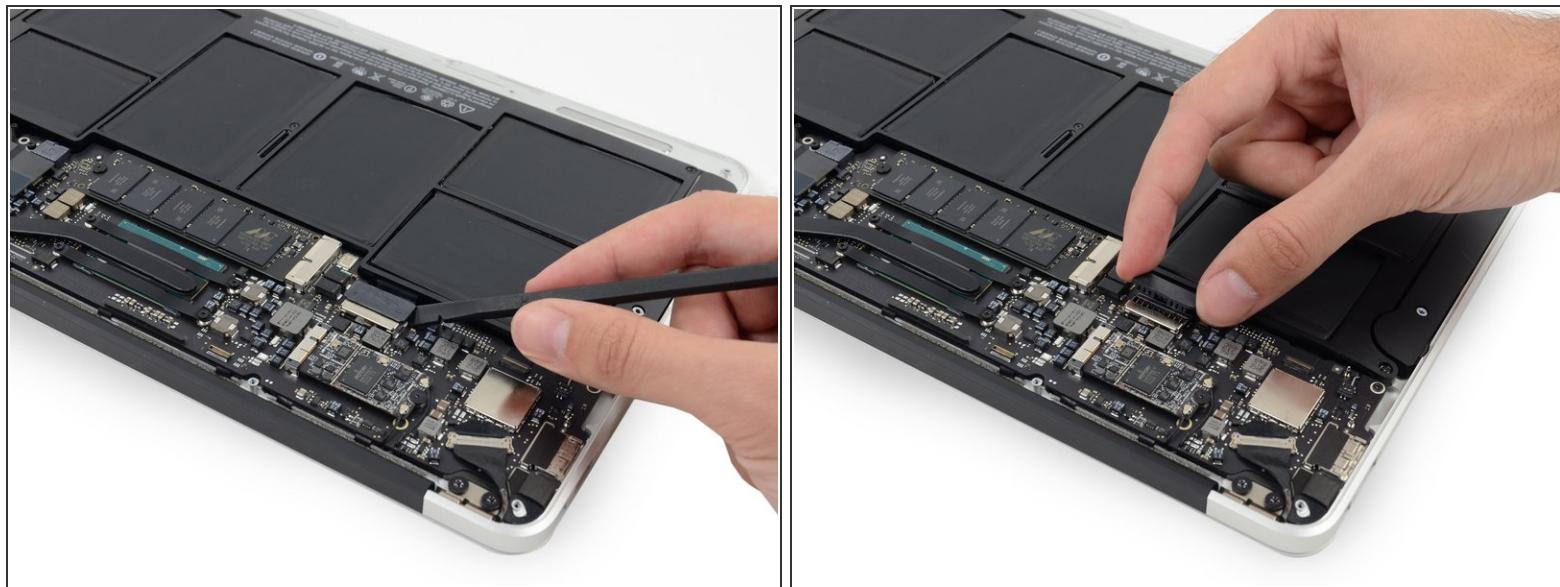

⚠ In this step you will disconnect the battery to help avoid shorting out any components during service.

- Use the flat end of a spudger to pry both short sides of the battery connector upward to disconnect it from its socket on the logic board.
- Bend the battery cable slightly away from the logic board so the connector will not accidentally bend back and make contact with its socket.

Step 4 — I/O Board Cable

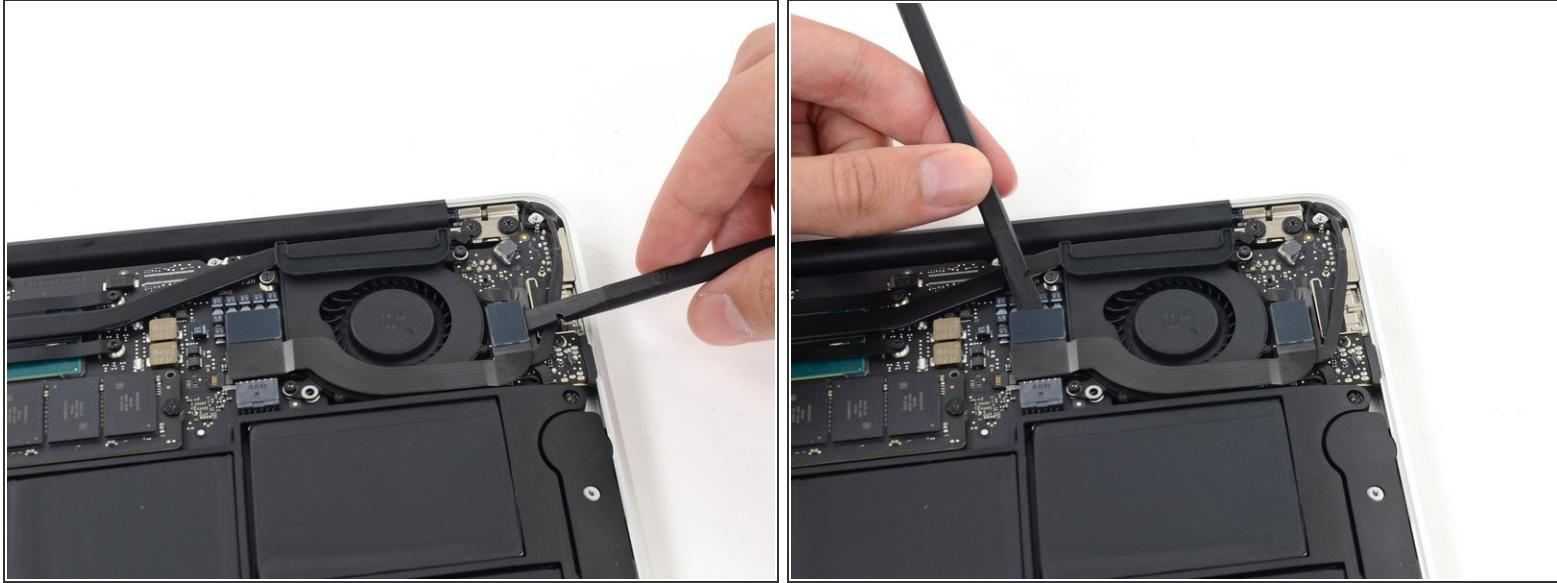



- Use the flat end of a spudger to pry the left and right I/O board cable connectors up off their respective sockets on the I/O board.

Step 5



- Lift and remove the I/O board cable.

Step 6 — Fan

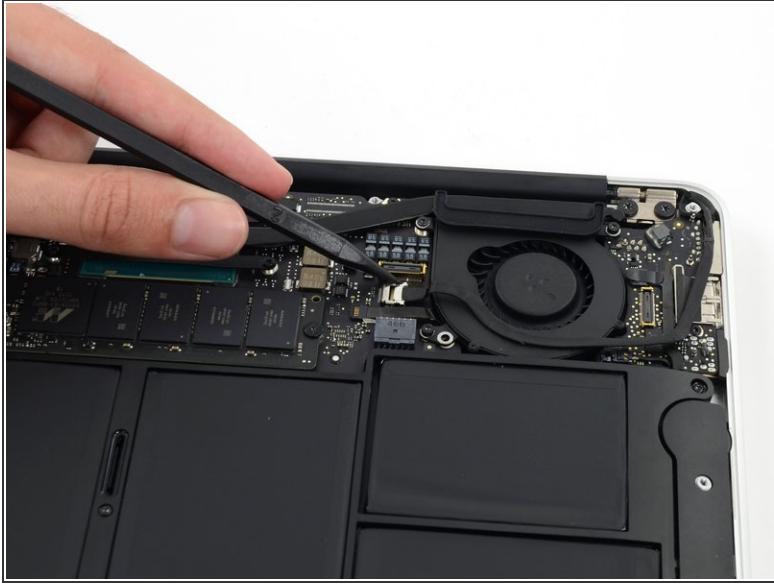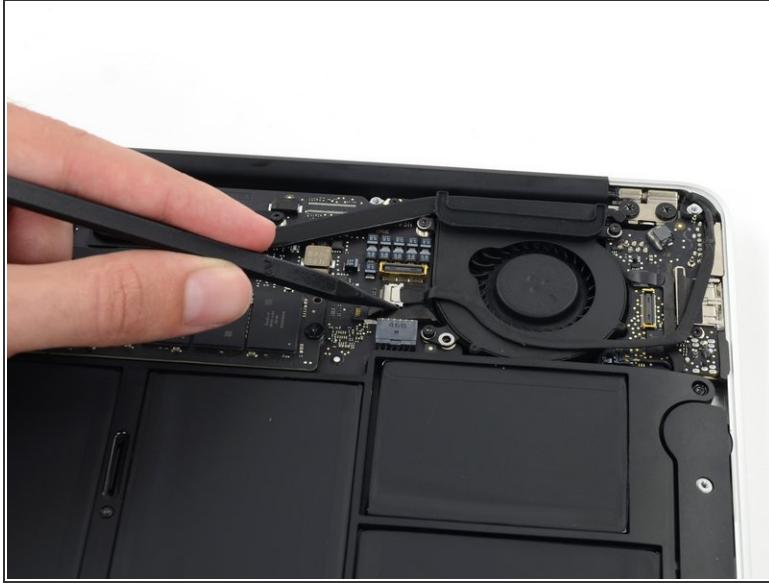


- Use the tip of a spudger to carefully push on each side of the iSight camera cable connector to loosen it out of its socket on the logic board.
- *(i)* We recommend you gently "walk" the connector out of its socket.

Step 7



- Peel the iSight camera cable up off the adhesive securing it to the fan.

Step 8

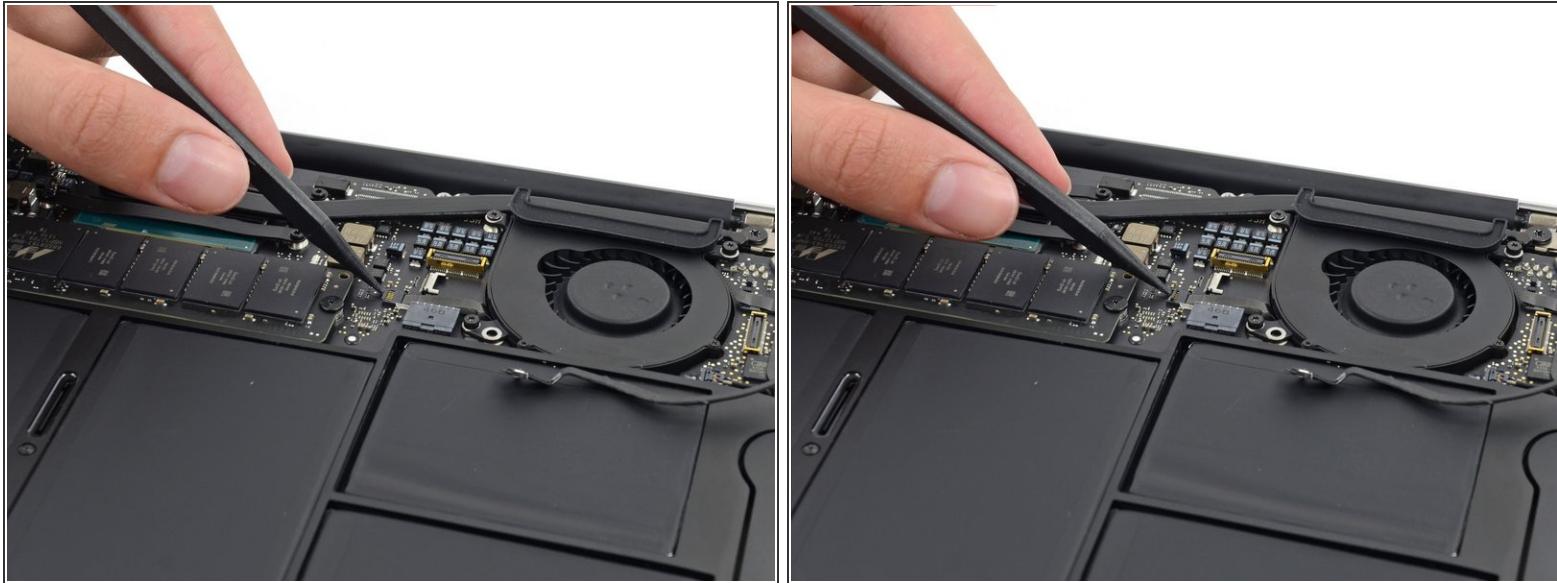

- Use the tip of a spudger to carefully flip up the retaining flap on the fan cable ZIF socket.

⚠ Be sure you are prying up on the hinged retaining flap, **not** the socket itself.

Step 9



- Remove the following three screws securing the fan to the upper case:
 - Two 5.5 mm T5 Torx screws
 - One 4.6 mm T5 Torx screw

ⓘ In some models this is a 3.6 mm T5 Torx screw.

Step 10



- Lift, but **do not** remove the fan out of its recess in the upper case.
- Carefully pull the fan ribbon cable out of its socket as you remove the fan from the Air.

To reassemble your device, follow these instructions in reverse order.