




# MacBook Air 11" Late 2010 Battery Replacement

Internal Prereq for battery removal when fan is out.

Written By: Andrew Bookholt

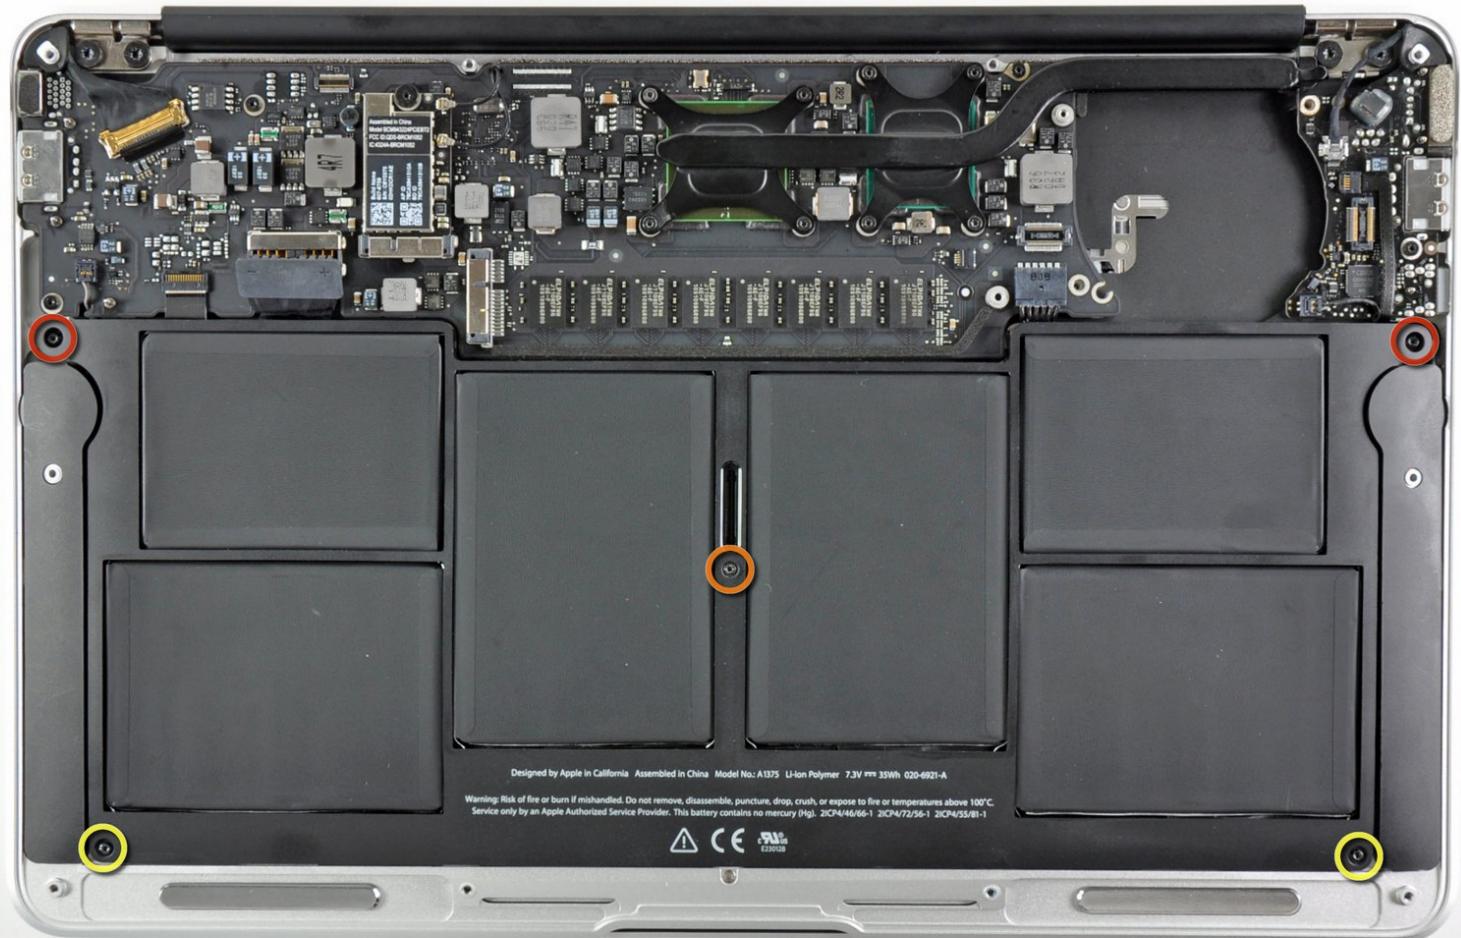


# INTRODUCTION

Internal Prereq for battery removal when fan is out.

## TOOLS:

- T5 Torx Screwdriver (1)

## Step 1 — Battery

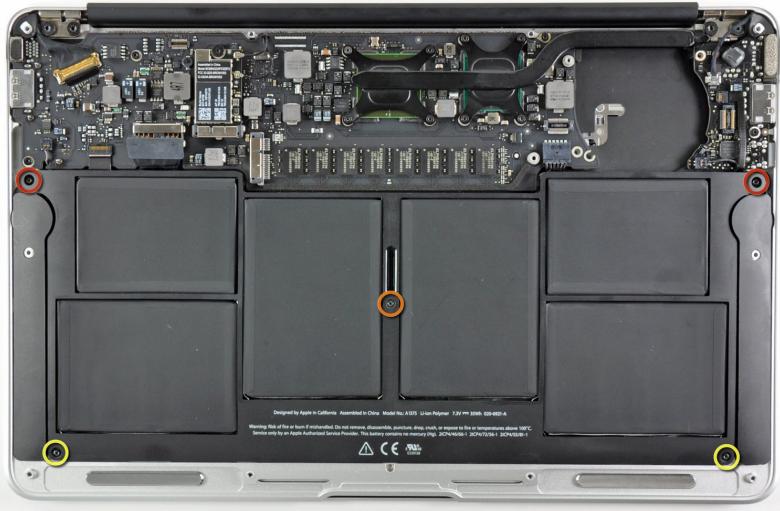

- Remove the following five screws securing the battery to the upper case:
  - Two 5.2 mm T5 Torx screws
  - One 6 mm T5 Torx screw
  - Two 2.6 mm T5 Torx screws

## Step 2



 Do not touch or squeeze the six lithium polymer cells when handling the battery.

- Lift the battery from its edge nearest the logic board and remove it from the upper case.

To reassemble your device, follow these instructions in reverse order.