




# MacBook Air 11" Mid 2011 Battery Replacement

Written By: Walter Galan

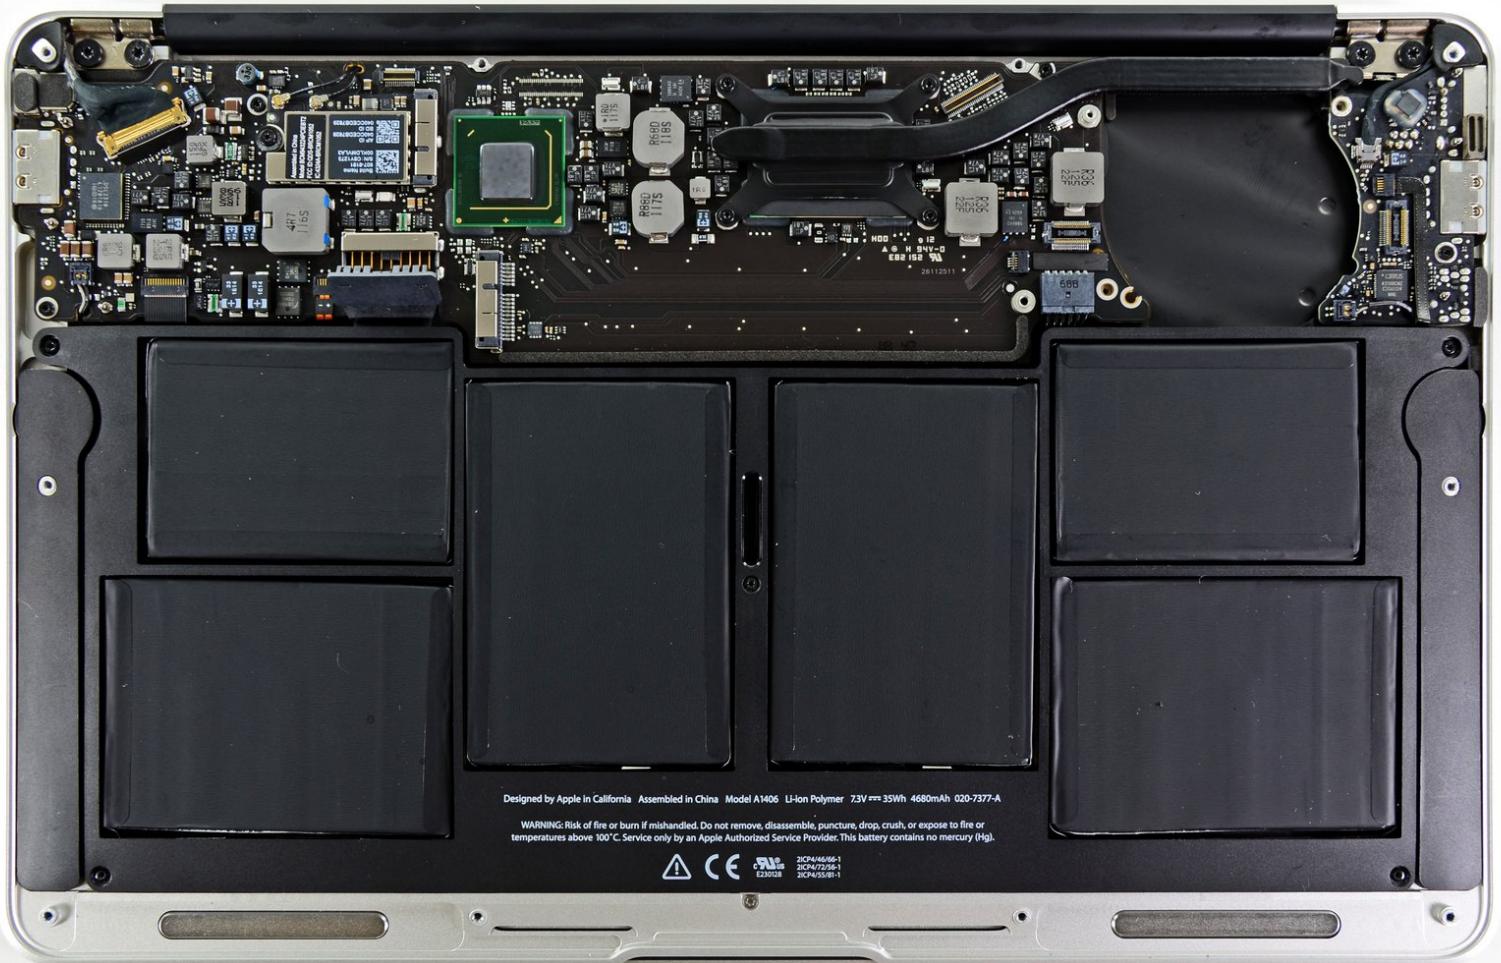

Designed by Apple in California. Assembled in China. Model A1406. Li-Ion Polymer. 7.3V == 35Wh 4680mAh 020-7377-A

WARNING: Risk of fire or burn if mishandled. Do not remove, disassemble, puncture, drop, crush, or expose to fire or temperatures above 100°C. Service only by an Apple Authorized Service Provider. This battery contains no mercury (Hg).




## INTRODUCTION

Internal Prereq for battery removal when fan is out.

### TOOLS:


- T5 Torx Screwdriver (1)

## Step 1 — Battery

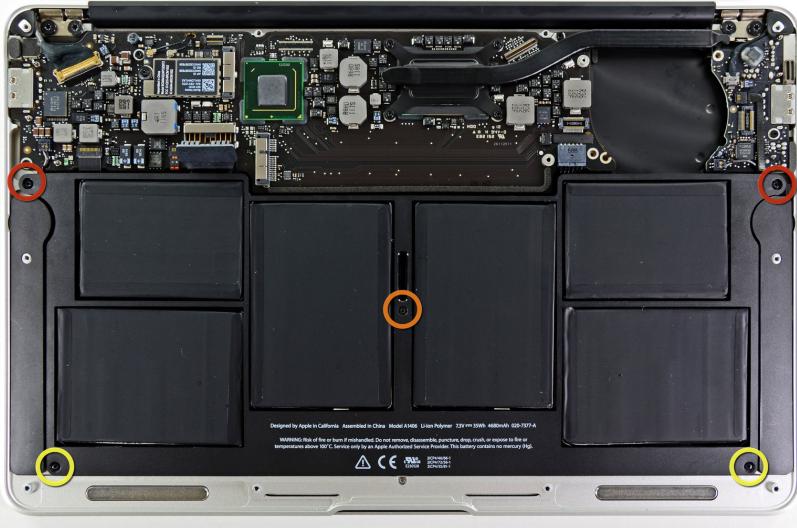

- Remove the following five screws securing the battery to the upper case:
  - Two 5.2 mm T5 Torx screws
  - One 6 mm T5 Torx screw
  - Two 2.6 mm T5 Torx screws

## Step 2

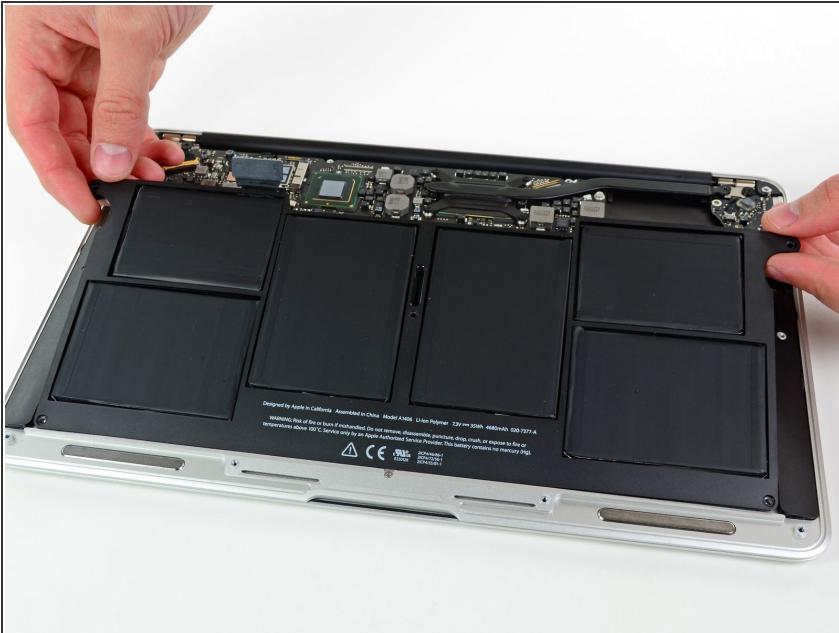

**⚠** Do not touch or squeeze the six lithium polymer cells when handling the battery.

- Lift the battery from its edge nearest the logic board and remove it from the upper case.

To reassemble your device, follow these instructions in reverse order.