




# MacBook Air 13" Mid 2013 Display Screws Replacement

prereq for removing IO board side display screws and heatsink screw

Written By: Andrew Optimus Goldheart

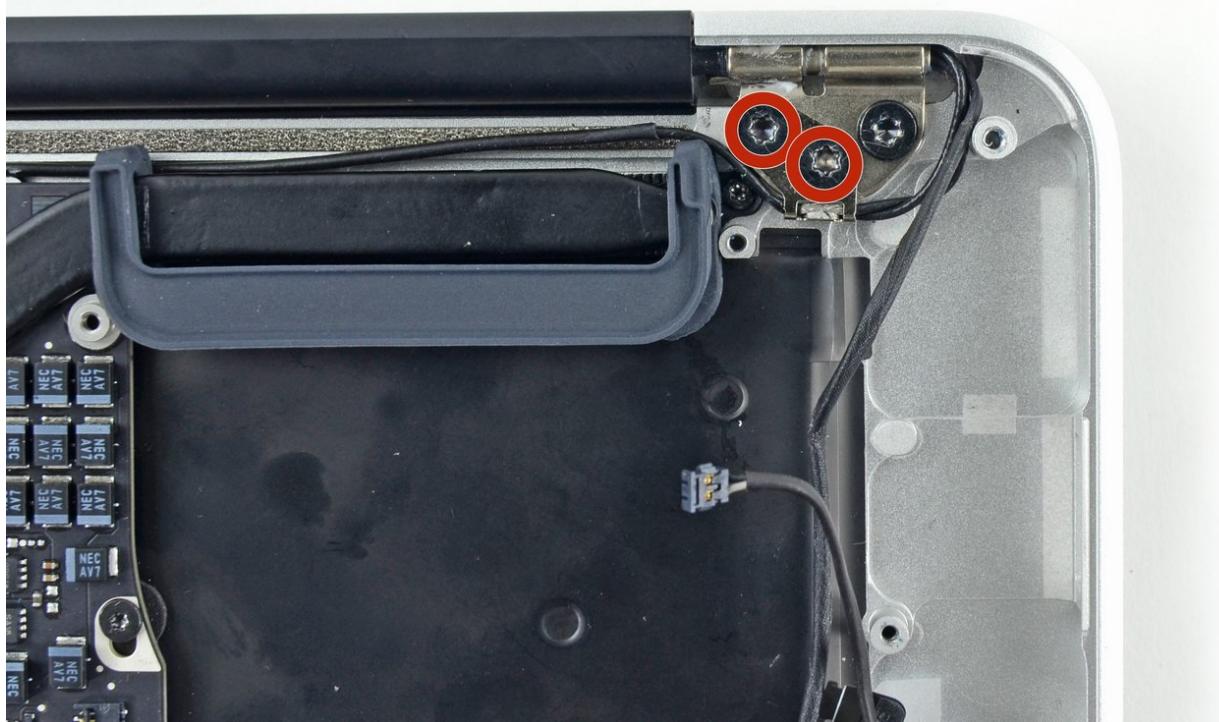

## INTRODUCTION

prereq for removing IO board side display screws and heatsink screw

### TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [T8 Torx Screwdriver](#) (1)

## Step 1 — Display Screws



- Remove the two 4.9 mm T8 Torx screws securing the antenna cable retainer on the left display hinge to the upper case.

## Step 2

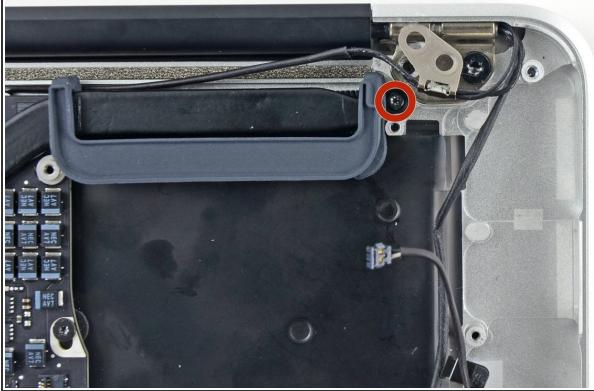

- Push the antenna cable retainer out of the way and remove the single 3 mm T5 Torx screw securing the end of the heat sink to the upper case.

To reassemble your device, follow these instructions in reverse order.