



MacBook Unibody Model A1278 Subwoofer & Right Speaker Replacement

Written By: Walter Galan



INTRODUCTION

Restore sound to your laptop by replacing the subwoofer and right speaker.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [JIS #00 Screwdriver](#) (1)

PARTS:

- [MacBook Unibody \(Model No. A1278\) Subwoofer and Right Speaker](#) (1)

Step 1 — Access Door



- With the case closed, place the Unibody top-side down on a flat surface.
- Depress the grooved side of the access door release latch enough to grab the free end. Lift the release latch until it is vertical.

Step 2




- The access door should now be raised enough to lift it up and out of the Unibody.

Step 3 — Battery



- Be sure the access door release latch is vertical before proceeding.
- Grab the white plastic tab and pull the battery up and out of the Unibody.

Step 4 — Lower Case

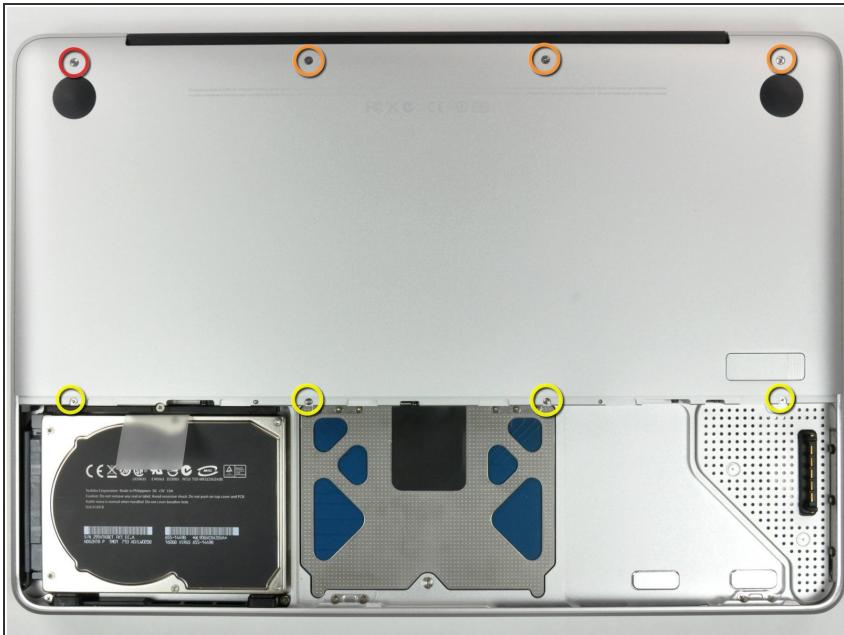

- Remove the following eight screws securing the lower case to the chassis:
 - One 3 mm Phillips screw.
 - Three 13.5 mm Phillips screws.
 - Four 3.5 mm Phillips screws.

Step 5



- Using both hands, lift and remove the lower case off the upper case.

Step 6 — Optical Drive




- Using the flat end of a spudger, pry the subwoofer connector straight up off the logic board.

Step 7




- Disconnect the camera cable by pulling the male end straight away from its socket.

Step 8

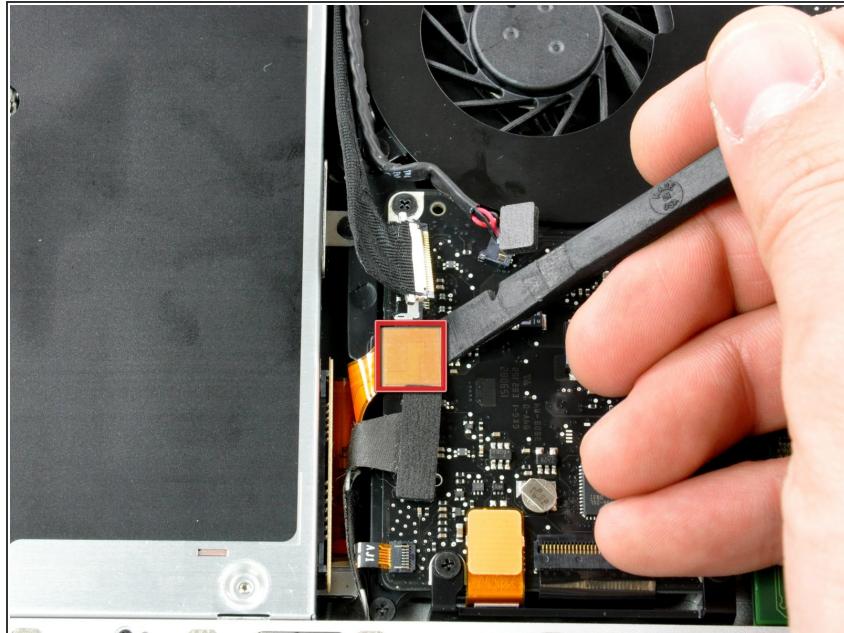

- Use a spudger to pry the optical drive connector straight up off the logic board.


Step 9

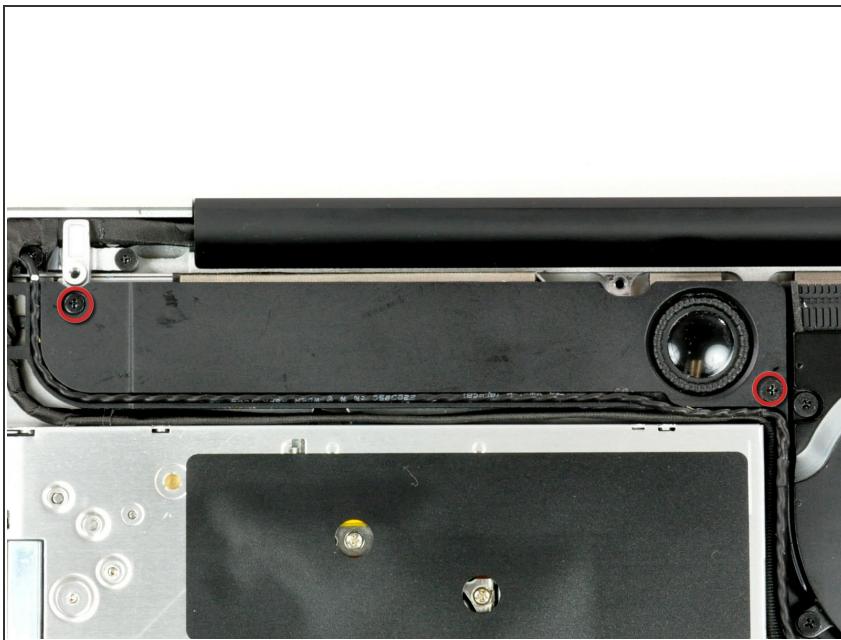

- Remove the two Phillips screws securing the subwoofer to the upper case.

(i) The longer of the two screws is on the right.


Step 10

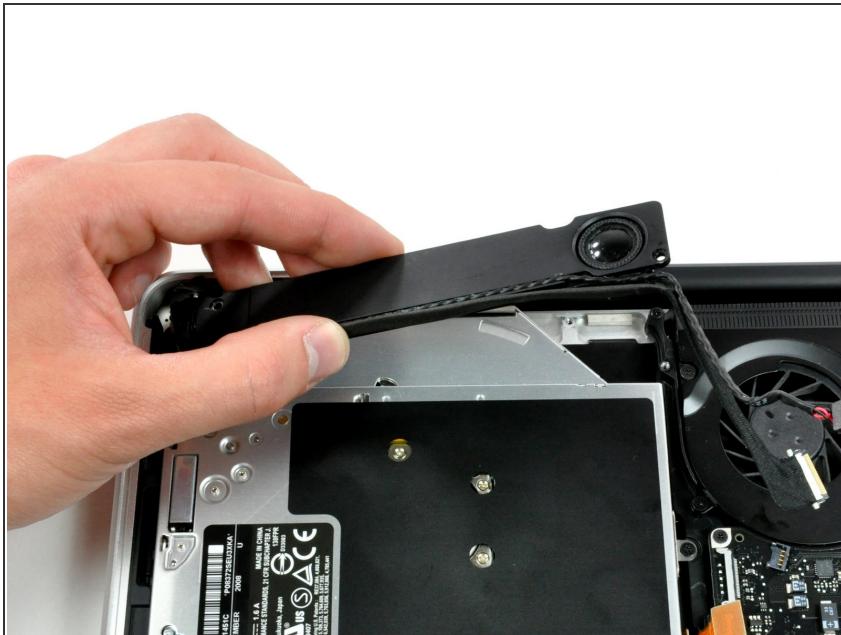

(i) The subwoofer is still connected to the right speaker, so don't completely remove it just yet.

- Lift the subwoofer off the optical drive, and set it above the computer.

Step 11

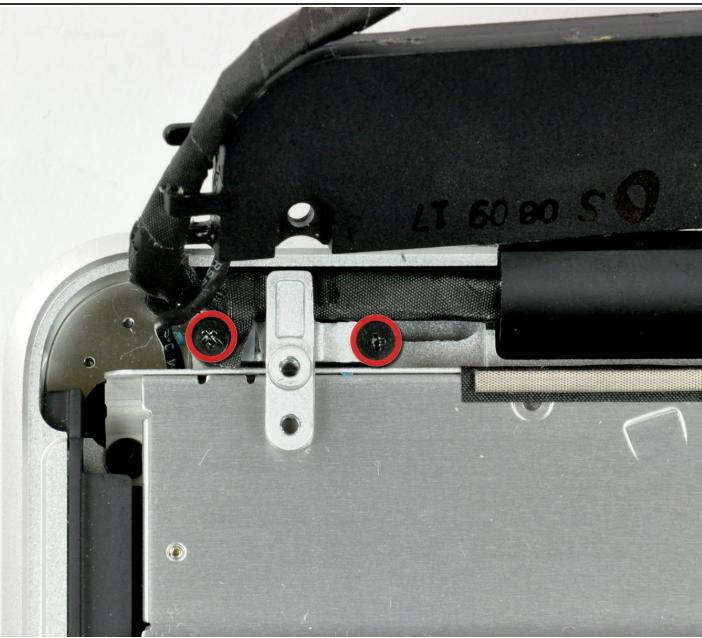


- Remove the two Phillips screws securing the camera cable bracket to the upper case.
- The leftmost screw may remain captive in the camera cable.*

Step 12



- Remove the three 2.5 mm Phillips screws securing the optical drive to the upper case.

Step 13

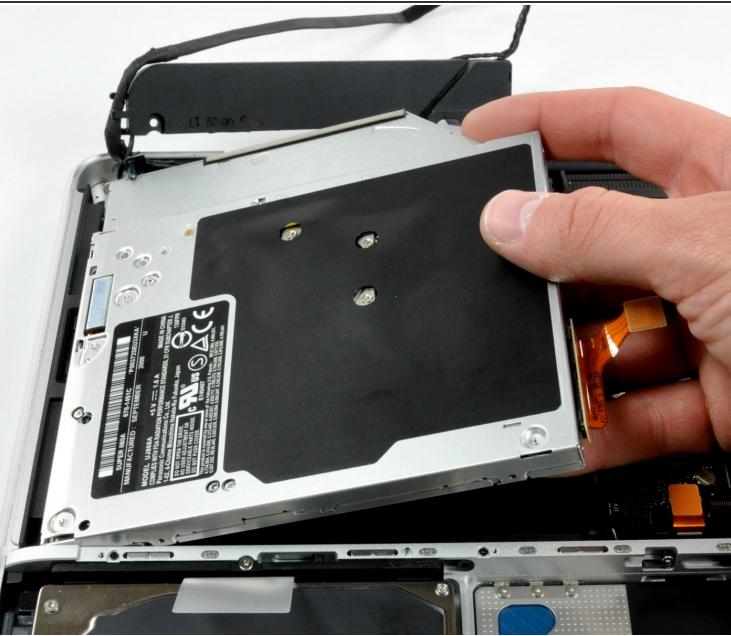

- Lift the optical drive from its right edge and pull it out of the computer.

- ☒ The hard drive cable may become disconnected from the logic board when removing the optical drive. Ensure it is connected during reassembly.

Step 14 — Subwoofer & Right Speaker



- Peel back the small piece of black tape covering the right speaker cable.
- Use the tip of a spudger to pry the right speaker up off the adhesive securing it to the upper case.
- Lift the subwoofer and right speaker assembly out of the upper case.

To reassemble your device, follow these instructions in reverse order.