



# Magna Outreach Rear tire Replacement

This guide will show you how to replace the tire on a Magna Outreach.

Written By: West Johnson



## INTRODUCTION

If you need to replace the tire or inner tube, this guide will show you how to remove the rear wheel and remove both the tire and inner tube.

### TOOLS:

- [Tire Levers](#) (1)
- [Adjustable Wrench](#) (1)

## Step 1 — Rear Tire



- Disconnect the rear brake cable

## Step 2



- Flip the bike over so that it is resting on the seat and handlebars.
- Use an adjustable wrench to remove the nuts on both sides of the wheel that hold the wheel to the frame.
- Lift the tire away from the frame and chain.

## Step 3



- Insert one tire lever under the tire and hook it onto a spoke. Insert the other tire lever next to the first and slide it along the rim to remove one side of the tire from the rim.

## Step 4



- Starting at the valve, pull the inner tube out of the gap between the rim and the tire.

## Step 5



- Pull the tire away from the rim.

To reassemble your device, follow these instructions in reverse order.