


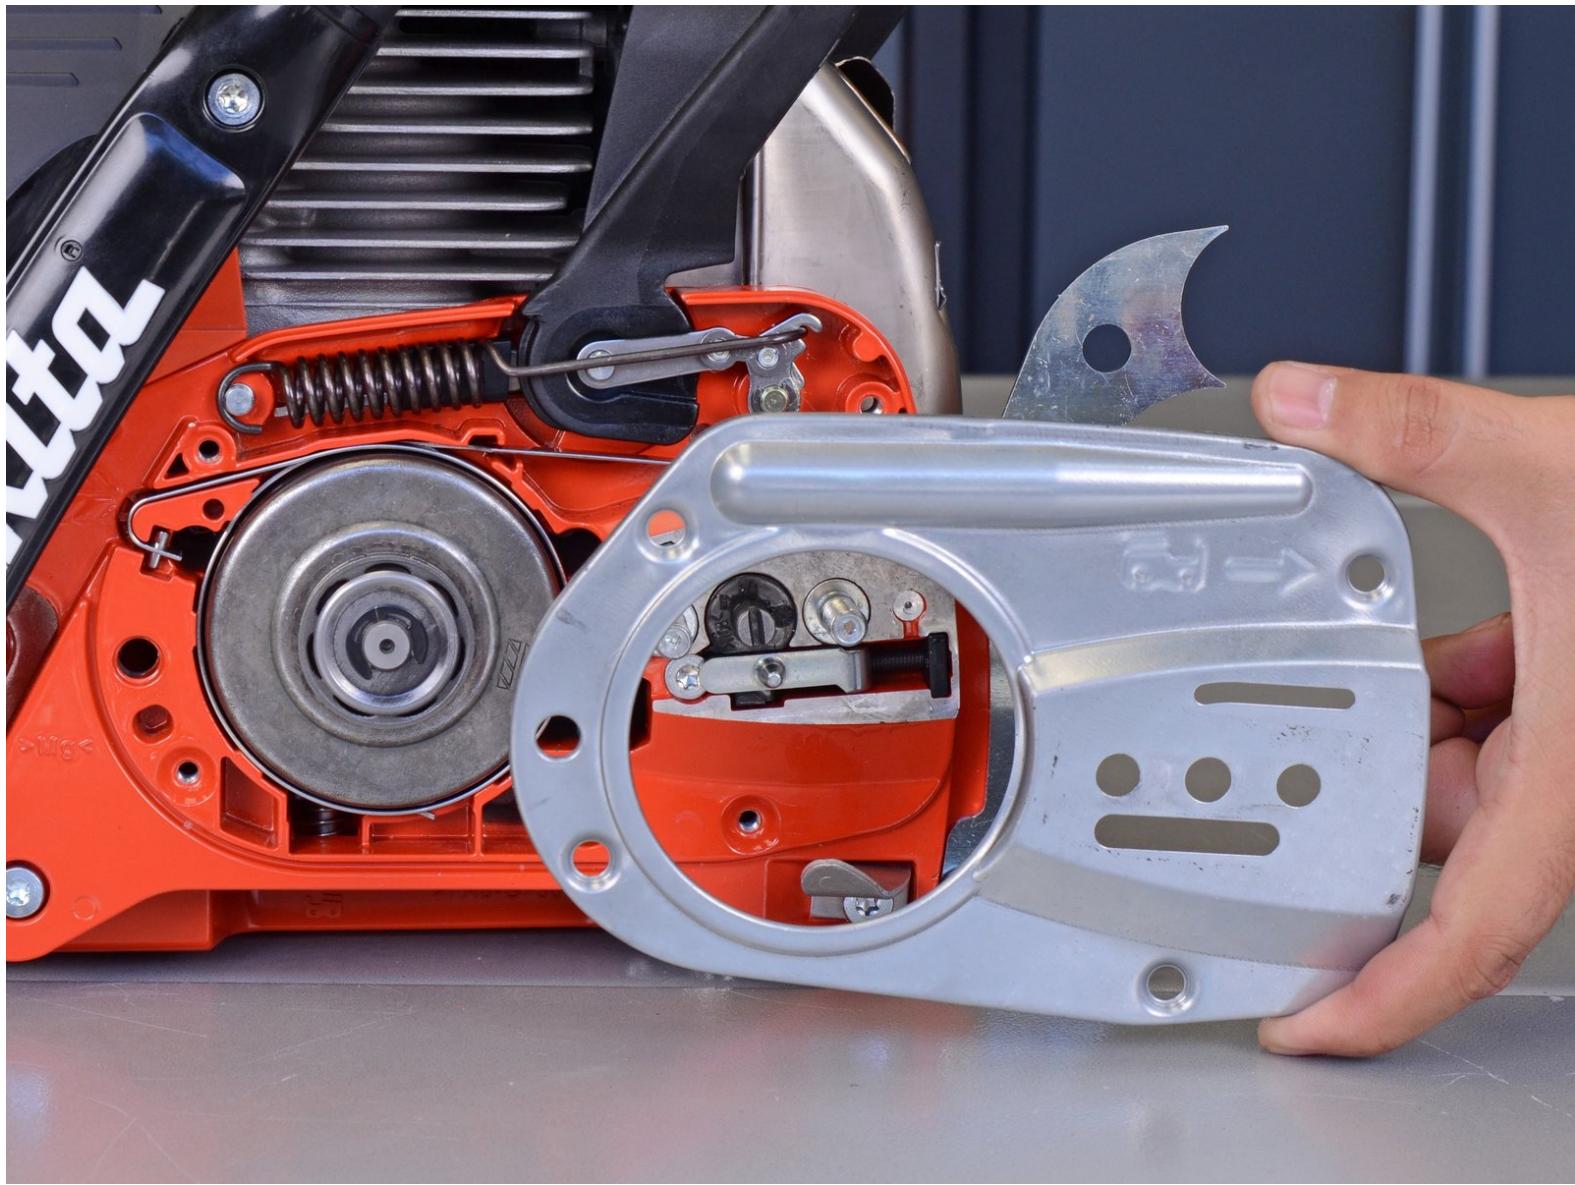

# Makita Chain Saw EA6100PR 2017 Chain Brake Cover Replacement

Remove the chain brake cover for a Makita chainsaw.

Written By: Arthur Shi



## INTRODUCTION

This guide shows how to remove the chain brake cover for a Makita chainsaw.

### TOOLS:

- 13mm Socket (1)  
1/2" OK, or chainsaw scrench
- T27 Torx Screwdriver (1)

### PARTS:

- Makita Chain Brake Cover 130-213-190 (1)

## Step 1 — Remove the sprocket guard plate



- Use a 13 mm socket to remove the two nuts securing the sprocket guard plate.

## Step 2



- Remove the sprocket guard plate.

## Step 3 — Remove the chain and guide bar



- If the chainsaw has a chain and guide bar installed, follow the manufacturer's instructions and remove them before proceeding.
- ☒ During reassembly, if you are reinstalling the chain and guide bar, follow the manufacturers instructions on proper chain tensioning techniques.

## Step 4 — Remove the chain brake cover



- Remove the four 12 mm long T27 screws securing the chain brake cover.

## Step 5



- Remove the chain brake cover.

To reassemble your device, follow these instructions in reverse order.