



Makita Chain Saw EA6100PR 2017 Chain and Guide Bar Replacement

Prerequisite guide only! Step for removing chain and guide bar for a Makita chainsaw.

Written By: Arthur Shi



INTRODUCTION

This is a prerequisite guide! This guide is part of an another procedure and is not meant to be used alone.

Step 1 — Remove the chain and guide bar



- If the chainsaw has a chain and guide bar installed, follow the manufacturer's instructions and remove them before proceeding.
- ☑ During reassembly, if you are reinstalling the chain and guide bar, follow the manufacturers instructions on proper chain tensioning techniques.

To reassemble your device, follow these instructions in reverse order.