



Makita GA4030K Back Cover Removal

Prerequisite Only

Written By: Dustin Platt



 **TOOLS:**

- Phillips #2 Screwdriver (1)

Step 1 — Back Cover



- Unscrew the 20 mm tapping screw using a Philips #02 screwdriver.

Step 2



- Slide the back cover down the power cable.

To reassemble your device, follow these instructions in reverse order.