



Makita GA4030K Disk Cover Removal

Prerequisite Only

Written By: Nyssa Backes



 **TOOLS:**

- Phillips #2 Screwdriver (1)

Step 1 — Disk Cover



- Check for the provided lock nut wrench. This is used for loosening the piece that keeps the disk and cover attached.

Step 2



- Unscrew the handle unit until it is removed completely.

Step 3



- Hold the black switch located on the front casing.
- Still holding the switch, use the lock nut wrench to loosen the silver disk holding everything in place.
- Once loose, remove the silver disk and/or your grinding disk.

Step 4



- Use a Phillips #02 screwdriver to remove the 15 mm pan head screw that holds the cover in place.
- Remove the cover by lining up the knob on the cover with the notch in face plate.

To reassemble your device, follow these instructions in reverse order.