



Makita Jack Hammer HM1307CB Controller Cover Removal

This is a prerequisite guide detailing the removal of the controller cover of a Makita HM1307CB jack hammer.

Written By: Taylor Dixon



This document was generated on 2020-01-20 09:14:48 PM (MST).


INTRODUCTION

This guide is a prerequisite and is not meant to be used on its own! These steps illustrate the removal of the controller cover in a Makita HM1307CB jack hammer.

TOOLS:

- **Phillips #2 Screwdriver** (1)
- **5 mm Hex Key** (1)

Step 1 — Remove two hex screws

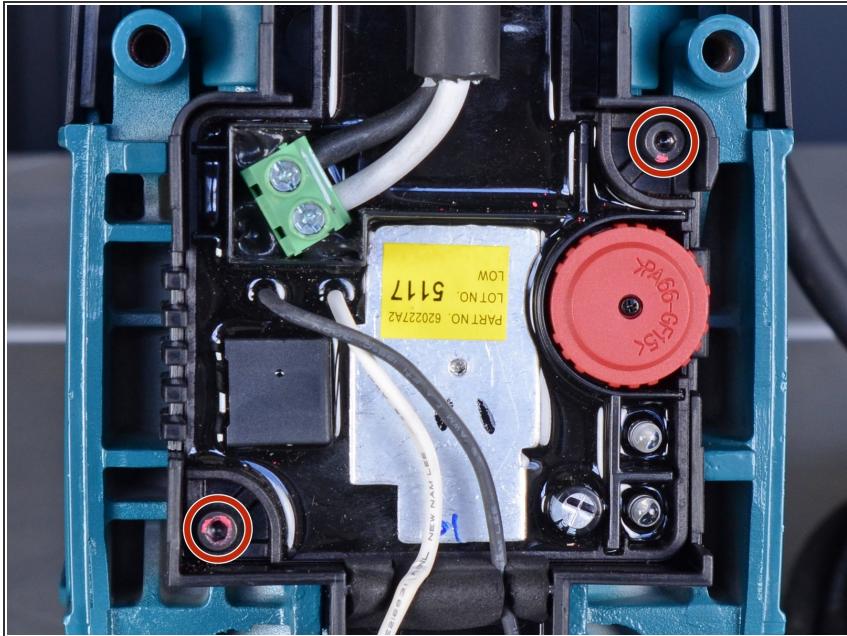

- Remove the two hex screws holding the controller cover in place.

- ☒ During reassembly, clean the residual threadlocker from these screws, then reapply high-strength (red) threadlocker to each one before reinstalling.

Step 2 — Remove the controller cover



- Remove the controller cover and the attached power supply cord from the jack hammer.

To reassemble your device, follow these instructions in reverse order.