



# Makita XPH01 Outer Casing Replacement

This prerequisite-only guide will show you how to replace the outer casing of the Makita XPH01.

Written By: Eric Herwatt



## INTRODUCTION

The outer casing of the drill needs to be taken out in order to replace the other parts of the drill. There are a total of nine 18 mm screws that needs to be taken out of the outer casing. This guide serves as a prerequisite guide for the other replacement guides.

### TOOLS:

- Phillips #2 Screwdriver (1)

## Step 1 — Battery



- Hold the drill upright.
- Place your finger on the white battery-release button.

## Step 2



- Press and hold the white release button located on the front of the battery.

## Step 3



- Slide the battery forward while pressing down on the white battery-release button.

## Step 4 — Outer Casing



- Hold the drill upright with the back panel facing you.
- Unscrew the two 18 mm screws from the back panel using a Phillips PH2 screwdriver.

## Step 5



- Apply slight pressure to the sides of the backplate and pull away from the drill.

## Step 6



- Unscrew the nine 18 mm screws from the outer casing using a Phillips PH2 screwdriver.

## Step 7



- Apply slight pressure to the sides of the outer casing and pull away from the drill.

To reassemble your device, follow these instructions in reverse order.