



Marshall Kilburn Knob Replacement

How to replace the Marshall Kilburn knobs.

Written By: Jeff Feuss



INTRODUCTION

The volume, bass, and treble knobs are three of the most commonly used pieces of the Marshall Kilburn. Due to this, the knobs get sticky and dirty. You can follow this guide to remove and clean your dirty knobs. Follow the steps on this guide to tighten a loose knob or replace a damaged knob

TOOLS:

- [iFixit Opening Tools](#) (1)

Step 1 — Knob



- Using an iFixit opening tool, gently loosen and remove the volume knob.

Step 2



- Unscrew the bolt using your fingers.
- Repeat steps 1 and 2 for both the treble and bass knobs.

To reassemble your device, follow these instructions in reverse order.