



Matchbox Dino Trapper Trailer Batteries Replacement

How to replace the batteries in the Matchbox Dino Trapper Trailer.

Written By: Vincent Crabtree



INTRODUCTION

A battery replacement will be inevitable with any toy, and this T-Rex is no exception. For this repair, you need 3 cell batteries (and maybe tweezers to help remove them), as well as a JIS #1 screwdriver.

TOOLS:

- [Tweezers](#) (1)
- [JIS #1](#) (1)

Step 1 — Batteries



- Turn the dinosaur with the belly facing up, and unscrew the 9.6 mm JIS #1 screw.

Step 2



- Remove the plastic cover from on top of the battery compartment.

Step 3



- Using the tweezers if necessary, remove the cell batteries from the dinosaur.

To reassemble your device, follow these instructions in reverse order, using new cell batteries.