



Maze Speed SSB-508 Power and Volume Button Replacement

If the power or volume buttons are not responding to input, or feel stuck, it can be solved by replacing the plastic buttons on your Maze Speed SSB-508.

Written By: Taeyoung Lee



This document was generated on 2019-09-18 06:50:49 PM (MST).


INTRODUCTION

This guide will show you how to replace the power and volume buttons in a Maze Speed SSB-508 phone. If the power or volume buttons are unresponsive or malfunctioning, they may need to be replaced. To complete this guide, a plastic opening tool, tweezers, and a new button piece is required. Precision is recommended, as to not damage any components.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Power and Volume Buttons

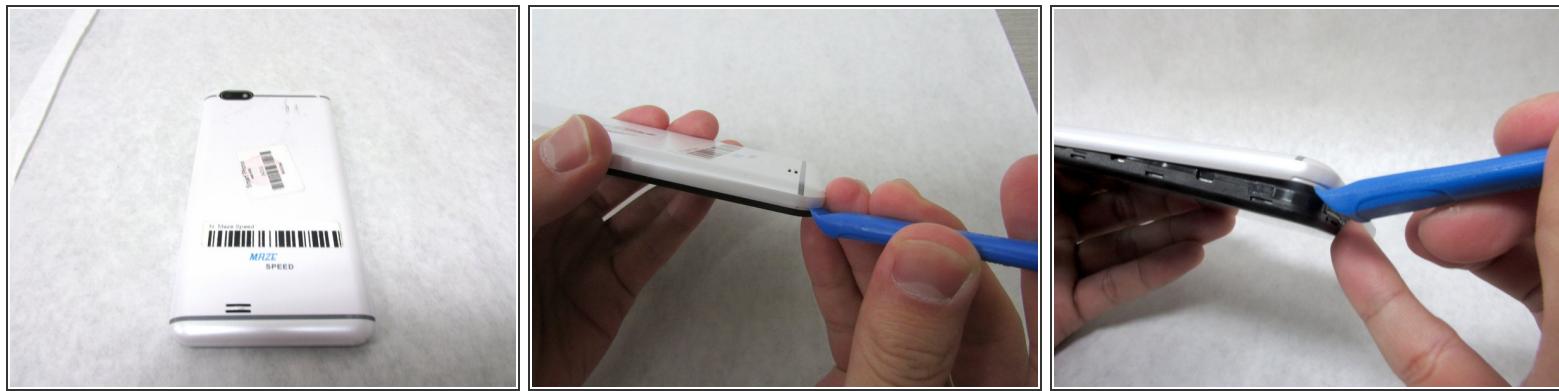

- Remove the back cover by gently prying open the bottom left corner of the case with the plastic opening tool.

Step 2



- There are three areas holding the power and volume buttons in place. Gently pull the bottom of the power button with a pair of fine-tip tweezers to release the lower half.

Step 3



- Carefully remove the top section of the button with the fine-tip tweezers . This should free the button completely.

To reassemble your device, follow these instructions in reverse order.