




Memorex CD Alarm Clock Radio CD Lid Spring Replacement

This guide will show you how to replace the CD lid Spring on the Memorex CD Alarm Clock Radio.

Written By: Aubrey Frank

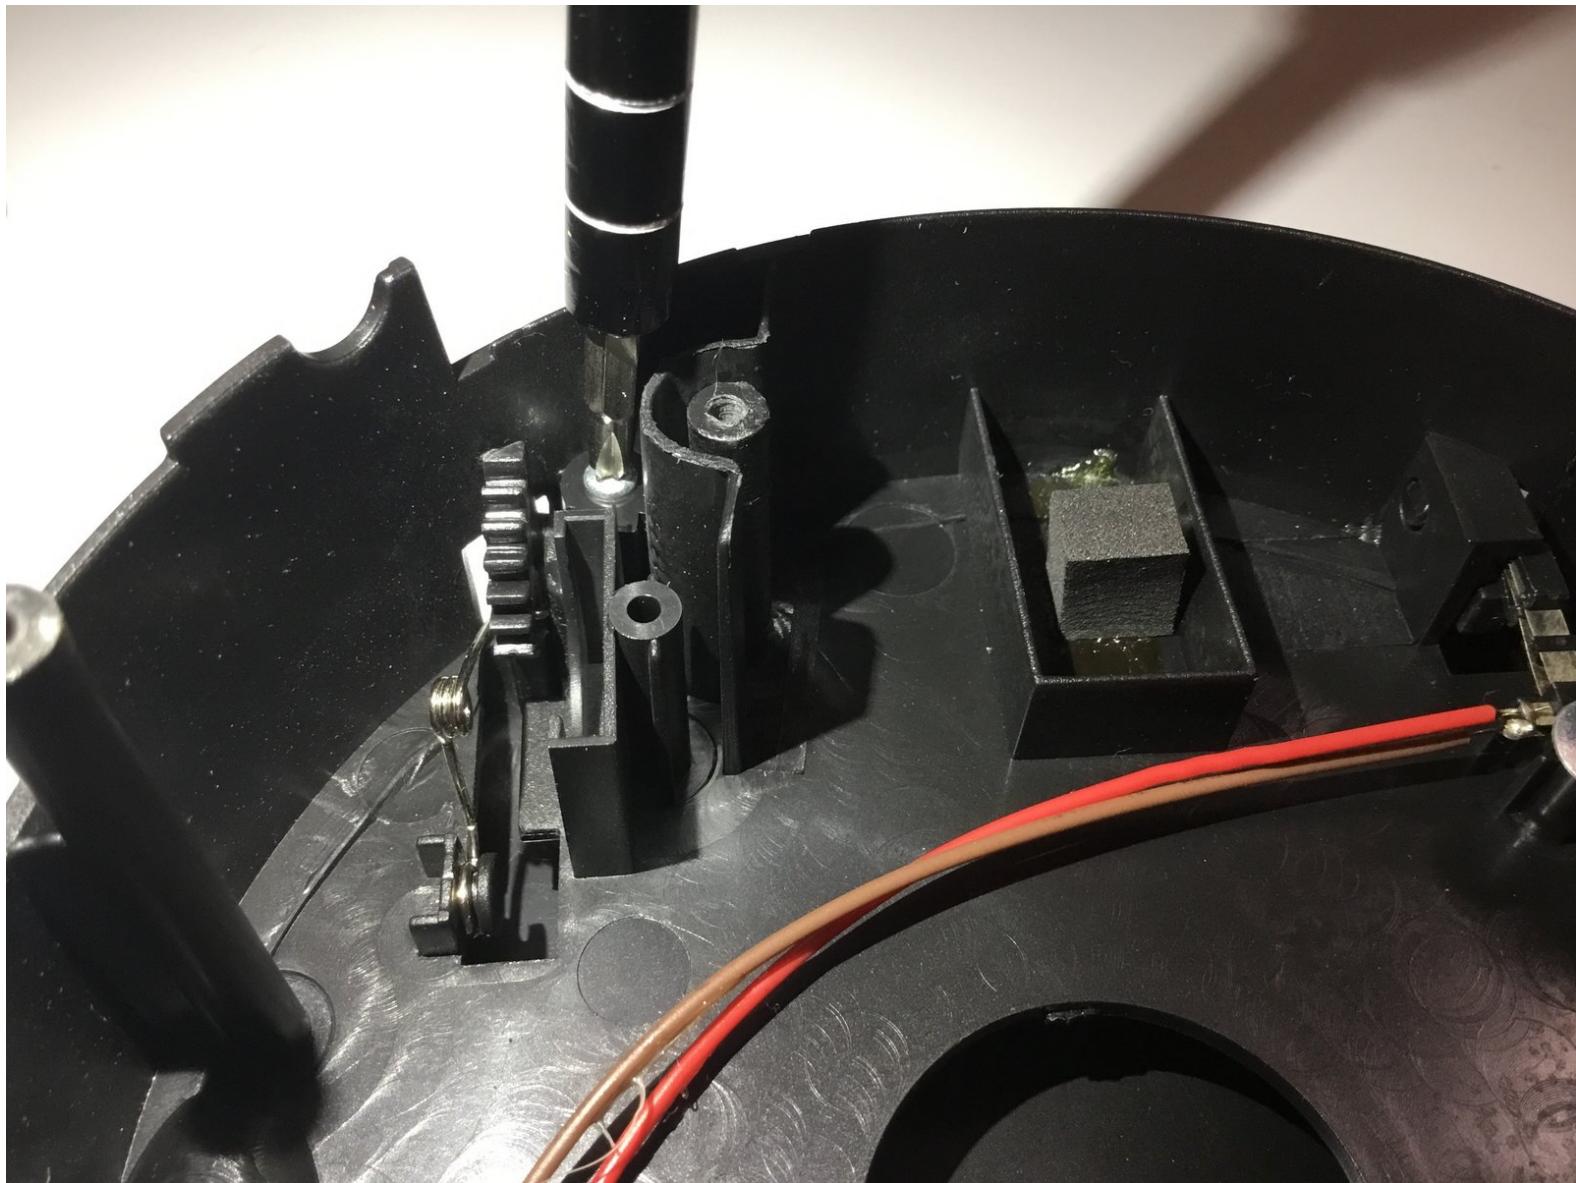

INTRODUCTION

These steps will instruct you on removing a broken spring and replace it with a new one.

TOOLS:

- Phillips #0 Screwdriver (1)
- Tweezers (1)
- Flathead 3/32" or 2.5 mm Screwdriver (1)

PARTS:

- Memorex CD Alarm Clock Radio Lid Spring (1)

Step 1 — Memorex CD Alarm Clock Radio Disassembly




- Locate the 'OPEN' tab on the battery compartment.
- Pull the tab upwards and remove the cover using your finger.
- Remove the batteries.

Step 2






- Locate the screws on the bottom of the device that hold the upper and lower halves together.
- Remove the (5) 19mm screws.
- Grasp the top and bottom and gently pull apart.

Step 3 — CD Lid Spring

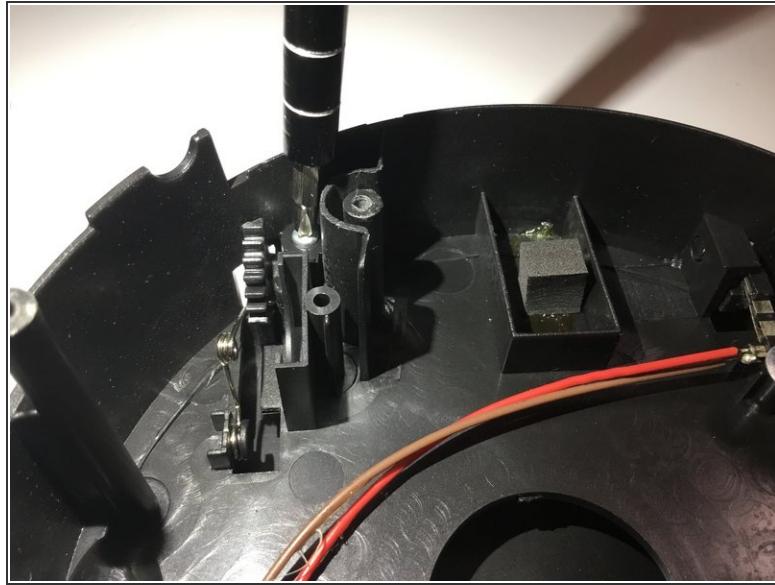



- Remove screw with plastic retaining plastic piece.

Step 4

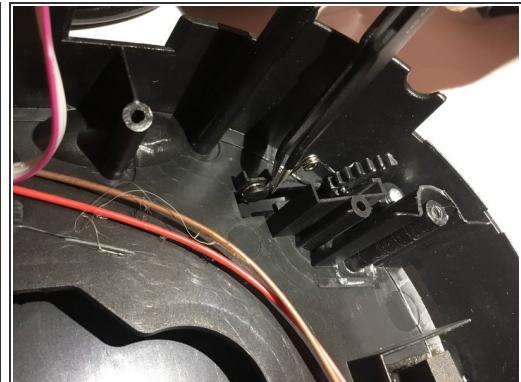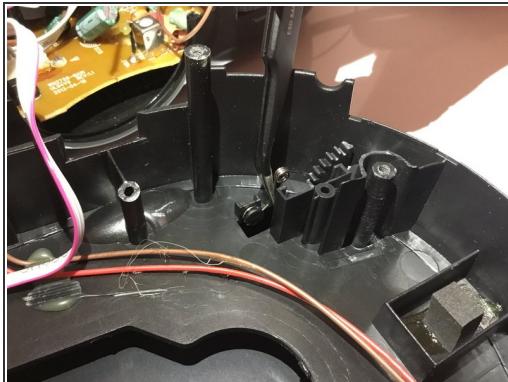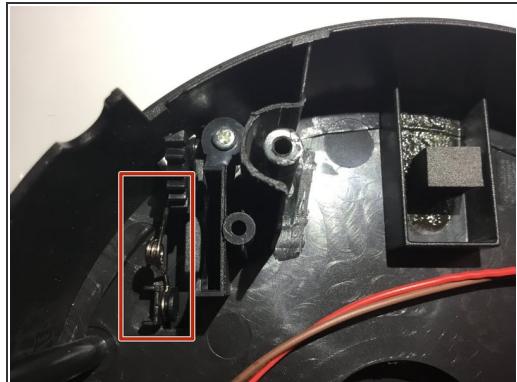

- Grasp and remove the spring using fine tip tweezers.
- The spring is very small and can be lost easily.

Step 5

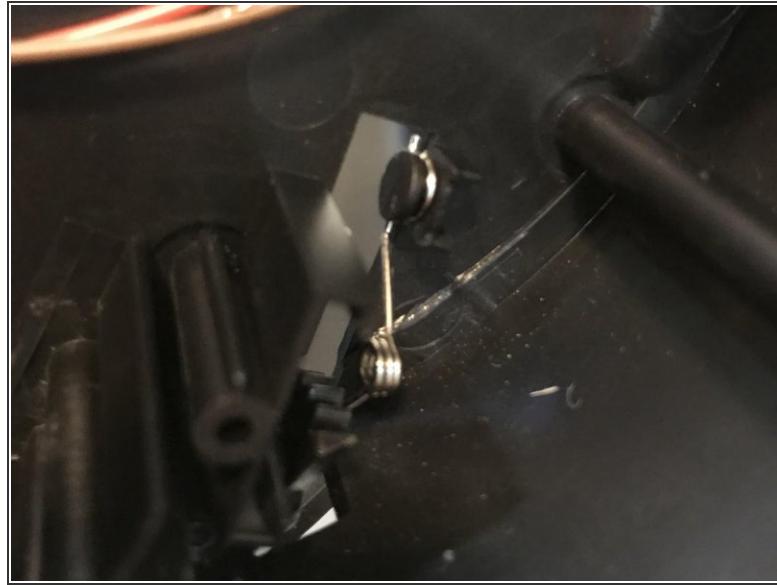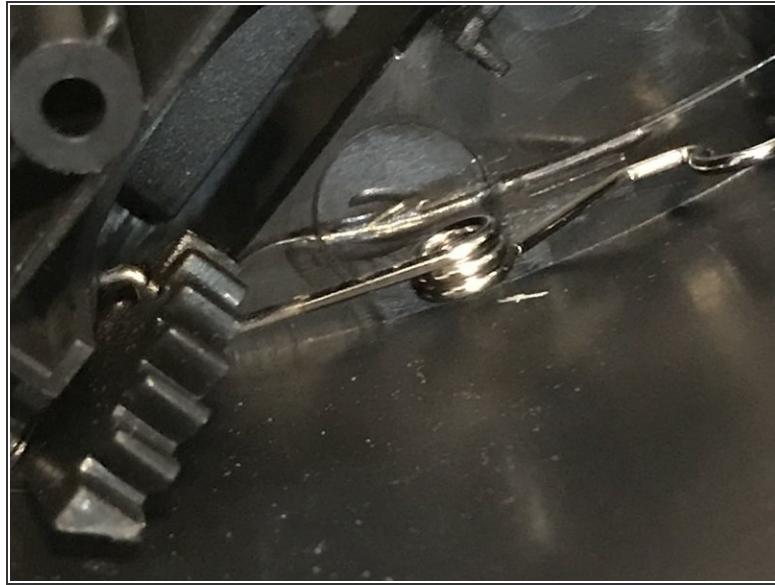

- Remove the spring with a flat tip screwdriver.

To reassemble your device, follow these instructions in reverse order.